

# **FORMA**

---

C05L0101.


## Installation Instruction



**CAMERICH**



M8X30mm




8X






$\Phi 8^*30\text{mm}$






2X




M5

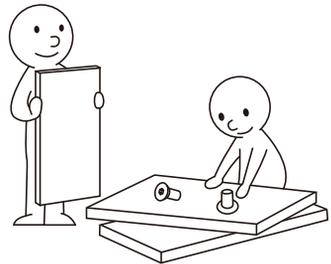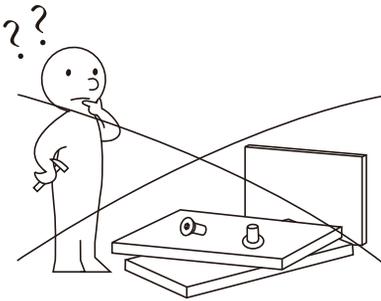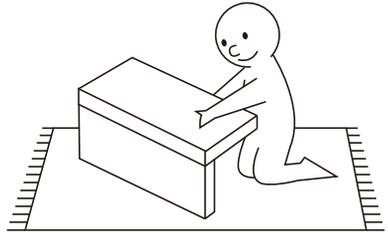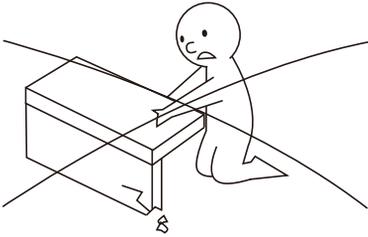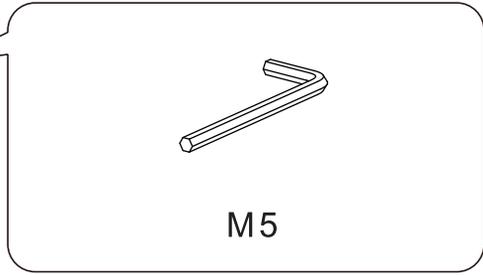


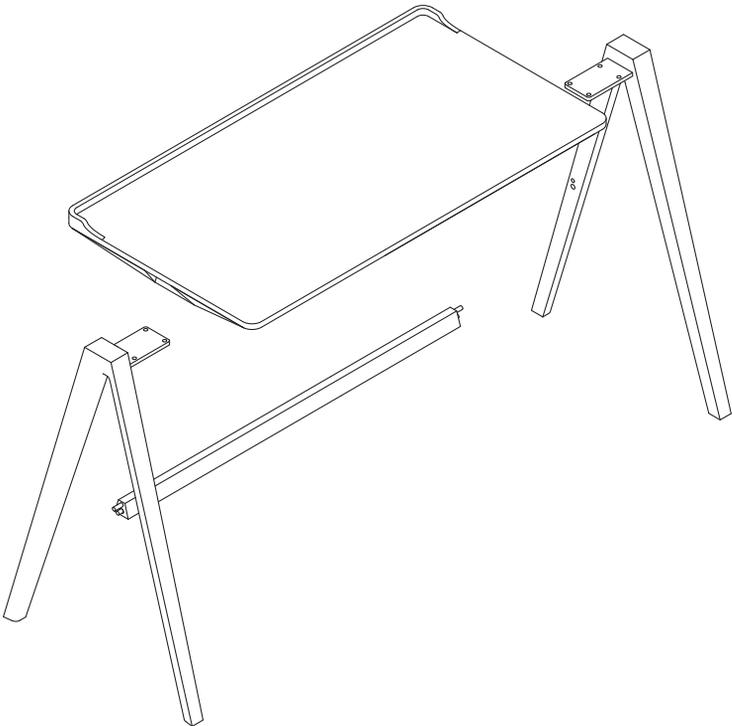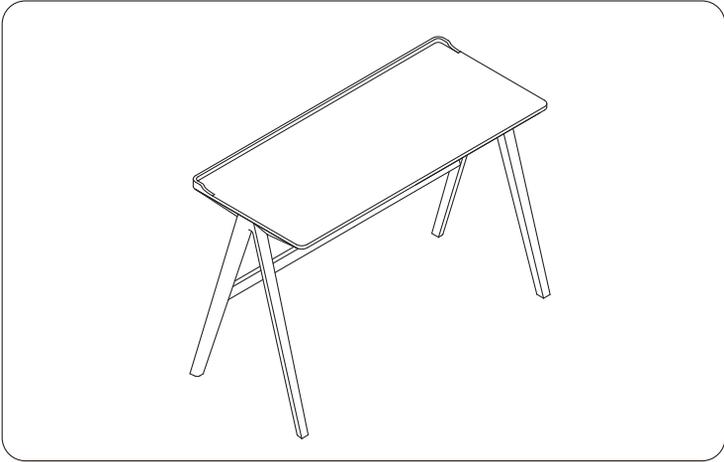

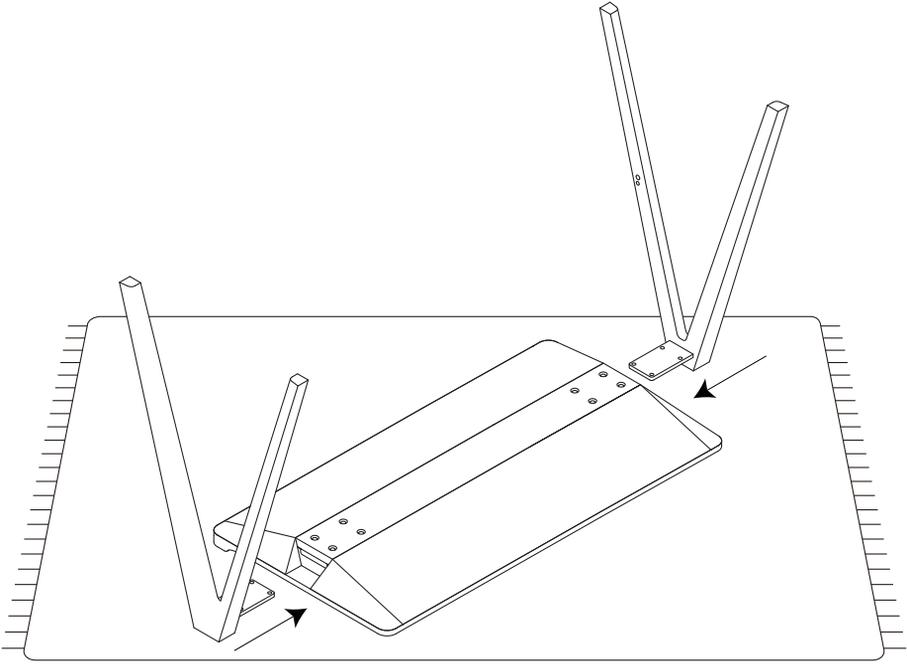


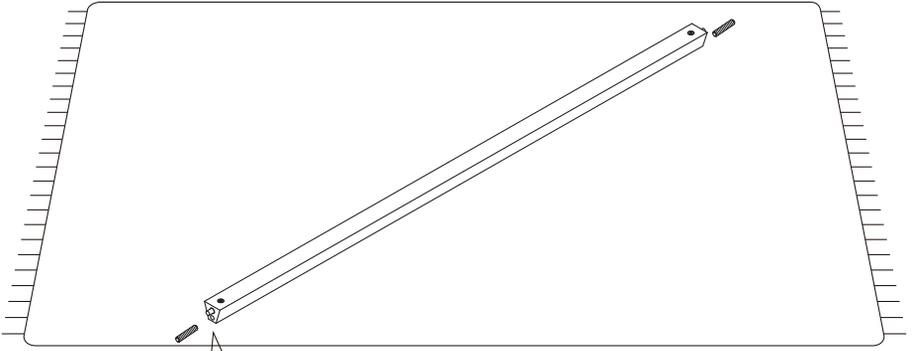


2X

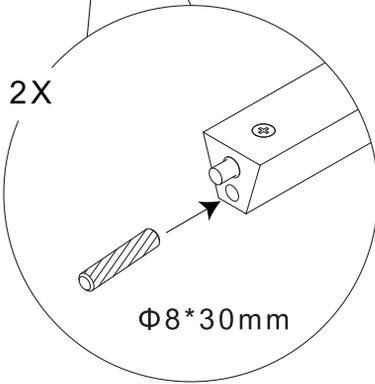

$\Phi 8 * 30\text{mm}$

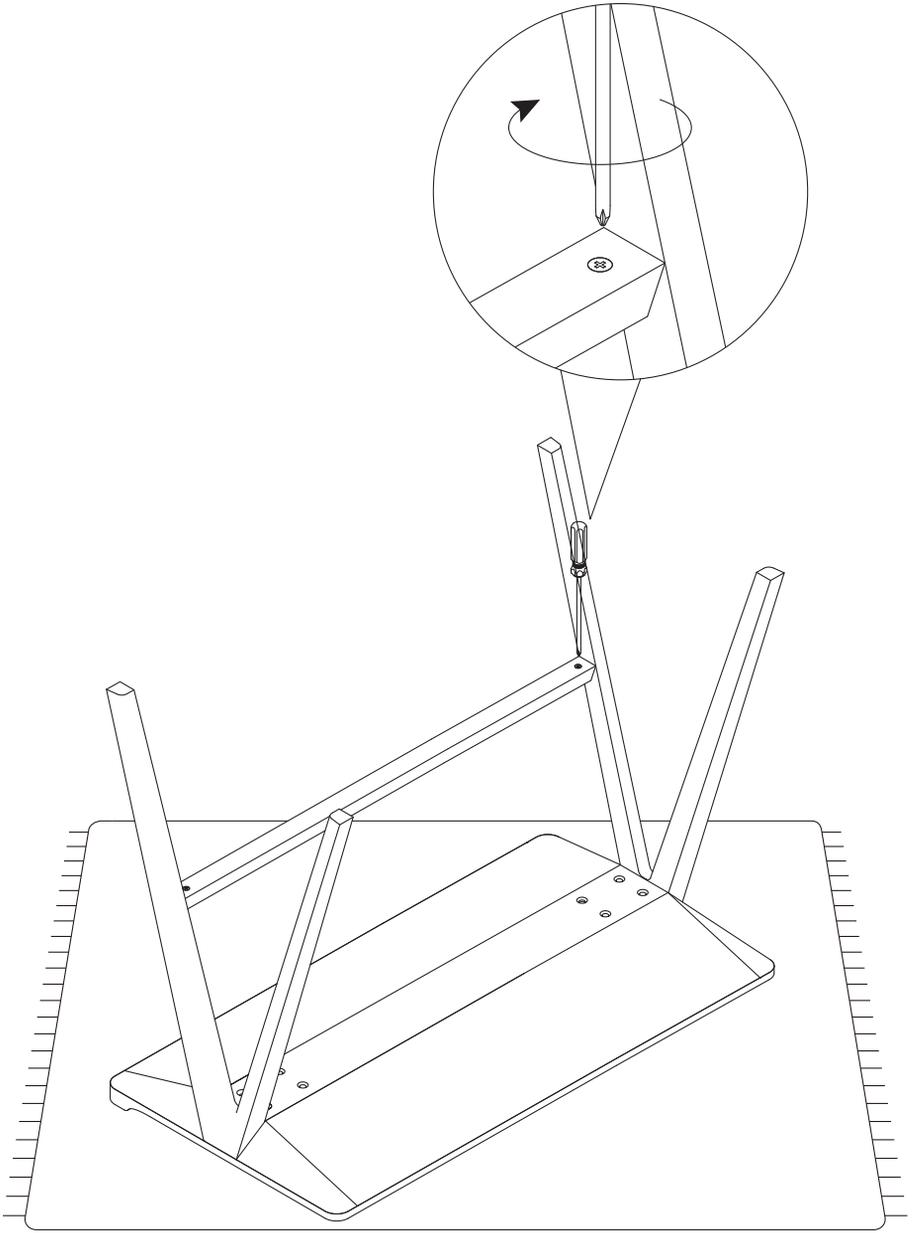

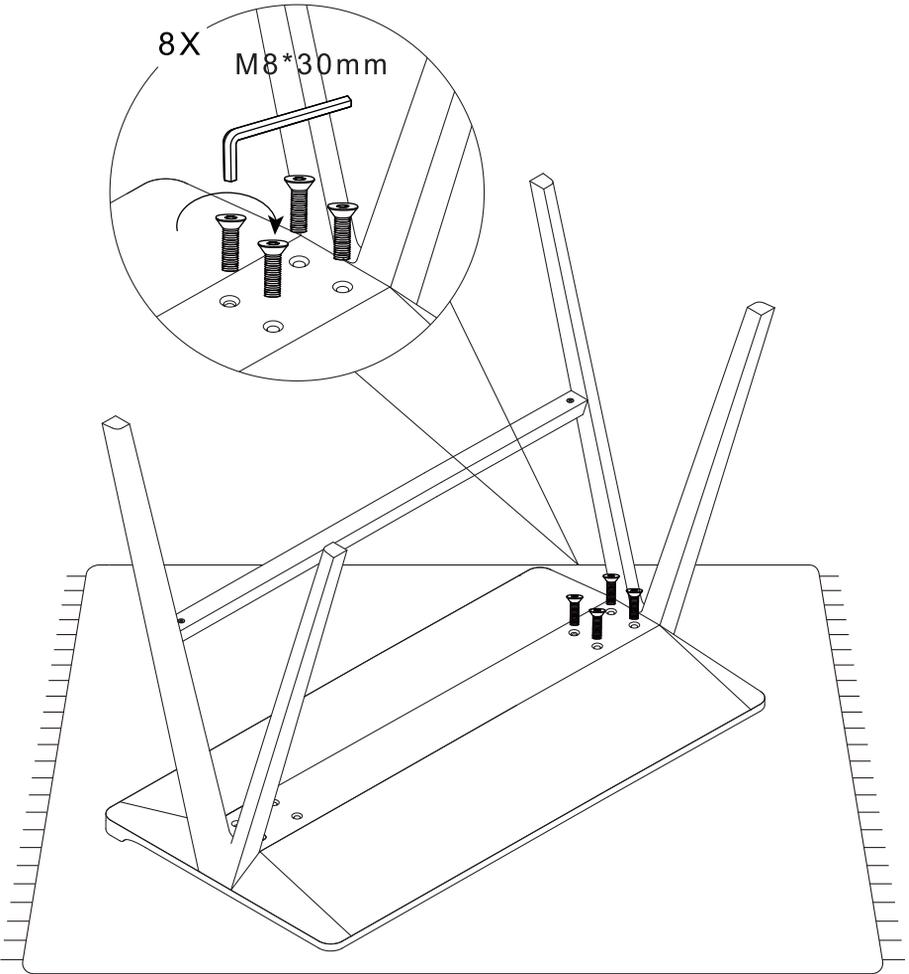







CAMERICHfurniture



camerich\_official

# **FORMA**

C05L0102.


## Installation Instruction



**CAMERICH**



M8X30mm




8X

Φ8\*30mm



2X

M8X60mm




4X


M6×30








2X






M4






M5

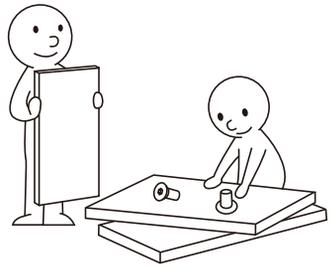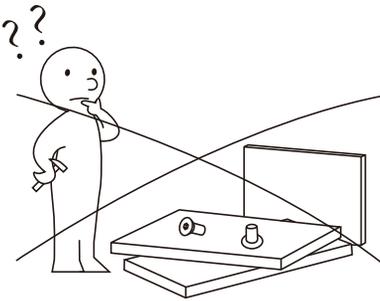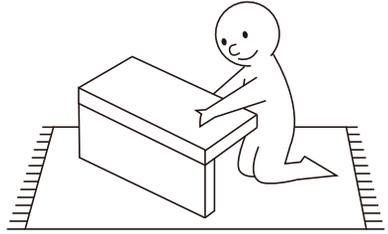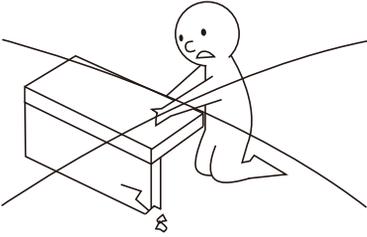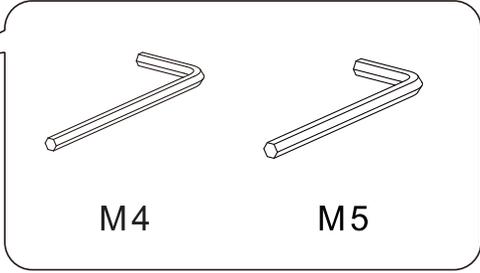


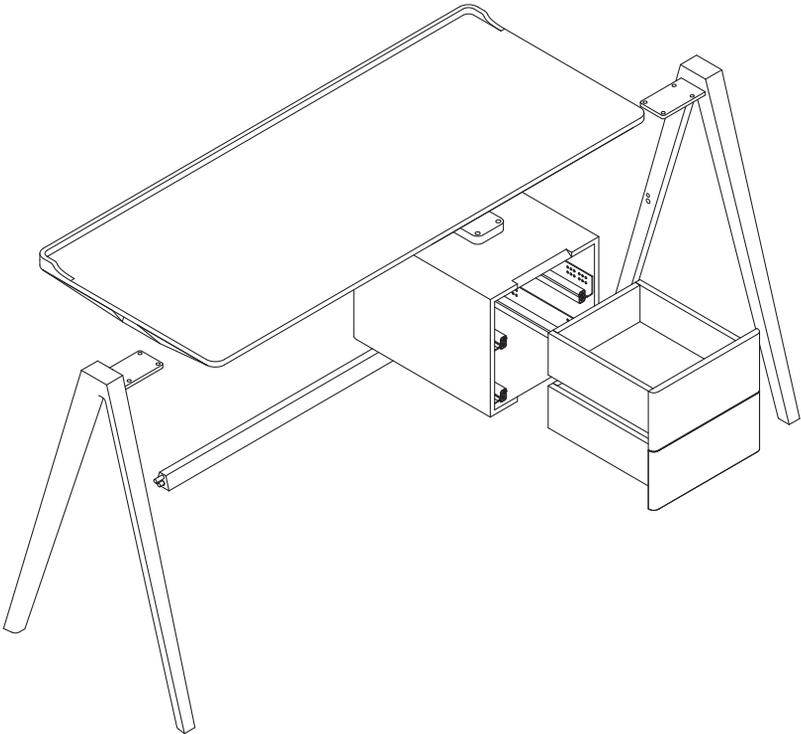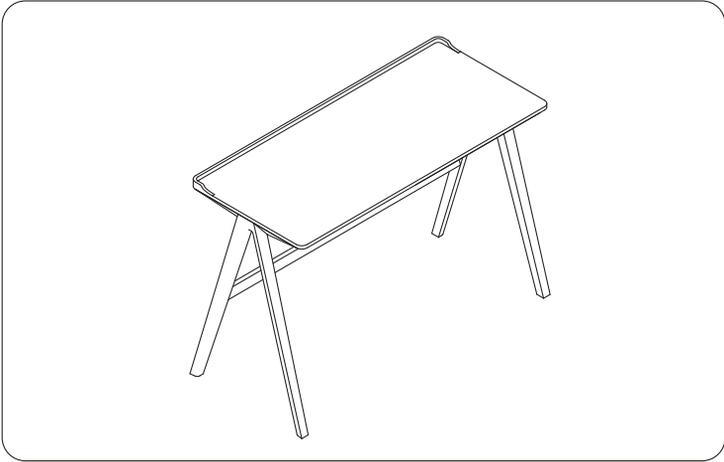


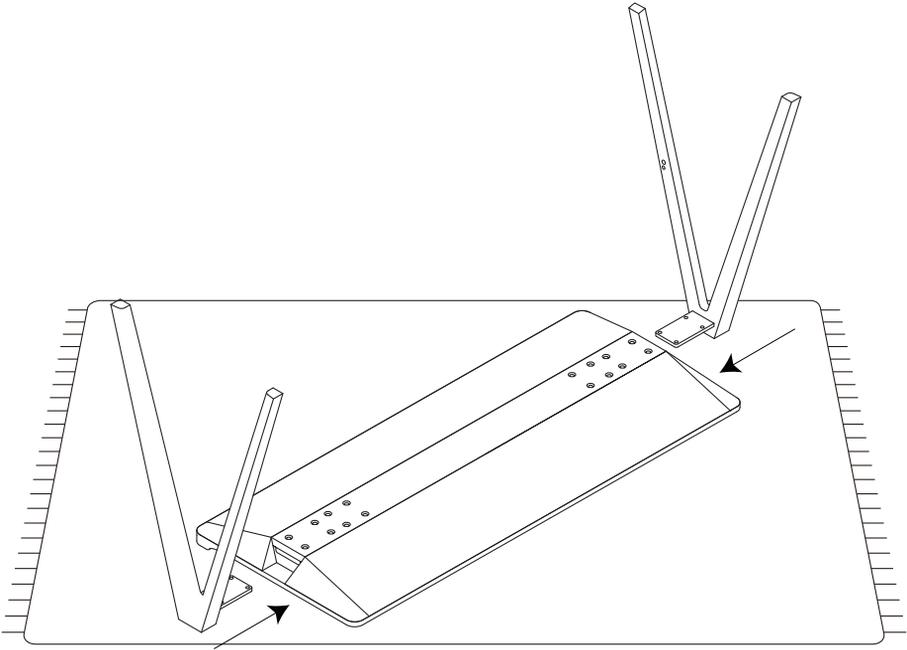


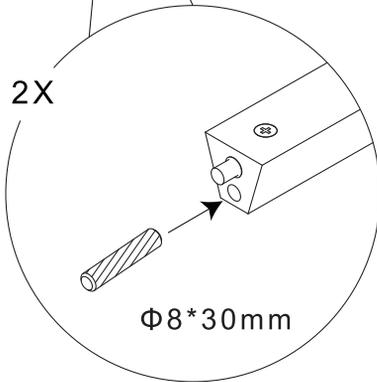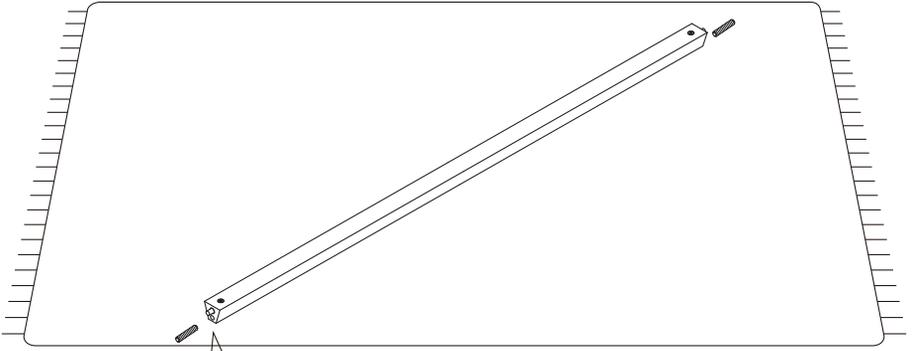

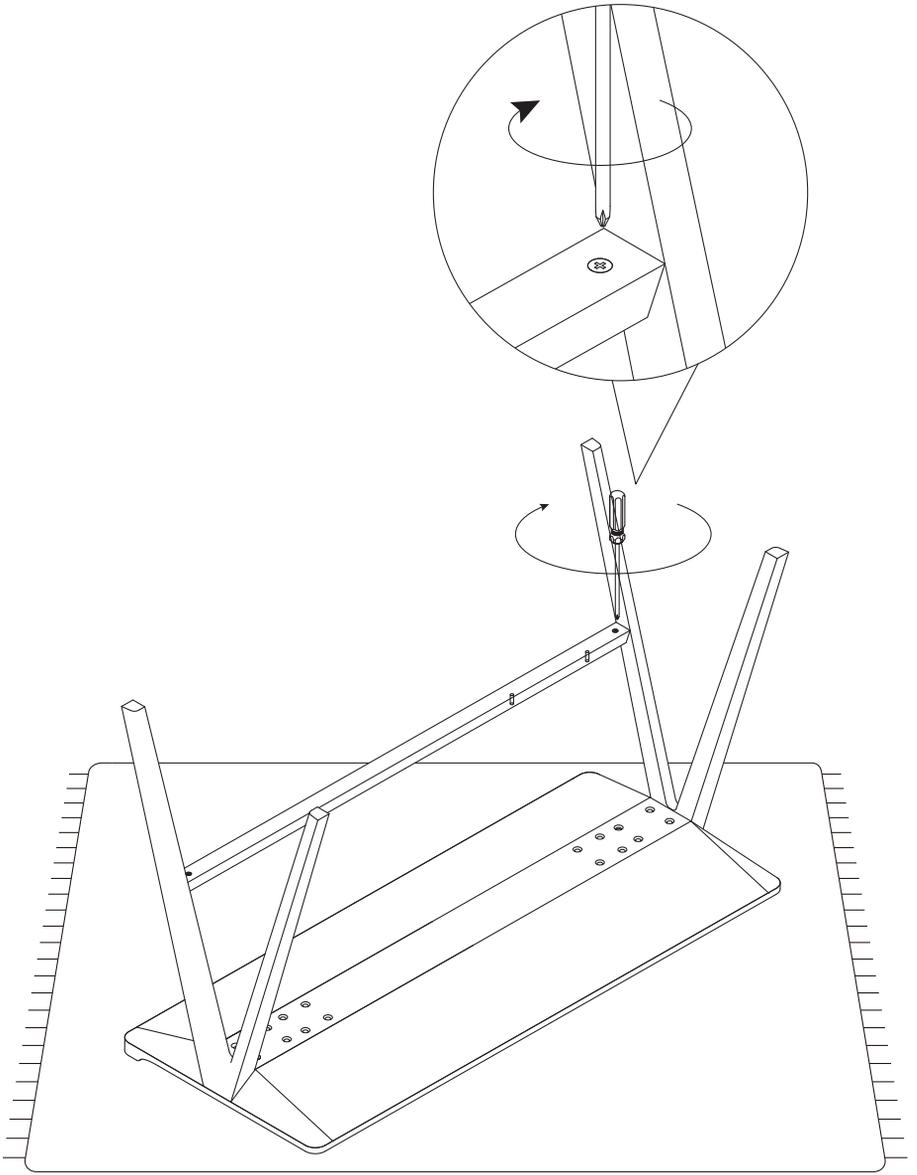

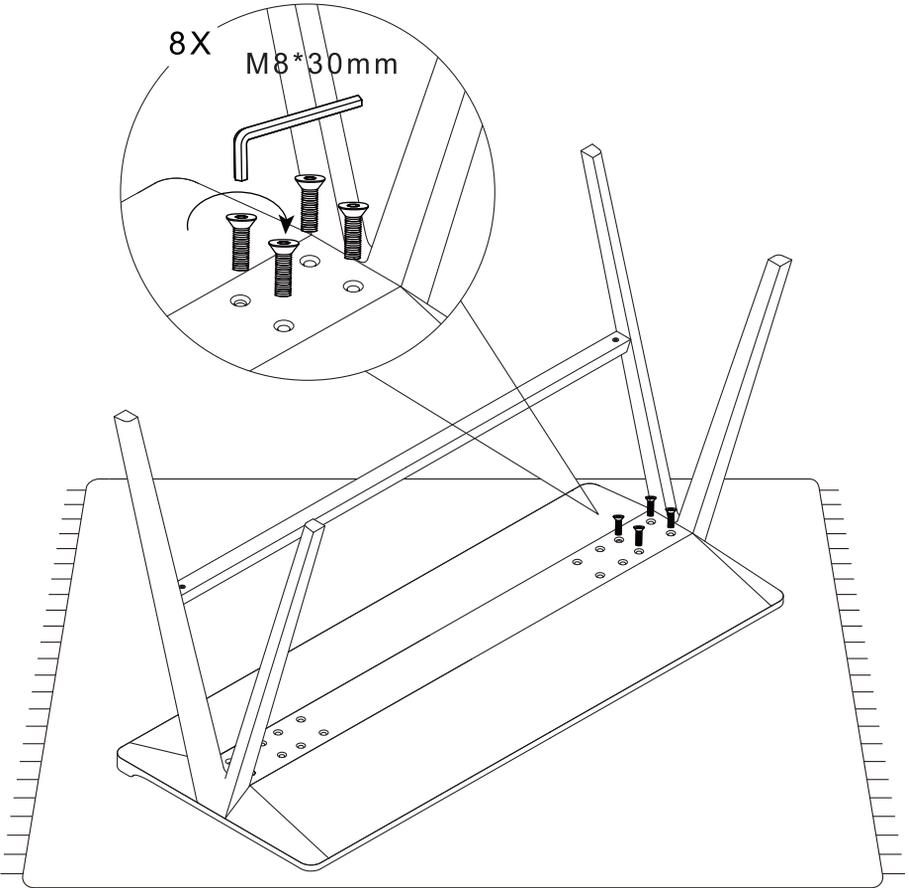

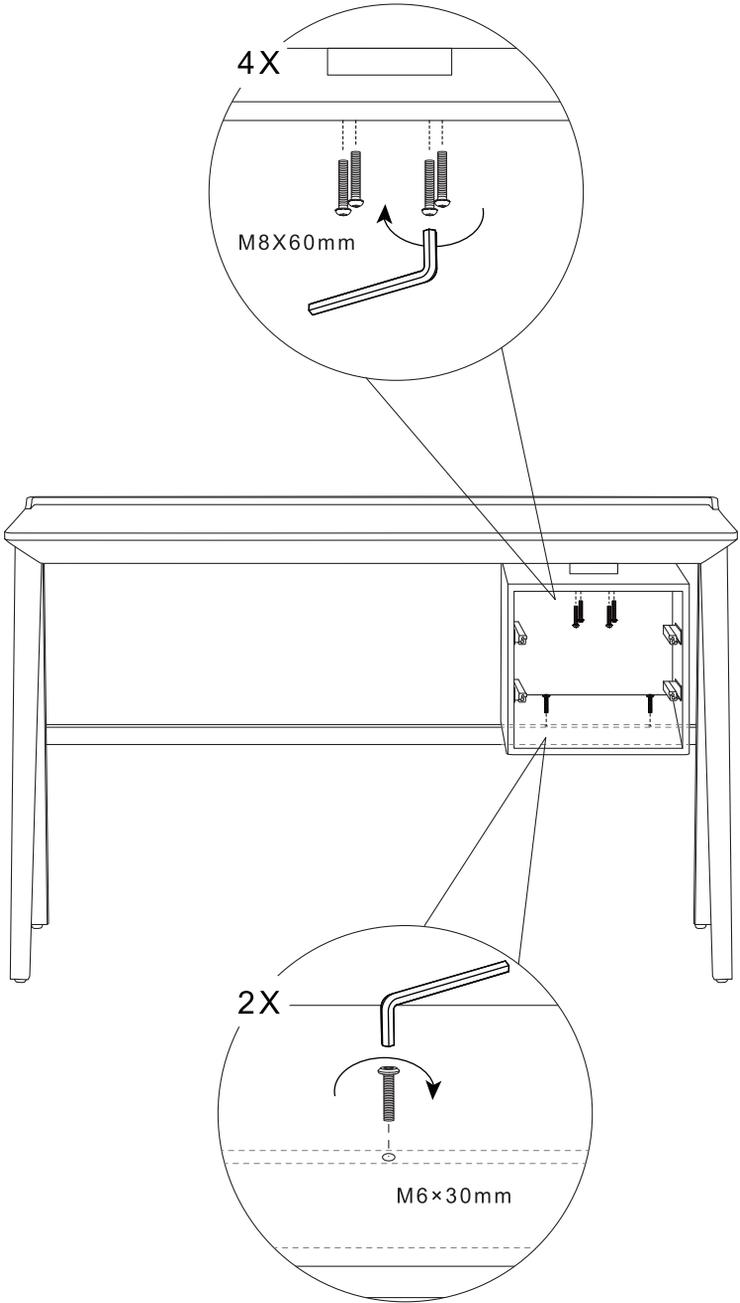

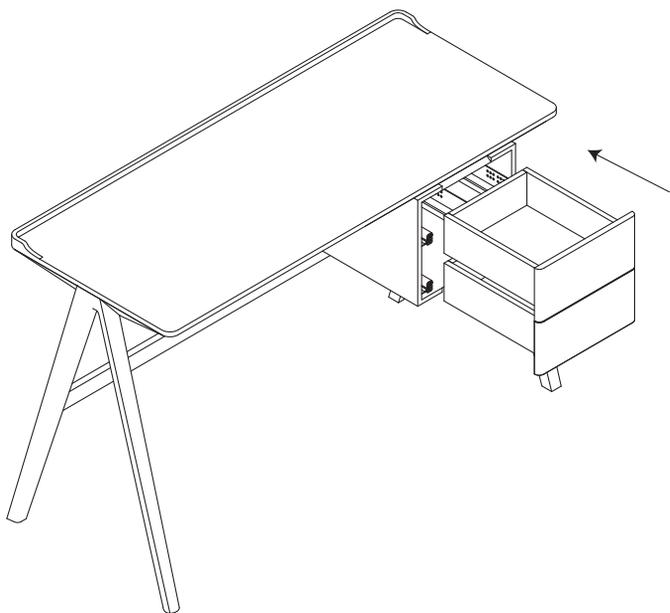



CAMERICHfurniture



camerich\_official