


AMOR BED

C03J0301. / C03J0302. / C03J0304. / C03J0305.

Installation Instruction

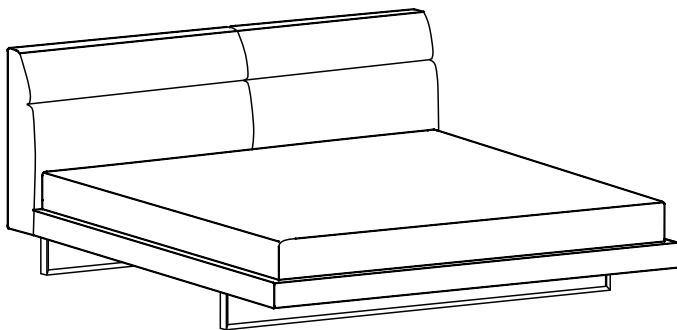

CAMERICH

M8X30mm



44X

M8X20mm




2X






D35X125mm







3X

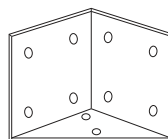





4X

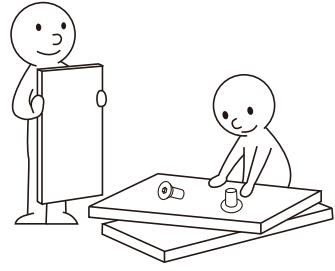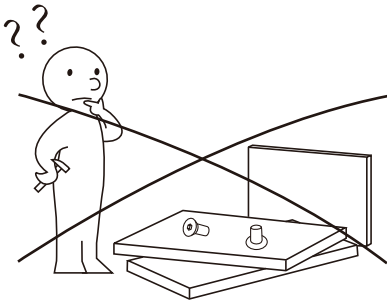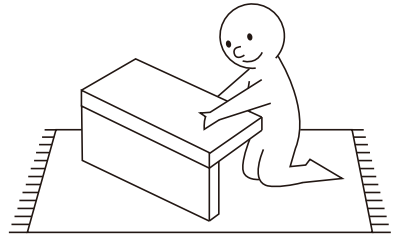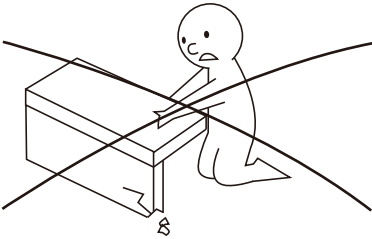
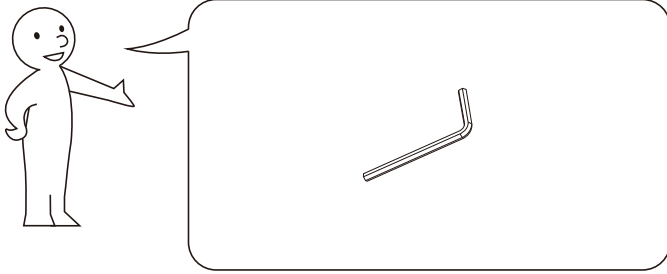


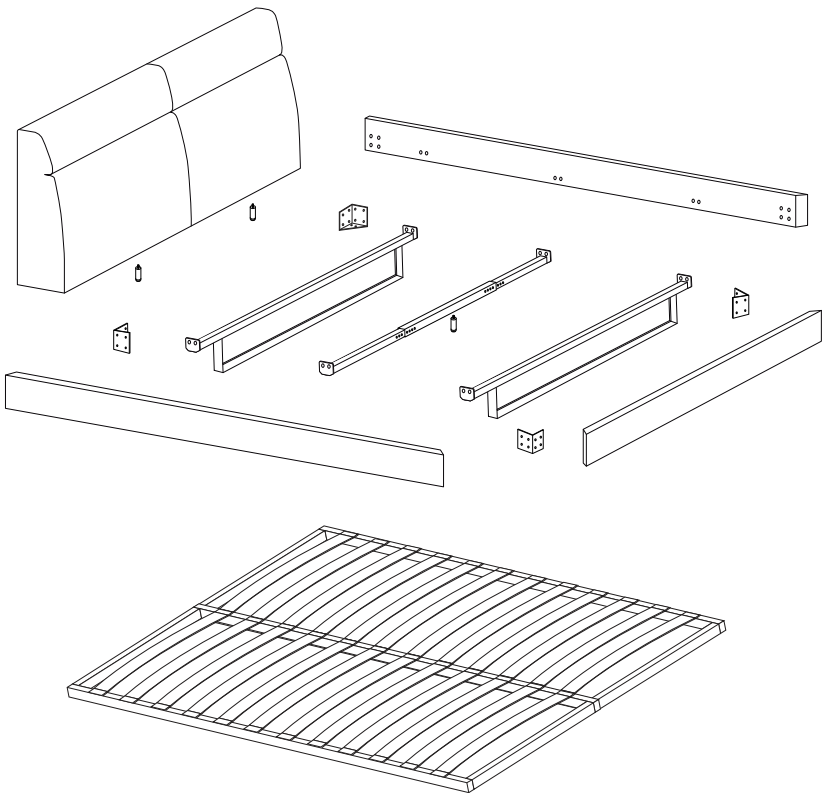
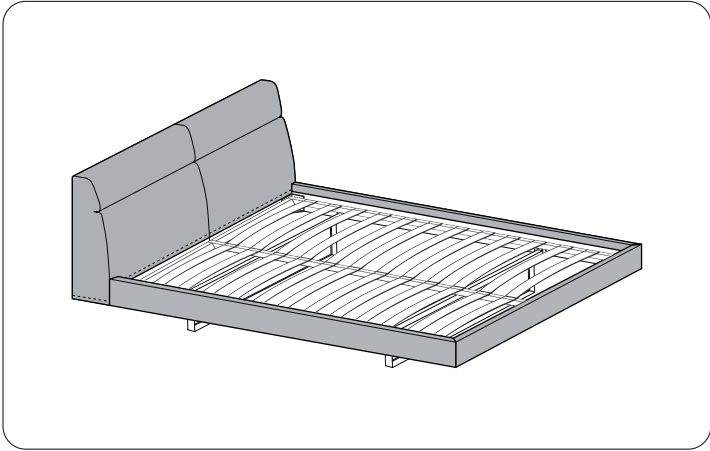


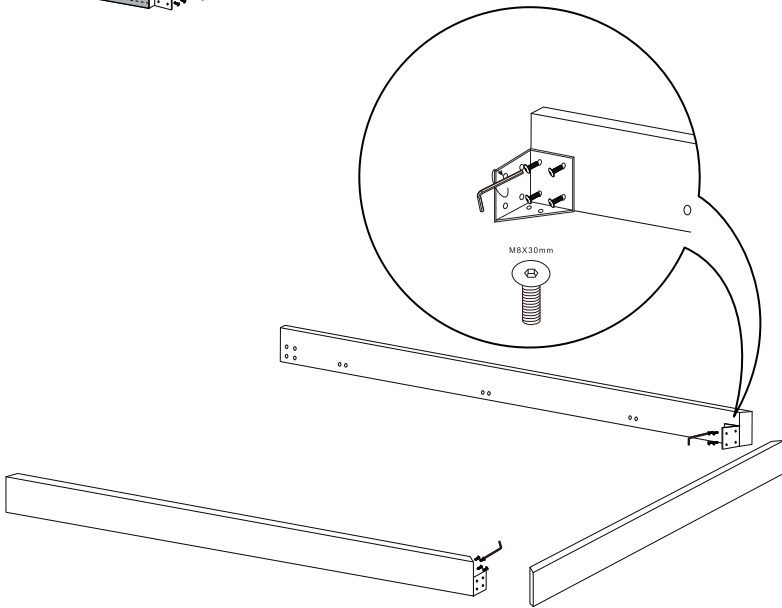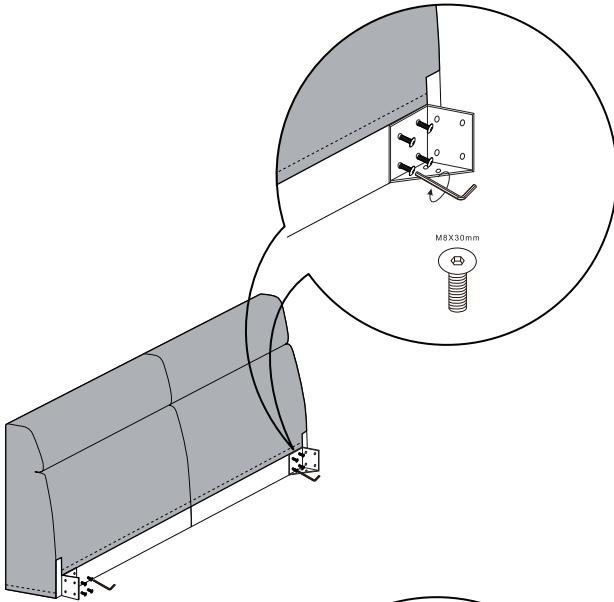



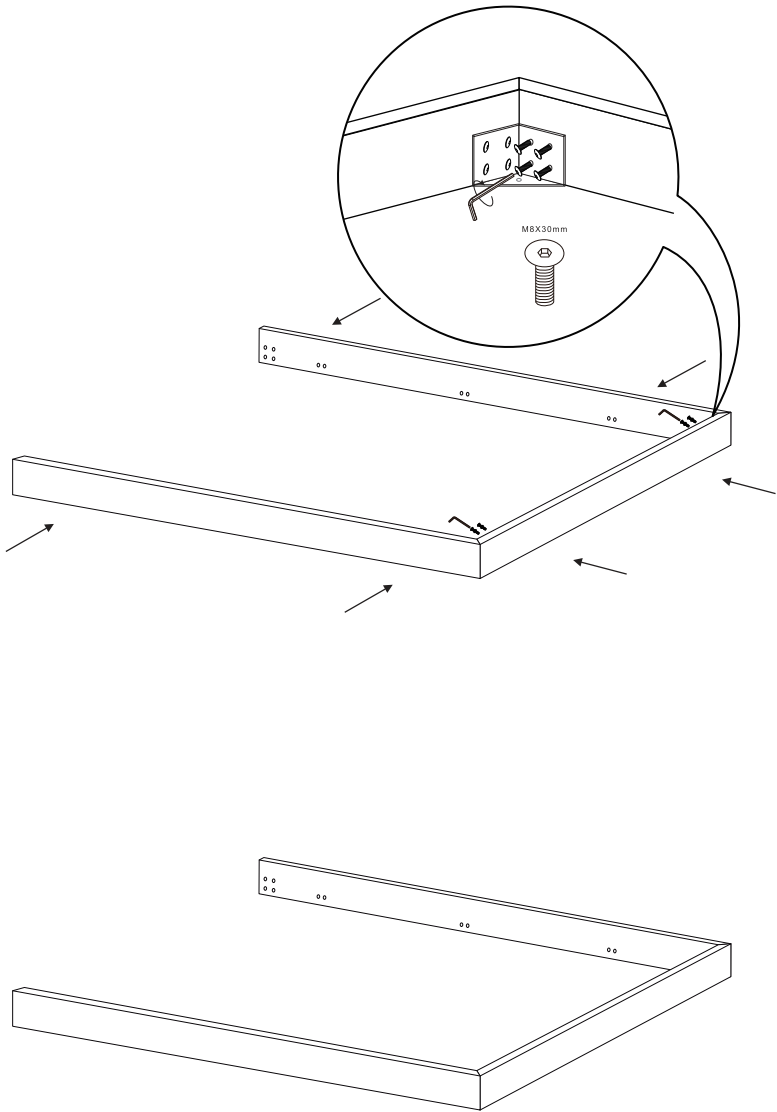


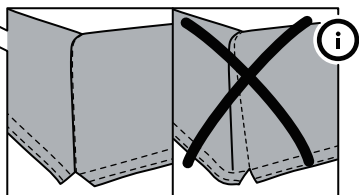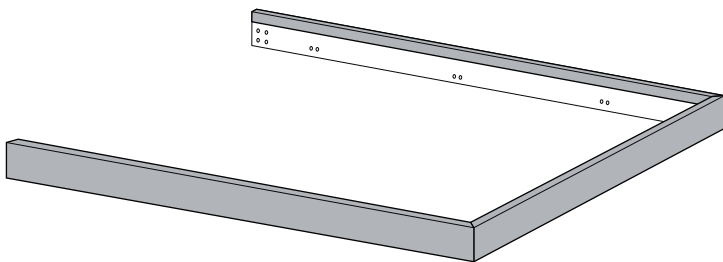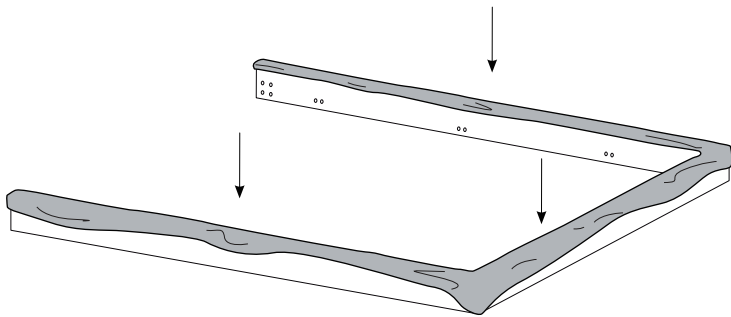

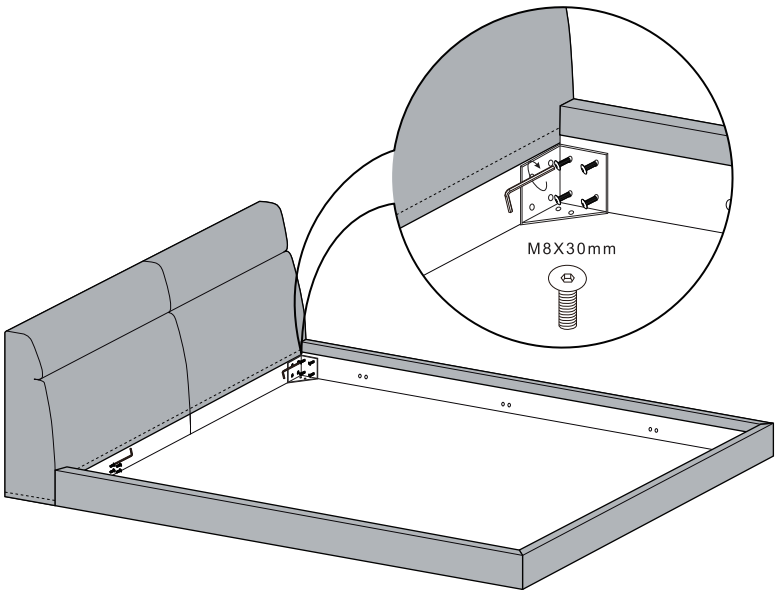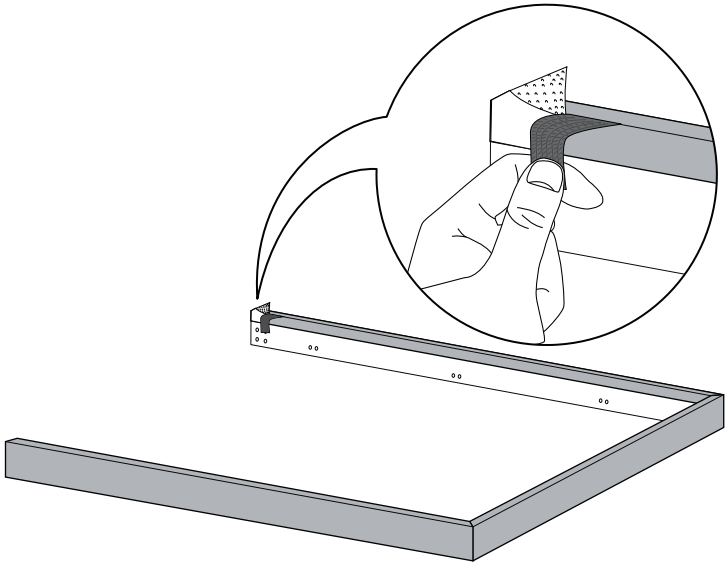

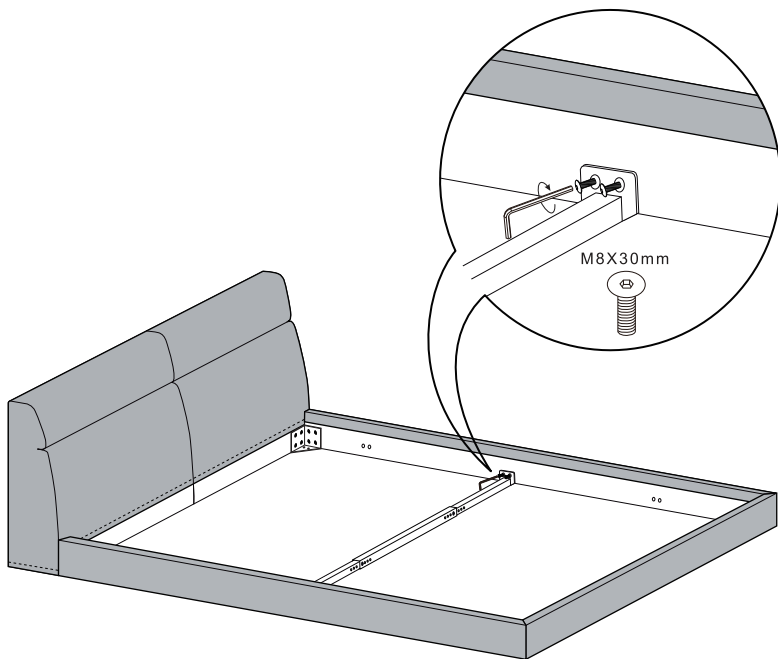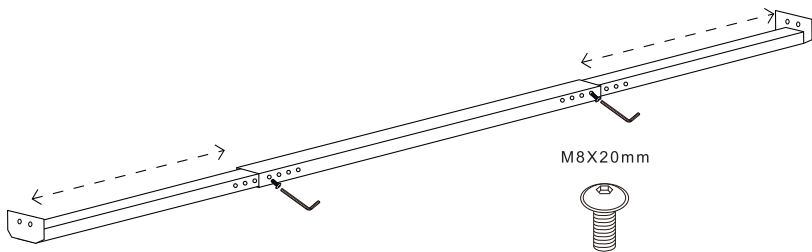

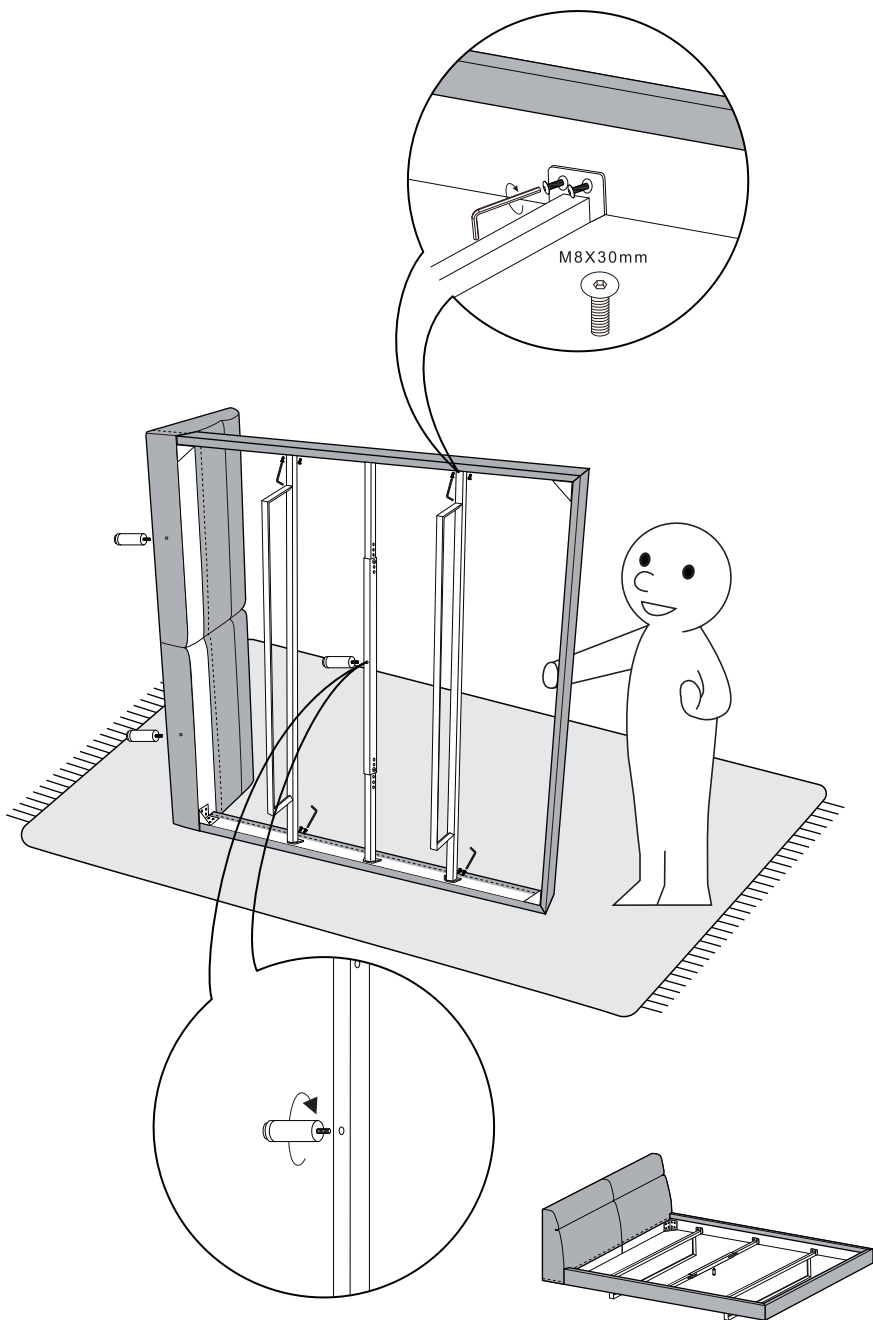

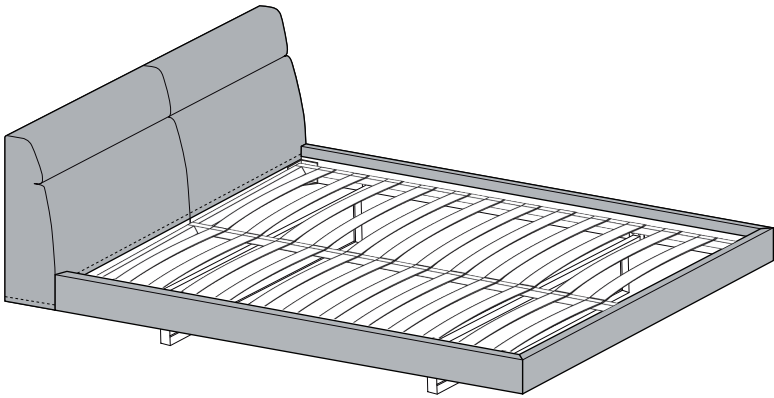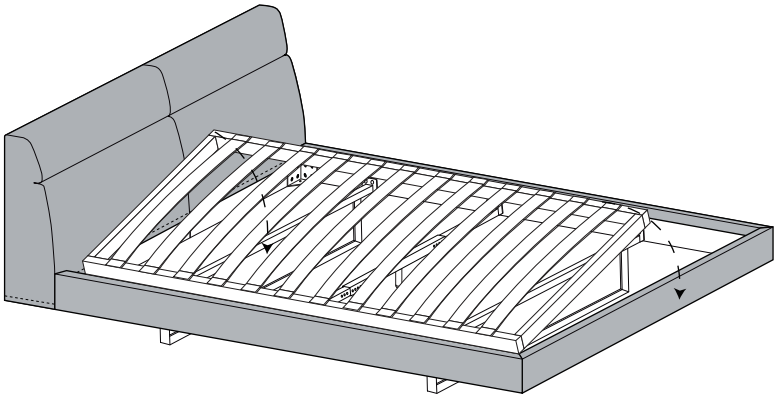



CAMERICHfurniture



camerich_official