


CRESCENT BED

C03J0401. / C03J0402. / C03J0403. / C03J0404. / C03J0405.

Installation Instruction

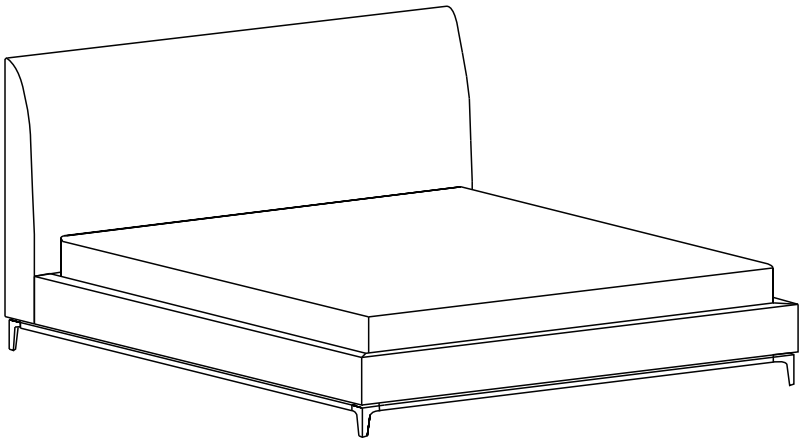

CAMERICH

M8X30mm



44X

M8X30mm



4X

M6X16mm




20X

M4X16mm



4X

M8X30mm




4X

Φ10




4X



4X



4X





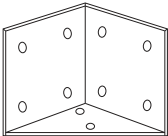




4X



D35X125mm






2X

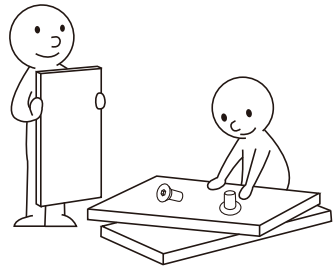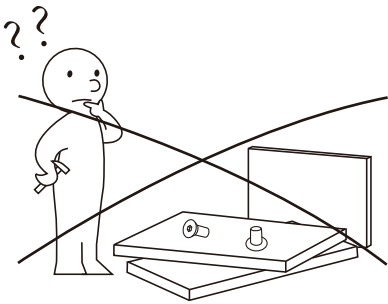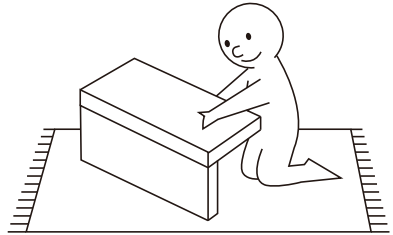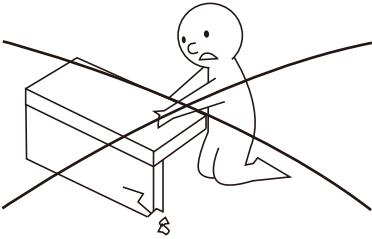
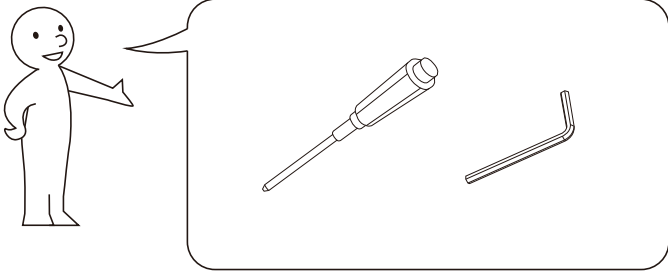



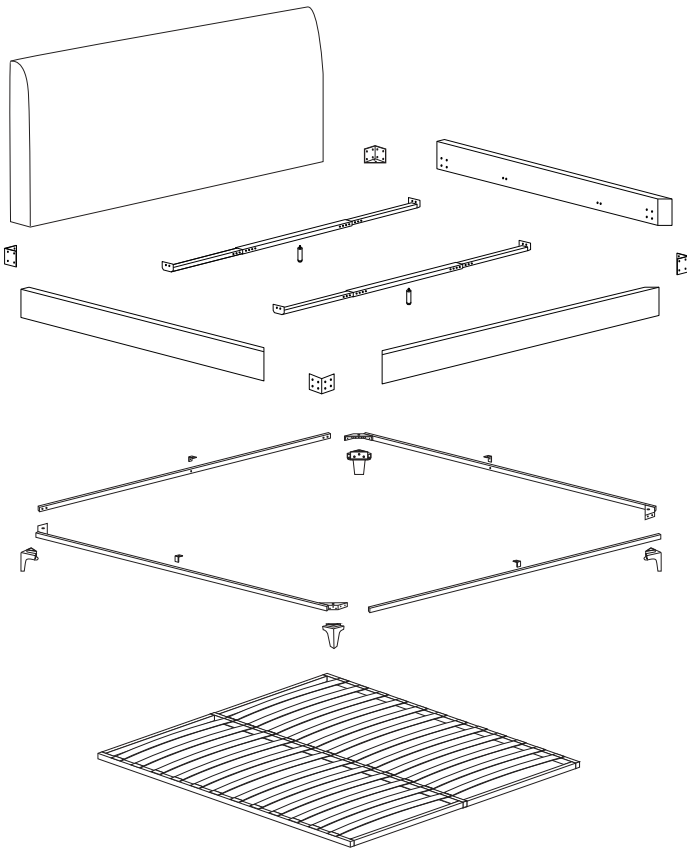
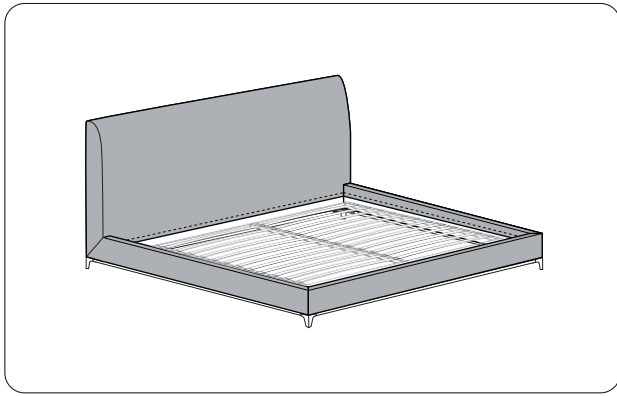


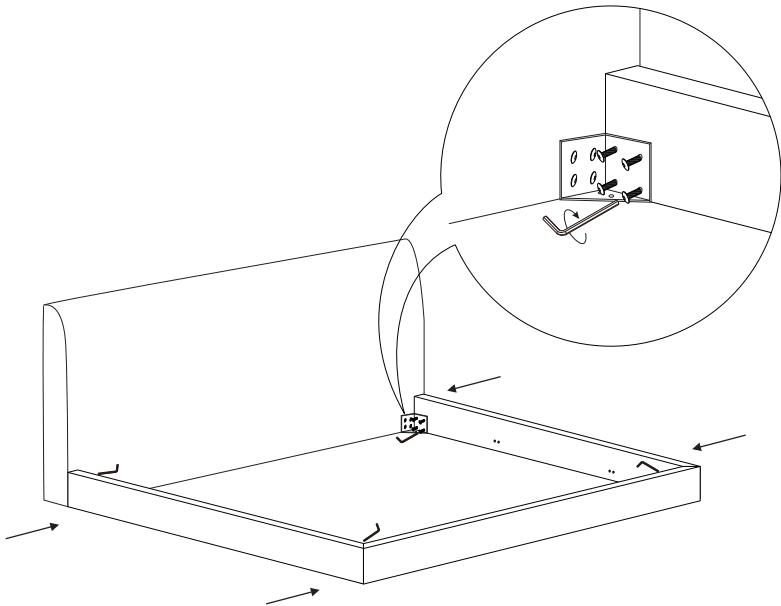
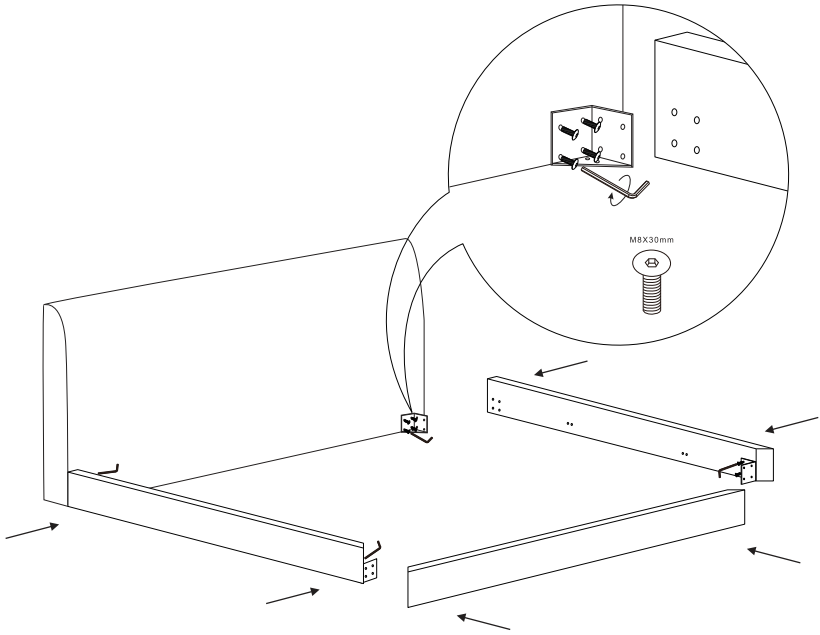


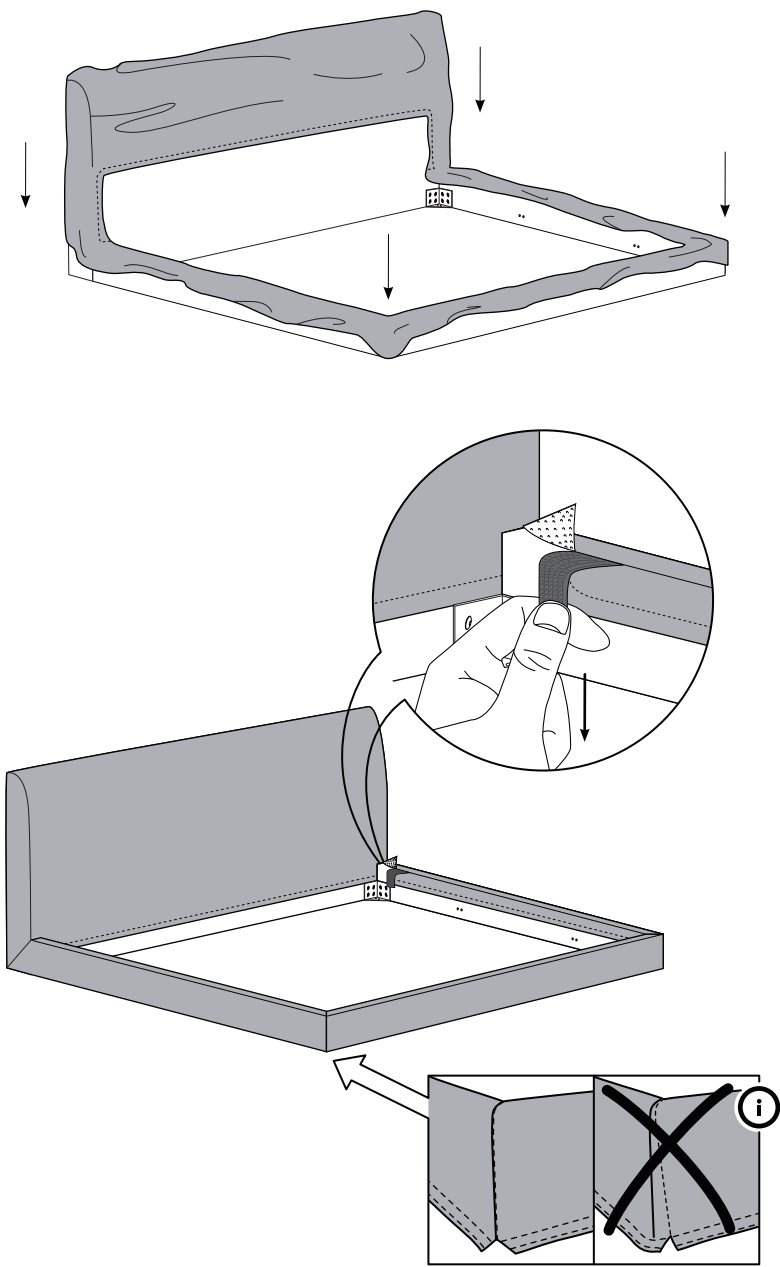


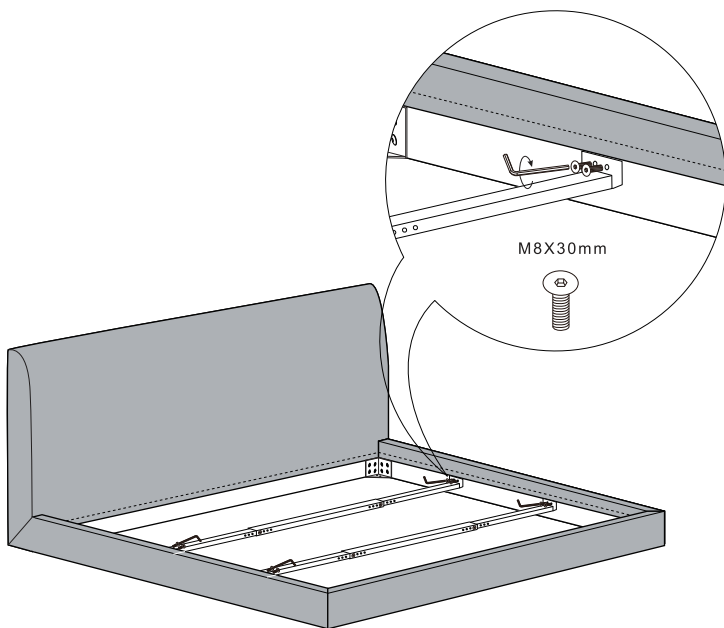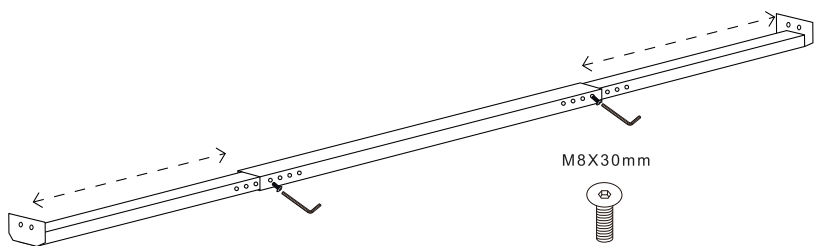


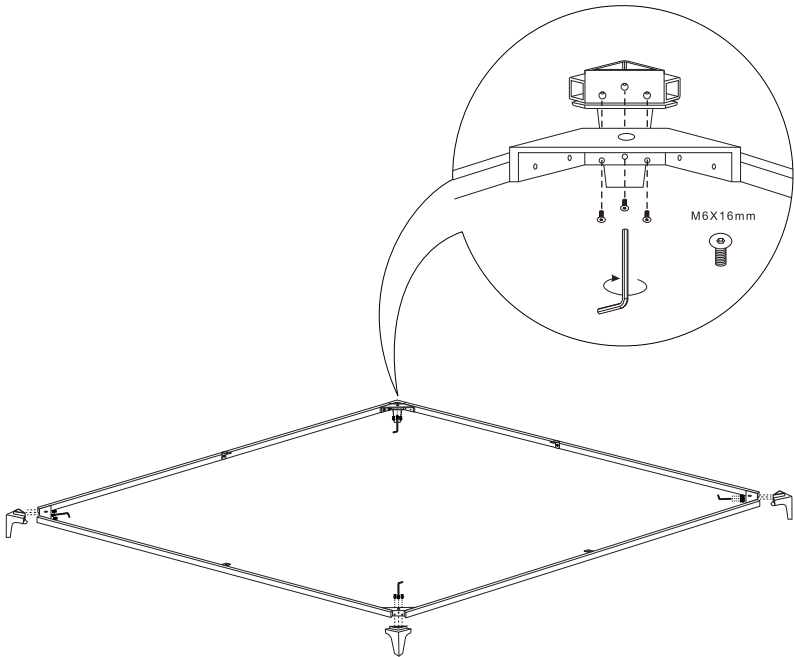
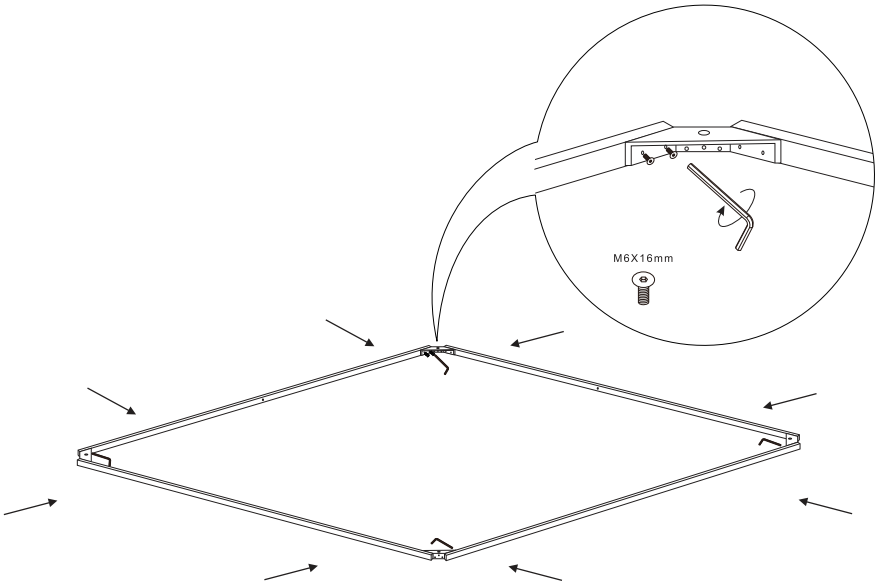


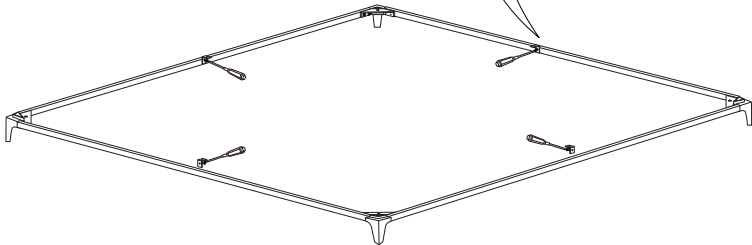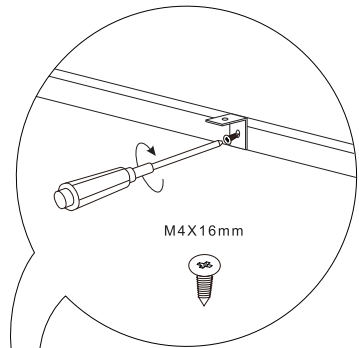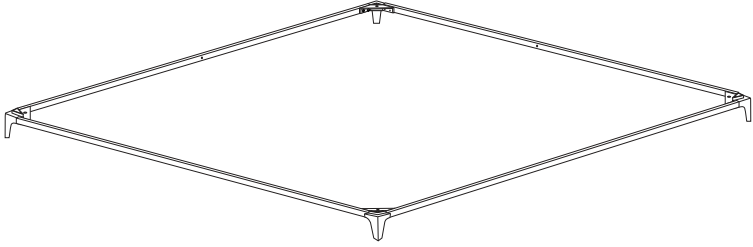

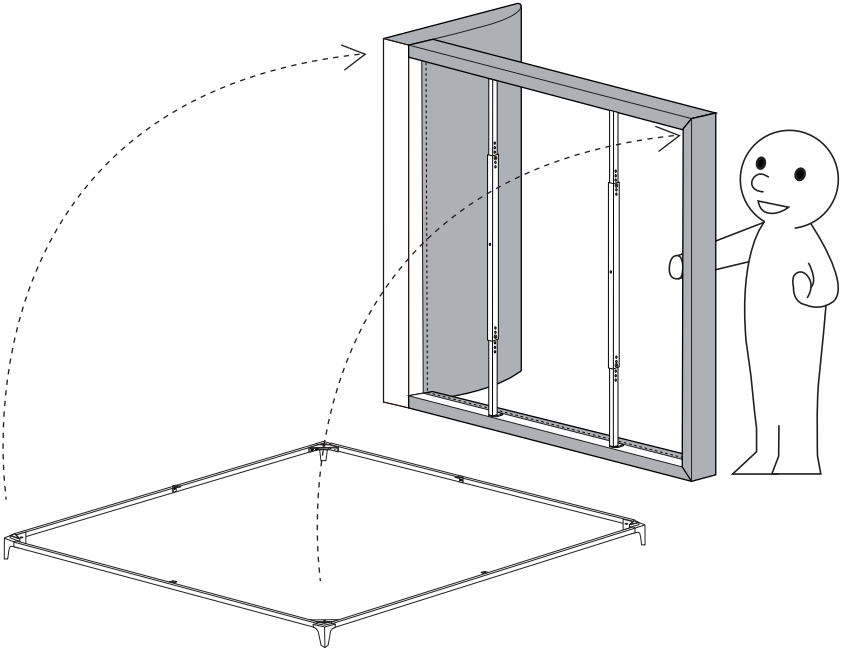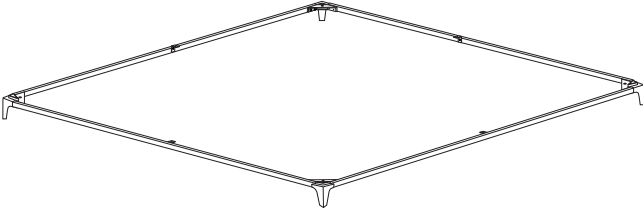

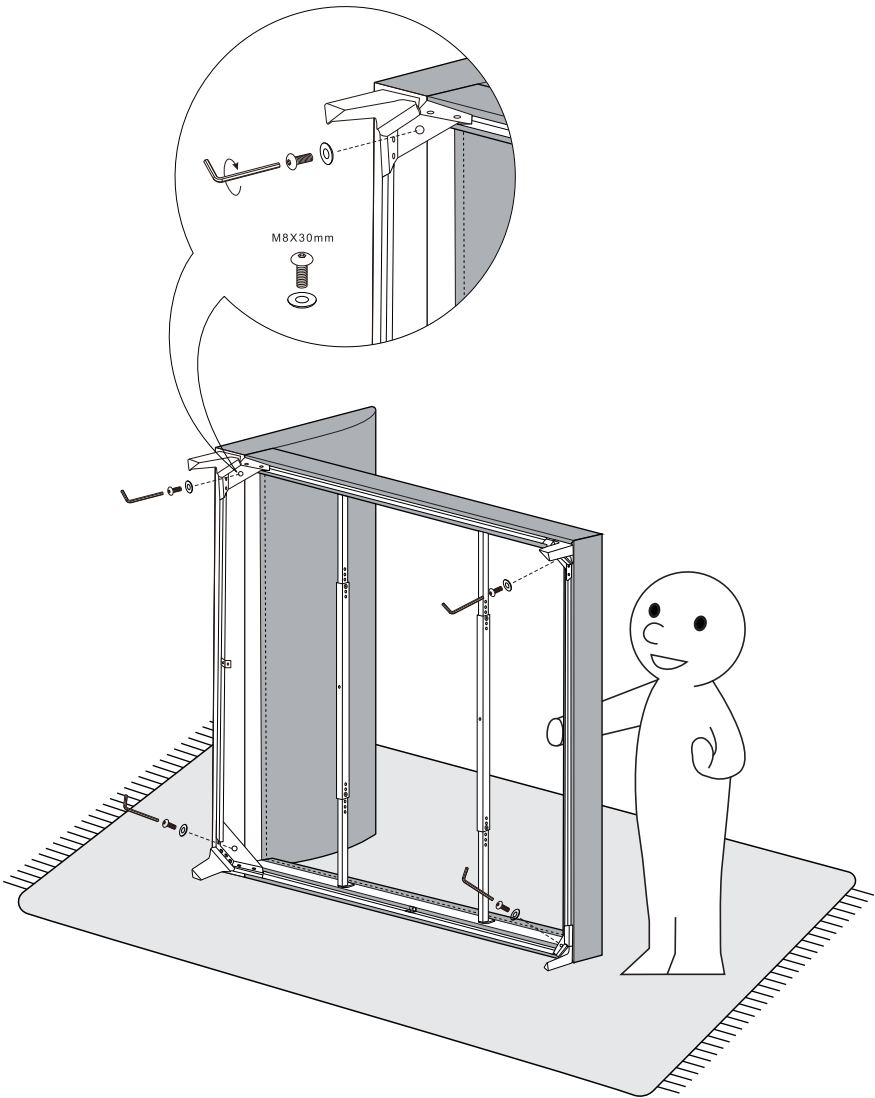

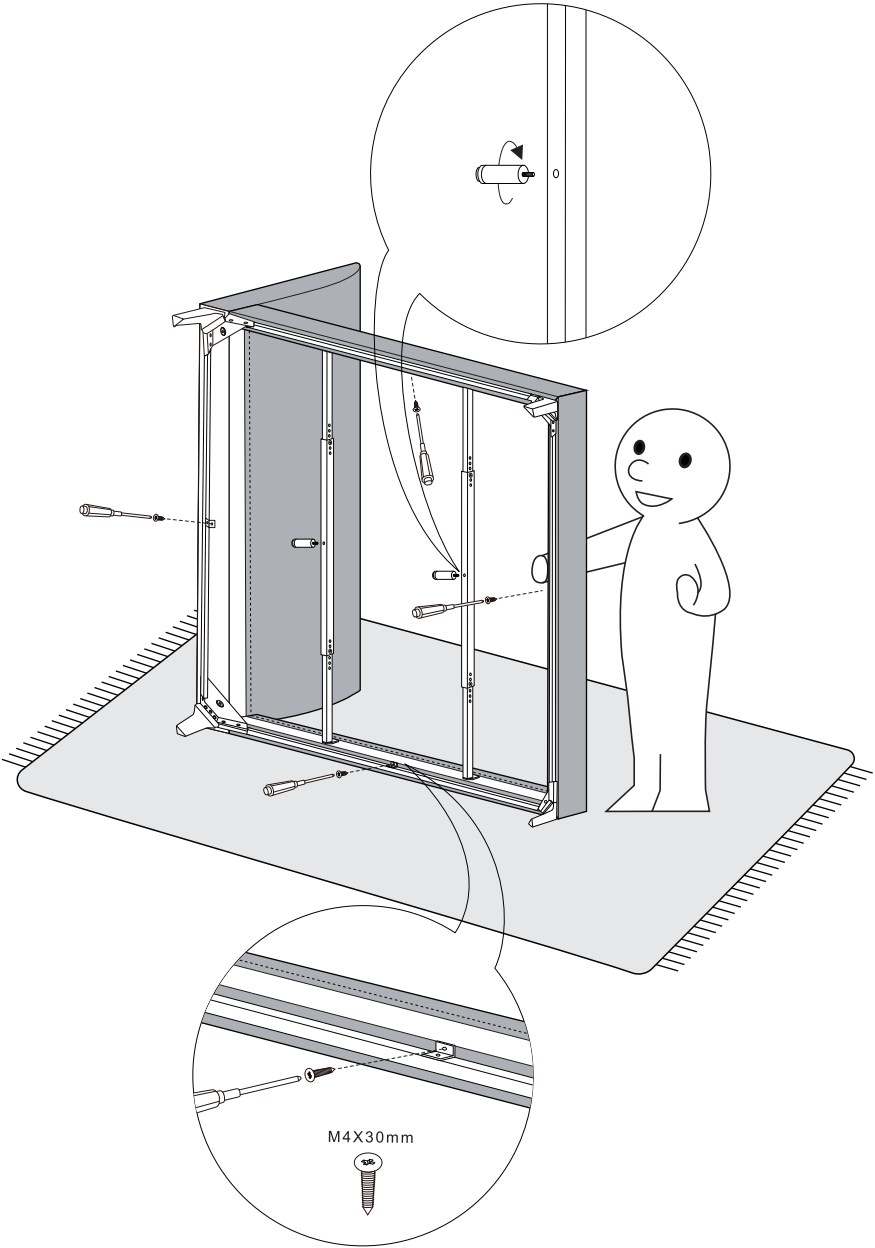

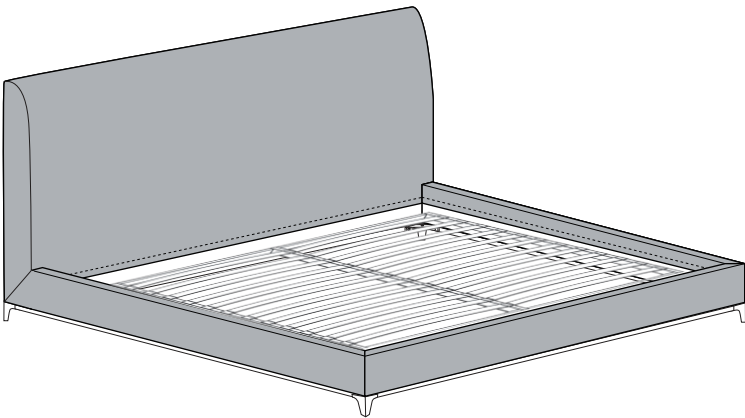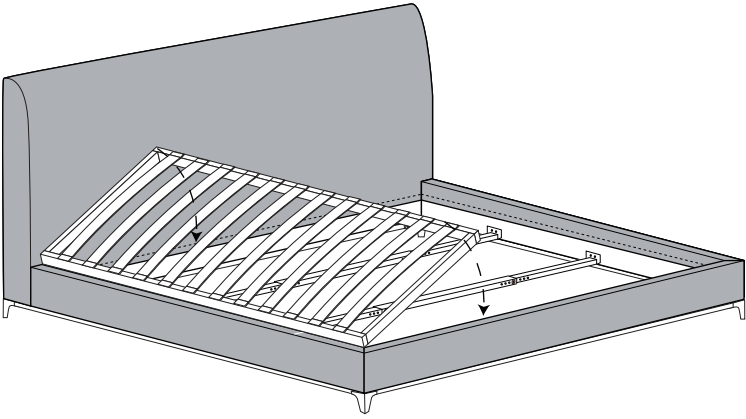



CAMERICHfurniture



camerich_official