


NATURE BED


C03E0701. / C03E0702. / C03E0703. / C03E0704. / C03E0705.

Installation Instruction

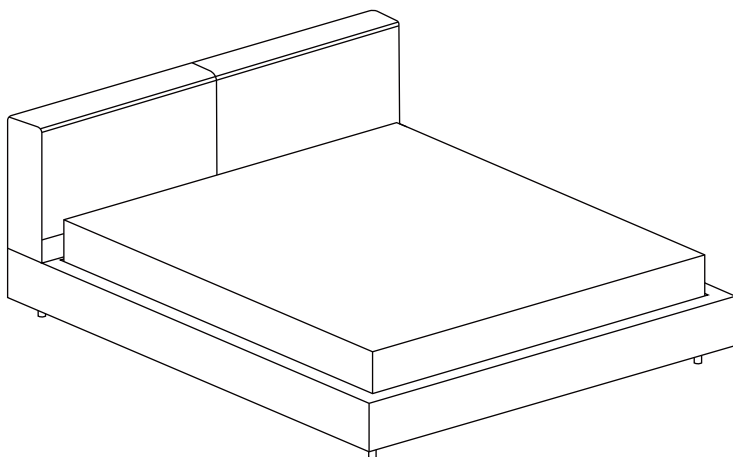


CAMERICH

M8X30



44X

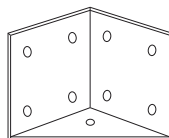


4X

L80mm




6X






L125mm






2X




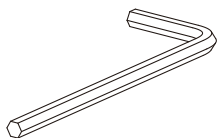




M5

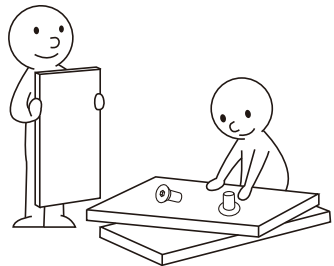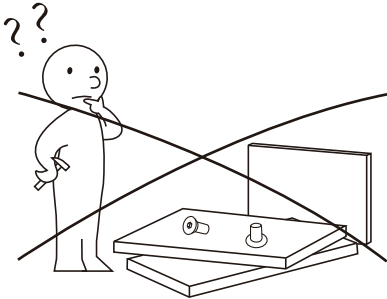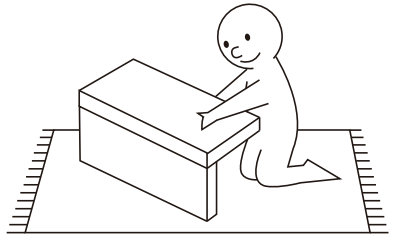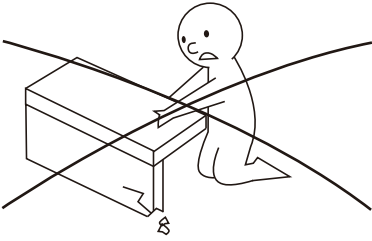
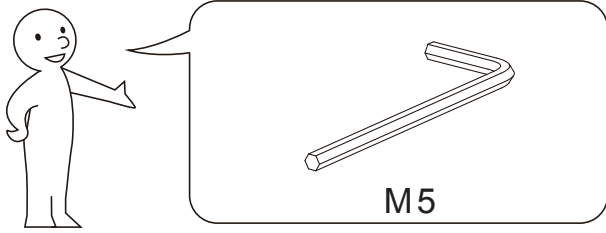


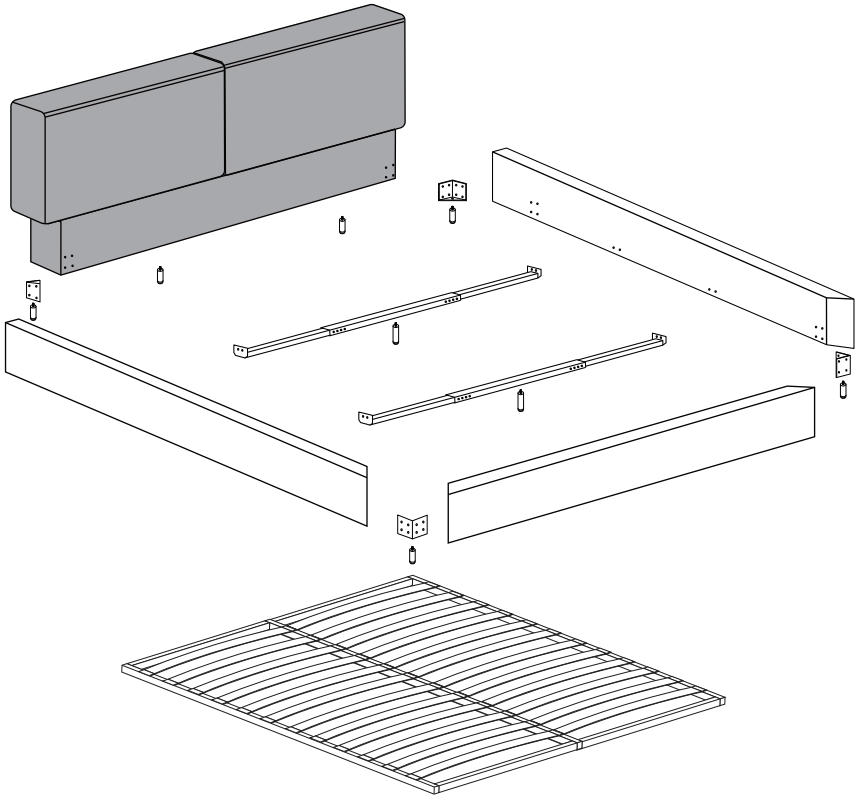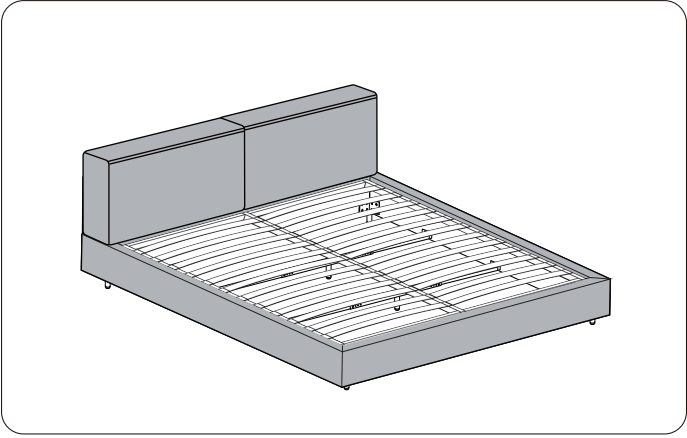

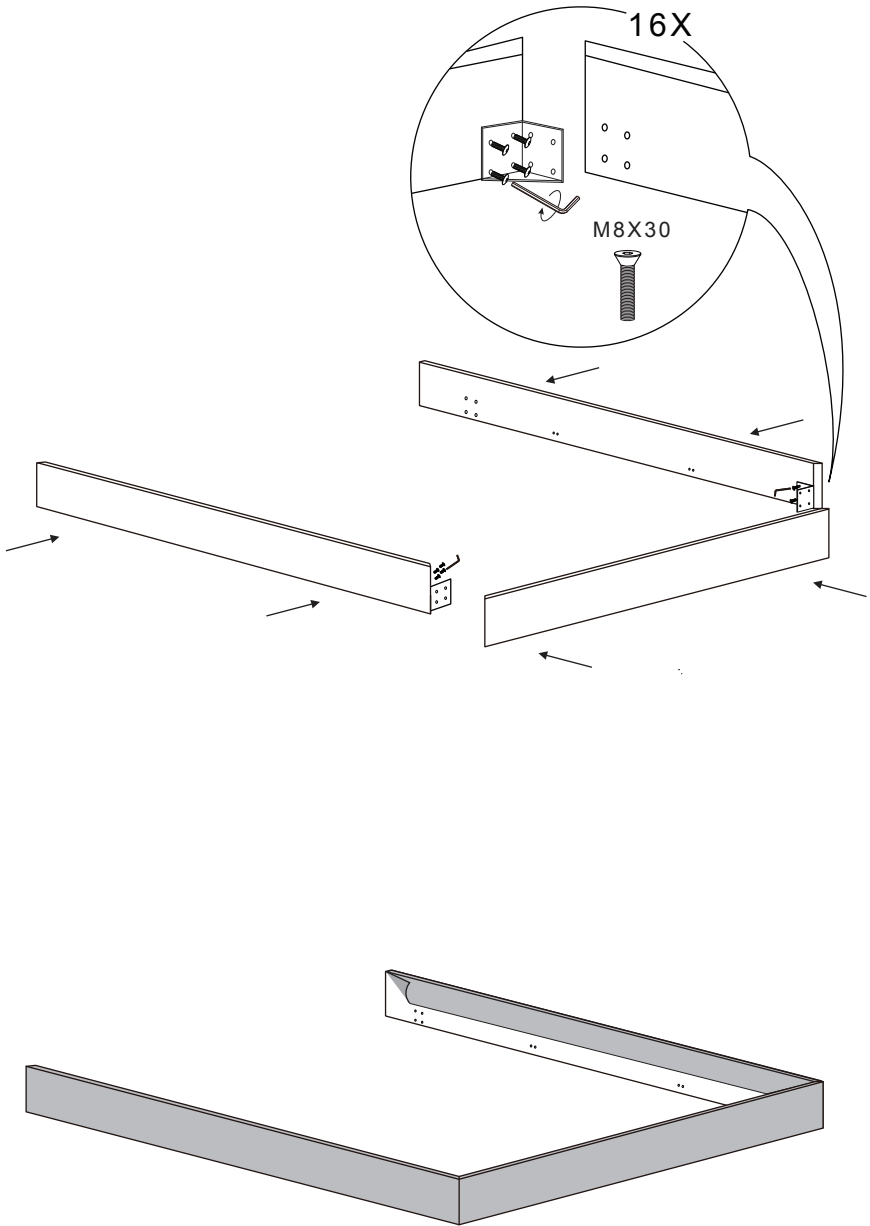

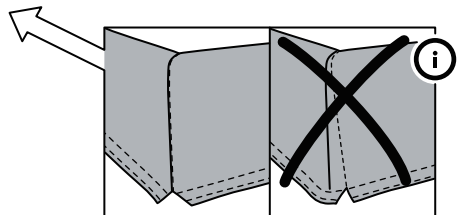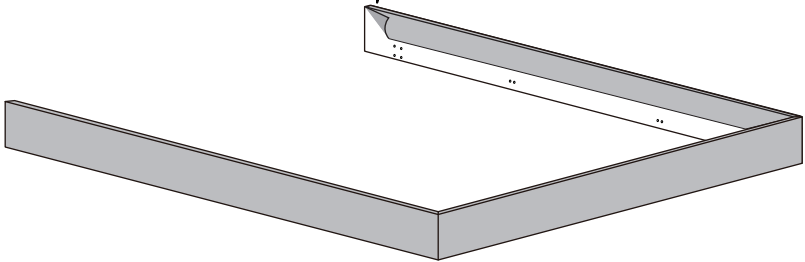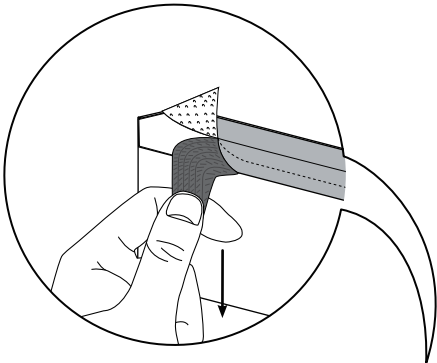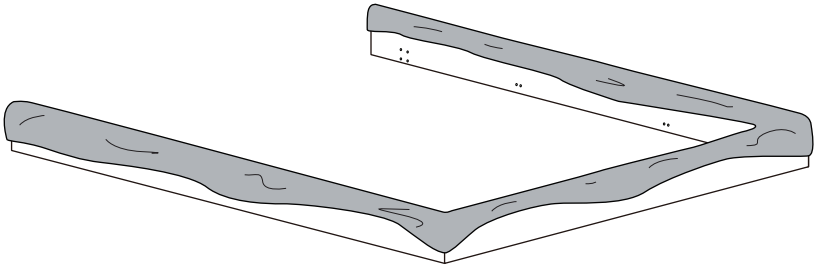

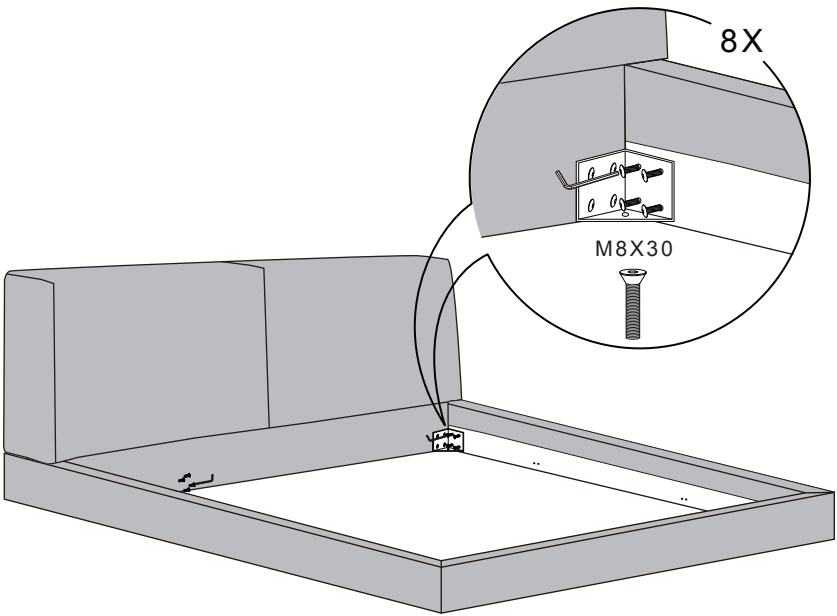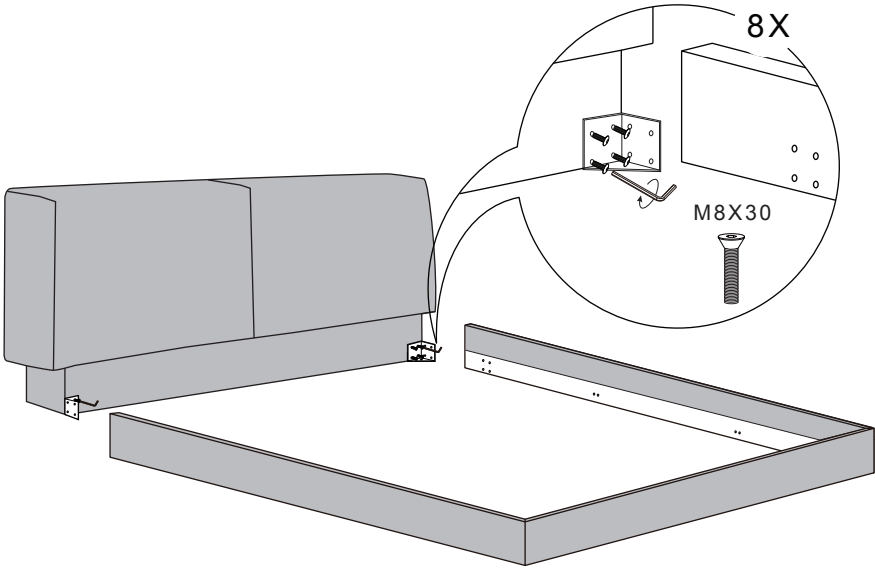


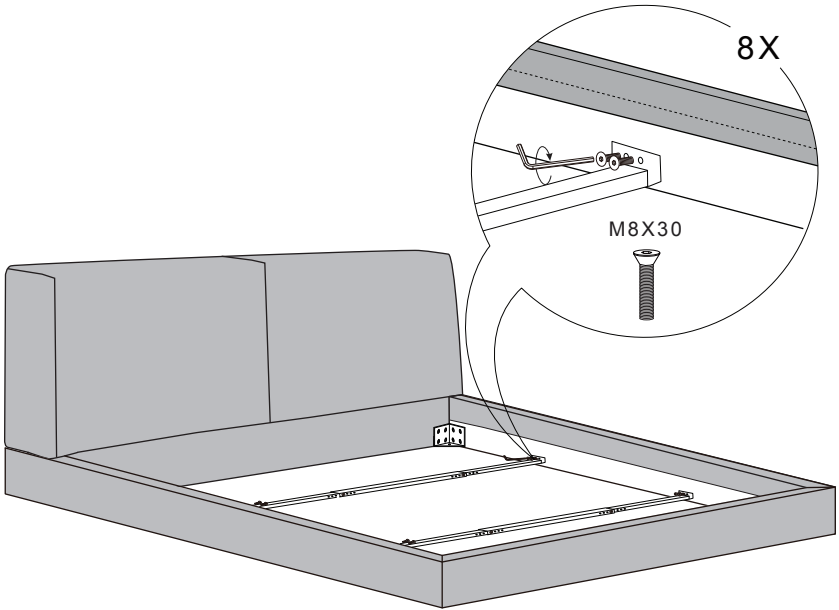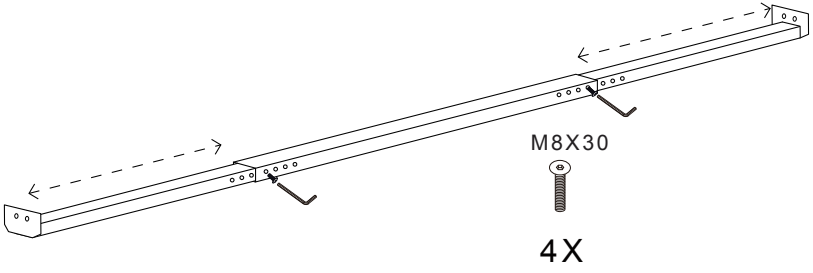

L80mm



6X

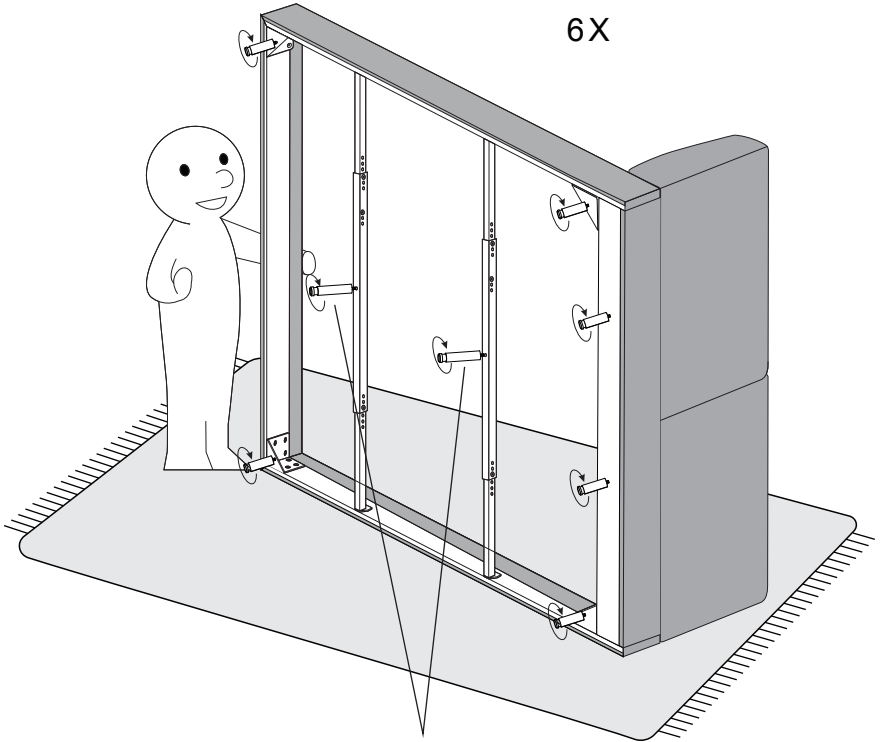

L 125mm

2X

