


# STRATUS BED

C03J0121. / C03J0122. / C03J0123. / C03J0124. / C03J0125. / C03J0132.


## Installation Instruction

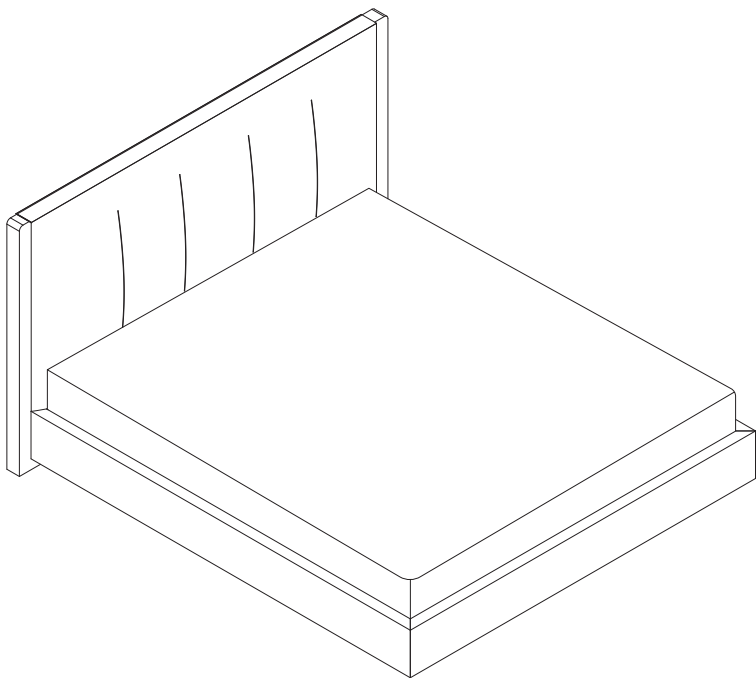

**CAMERICH**



M6X30




4X

M8x30




46X

M8\*70



10X

M8\*65



2X




10X




4X



4X

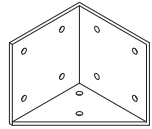


4X








2X







10X






2X

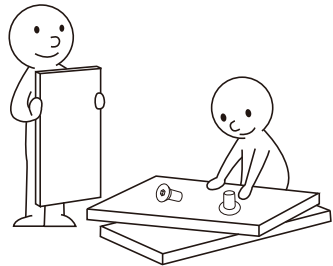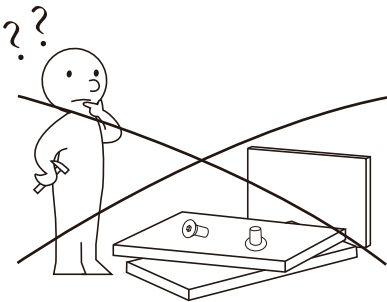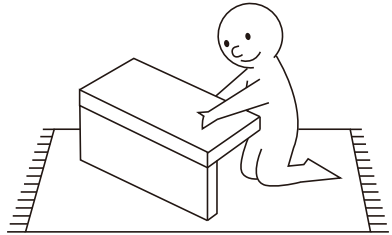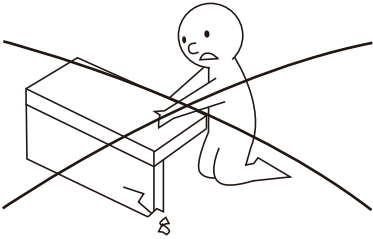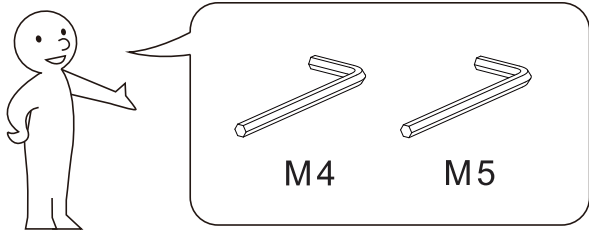

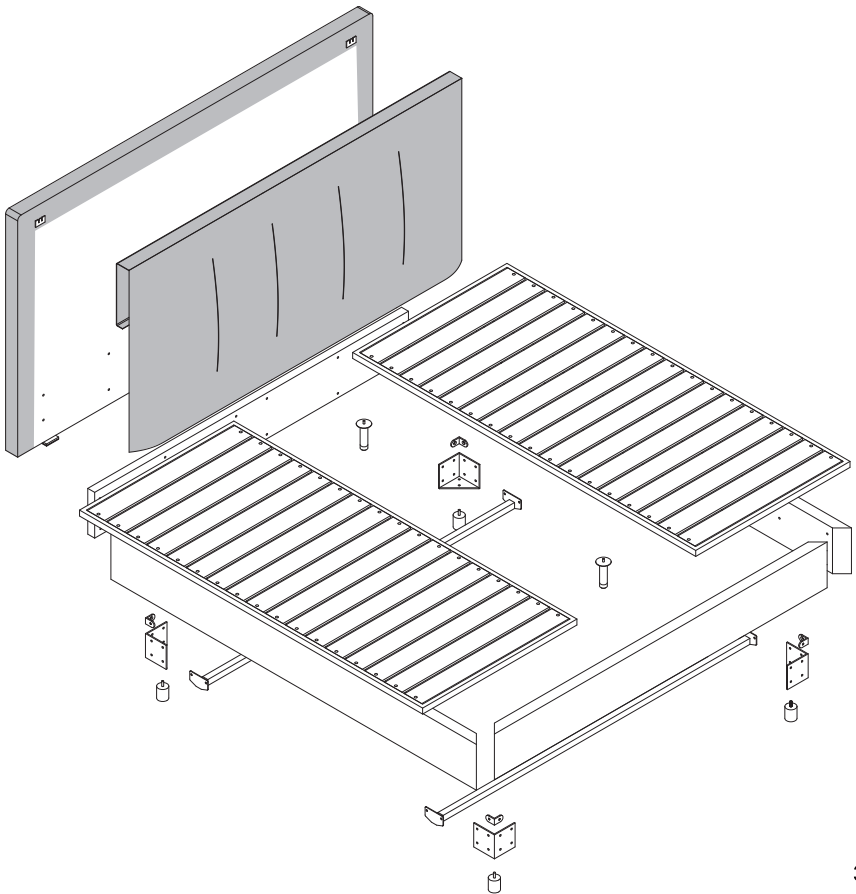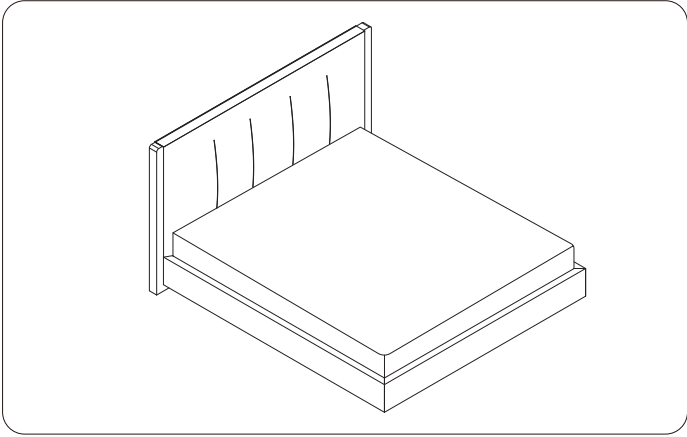


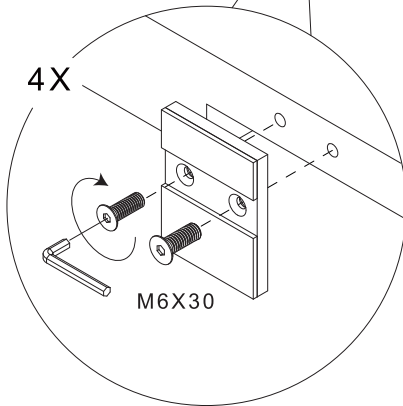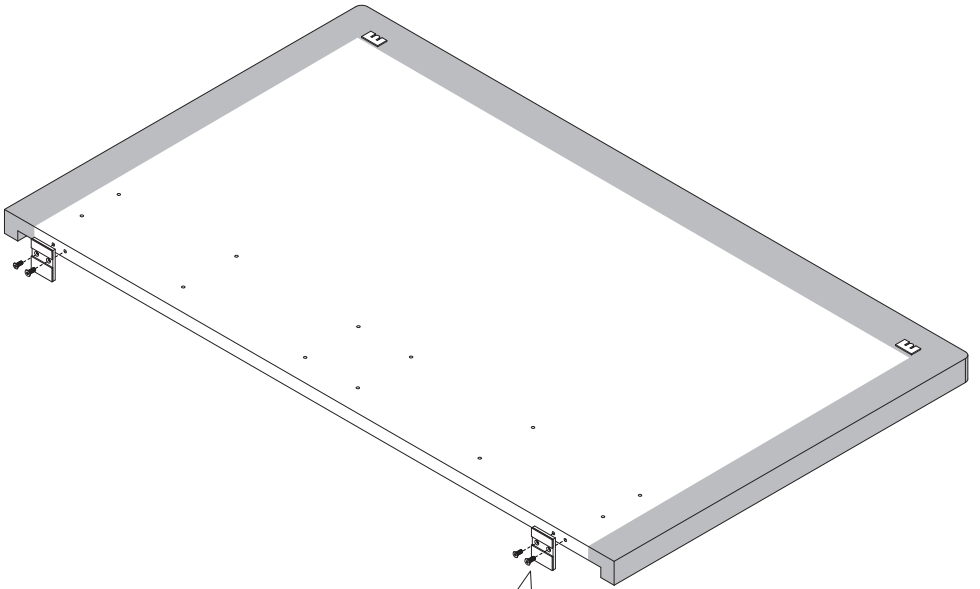

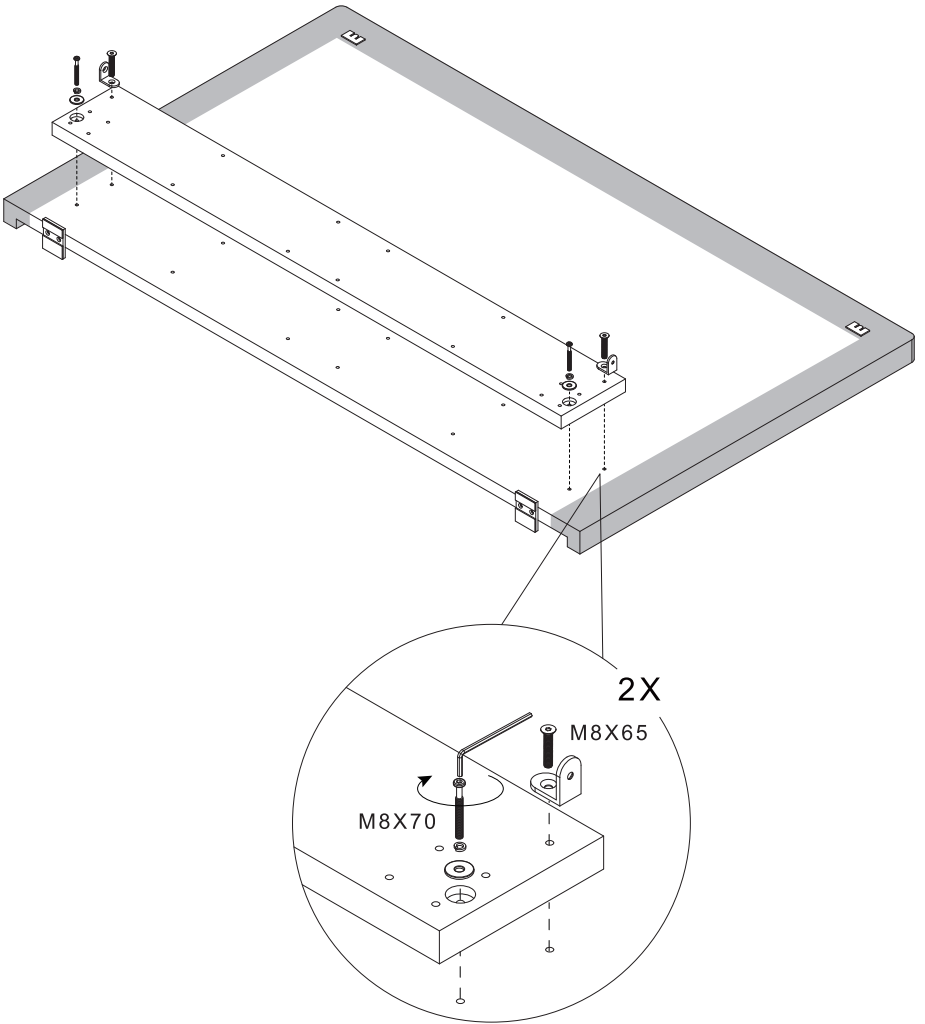

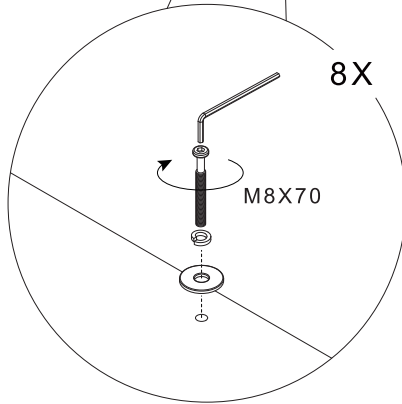
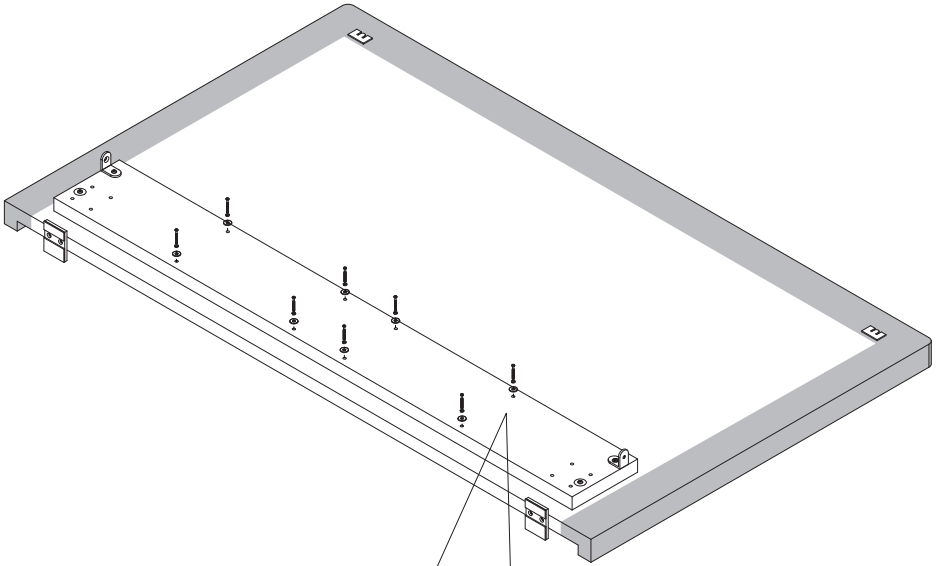









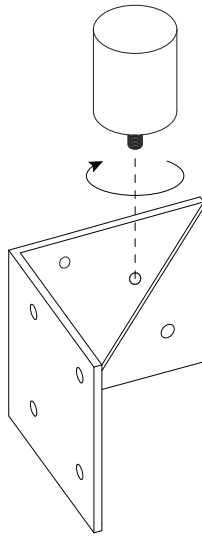



8X


M8X30

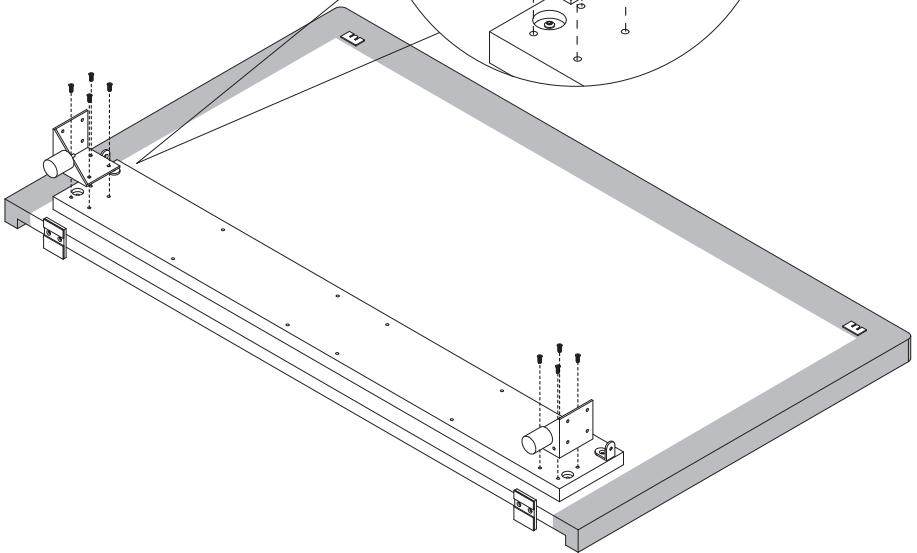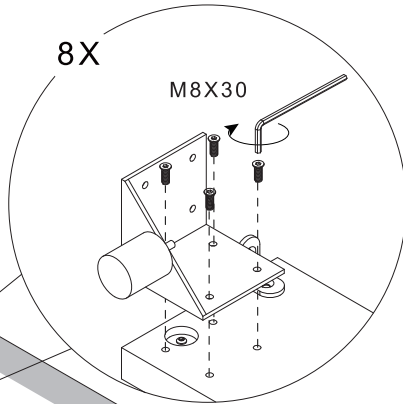


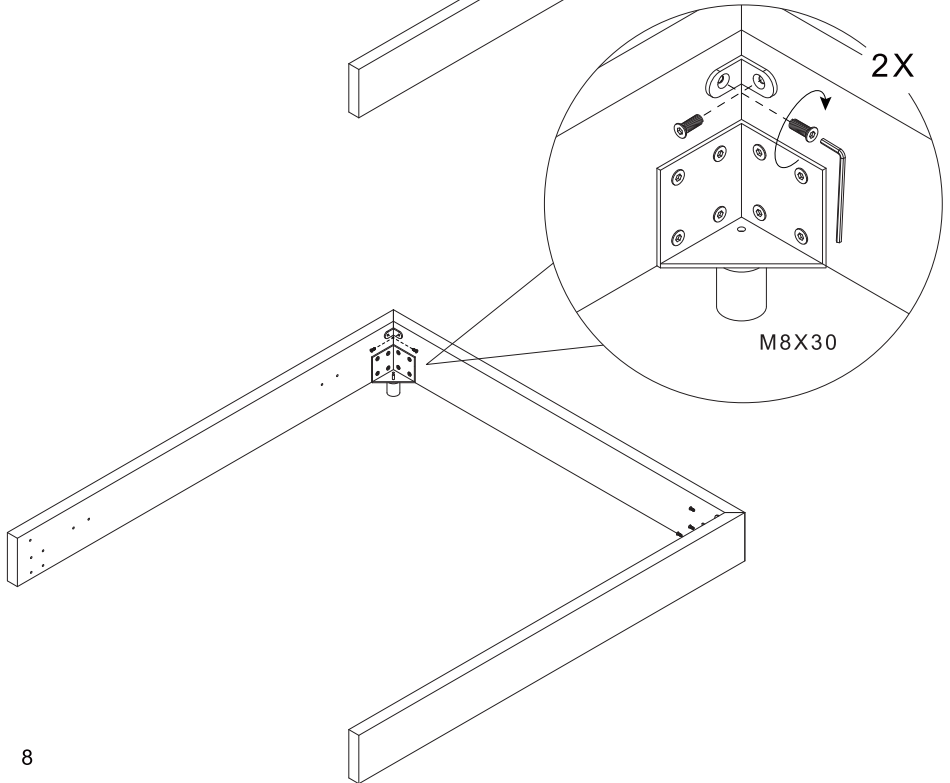
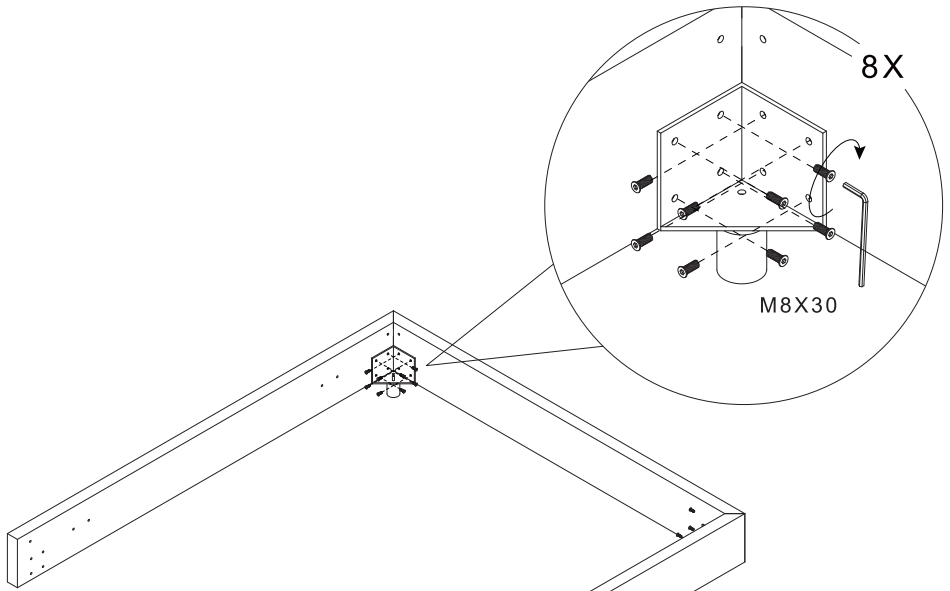


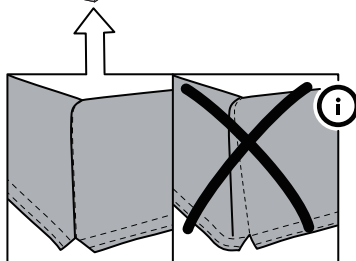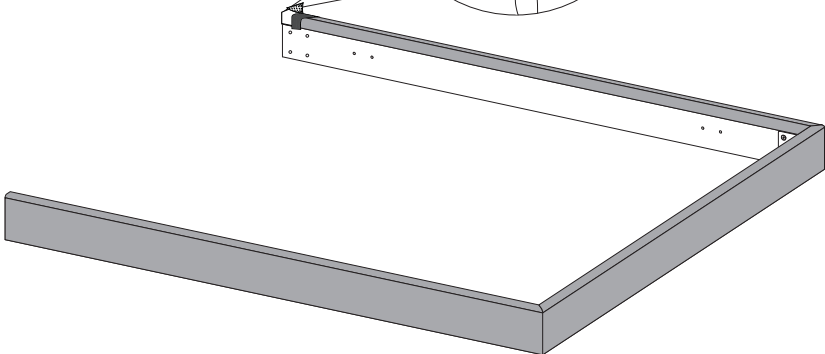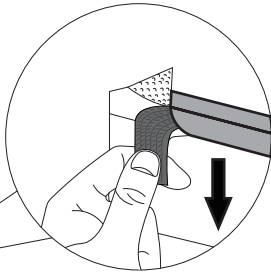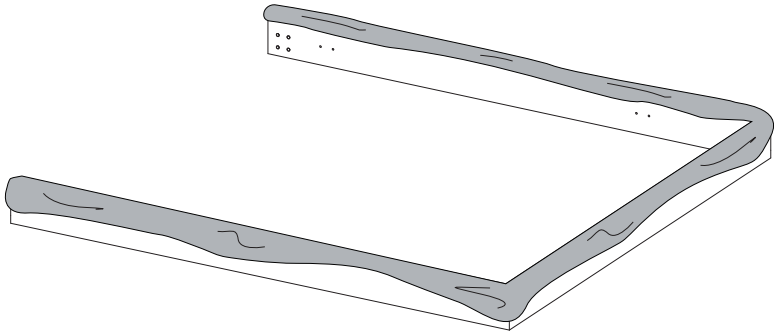


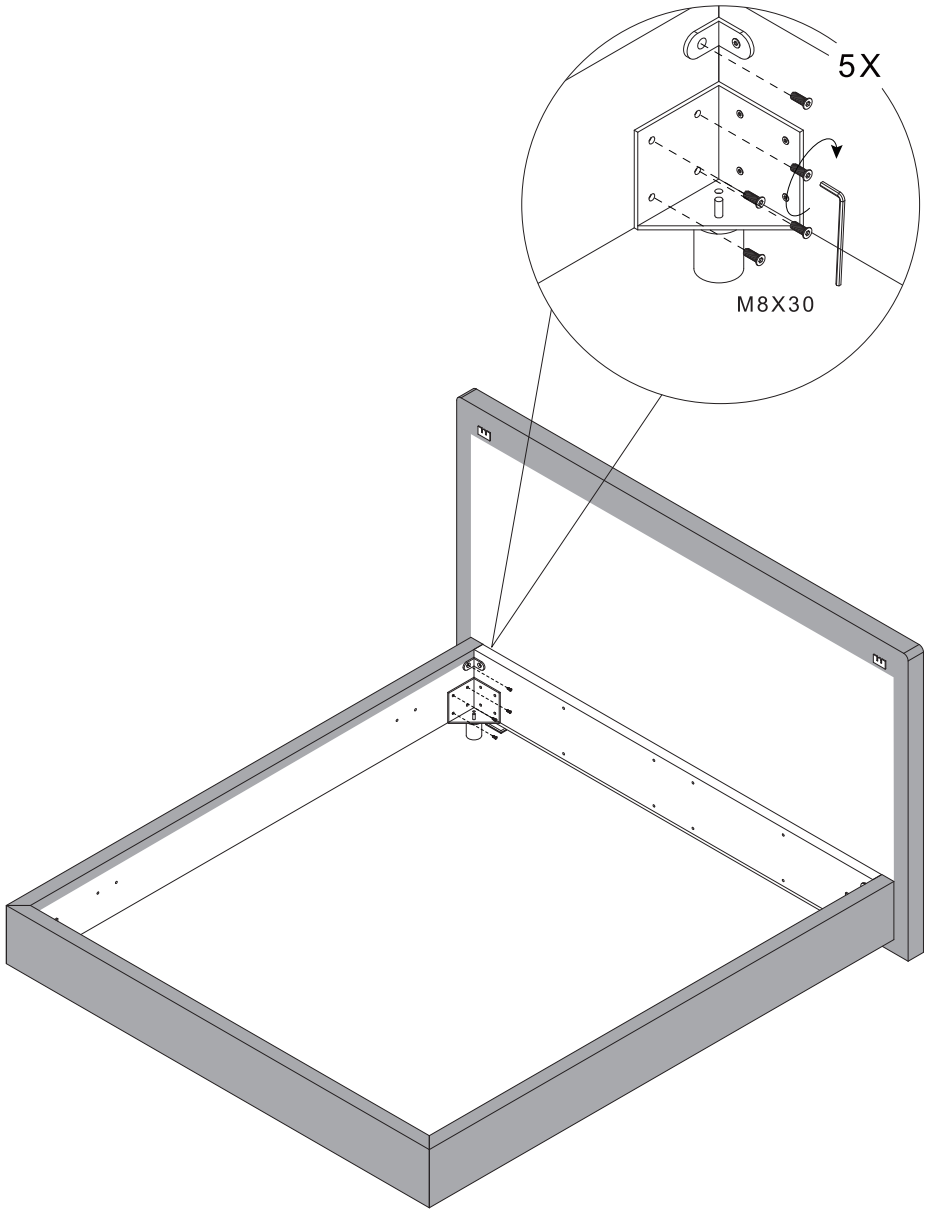

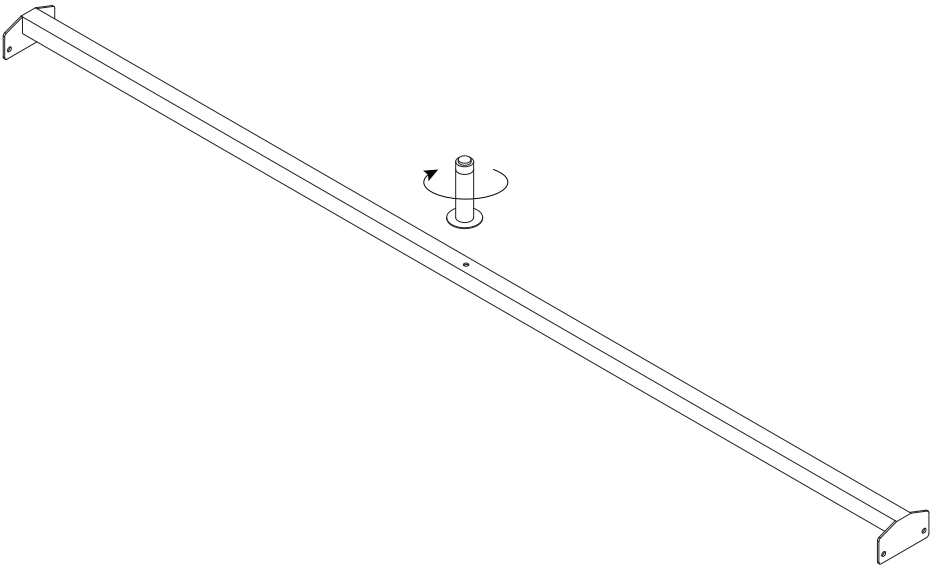


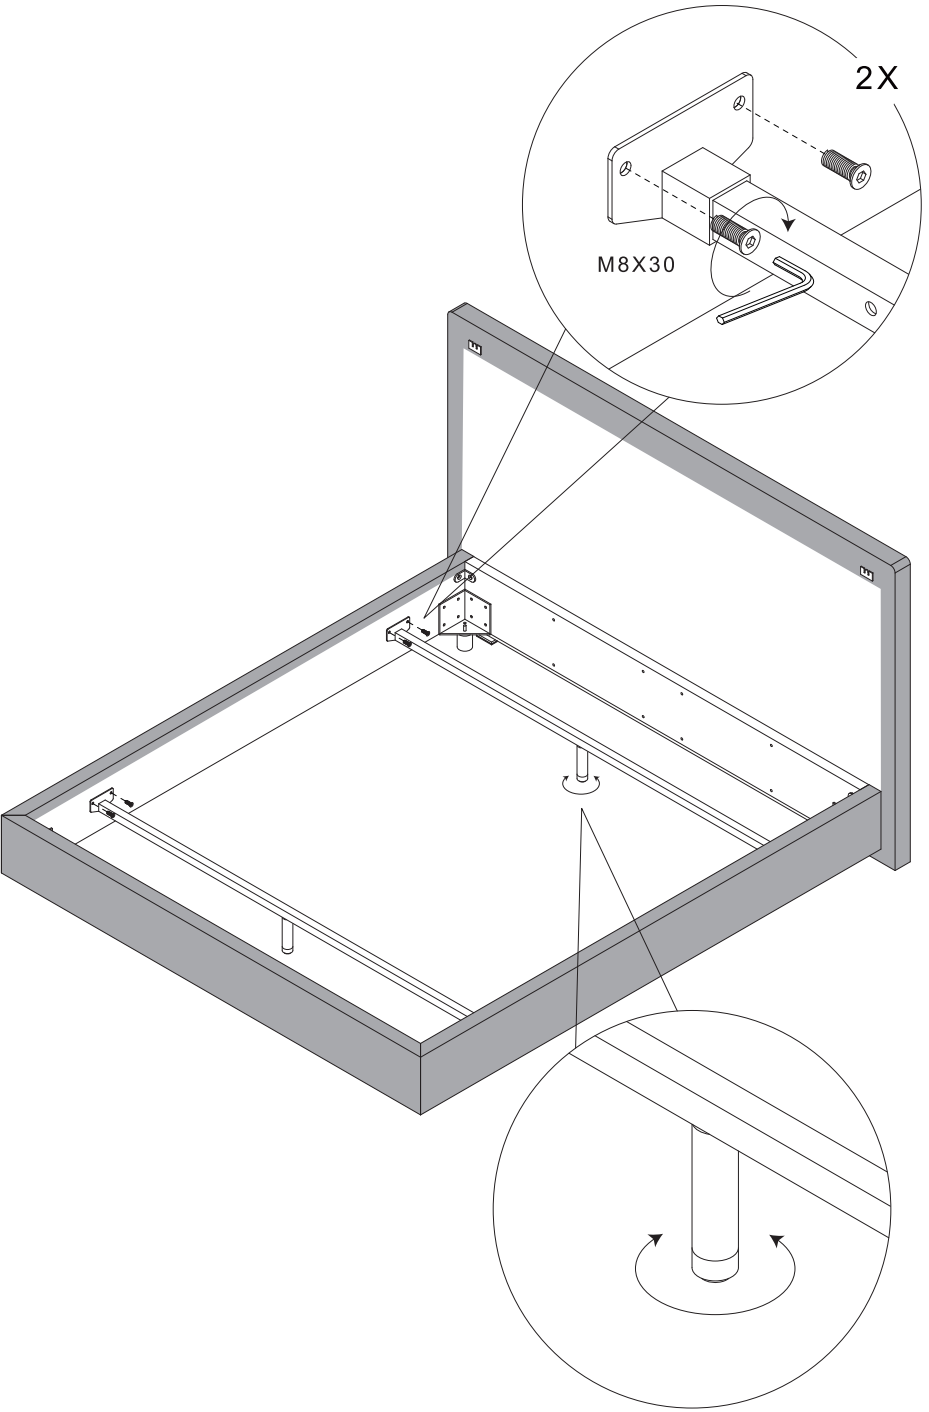


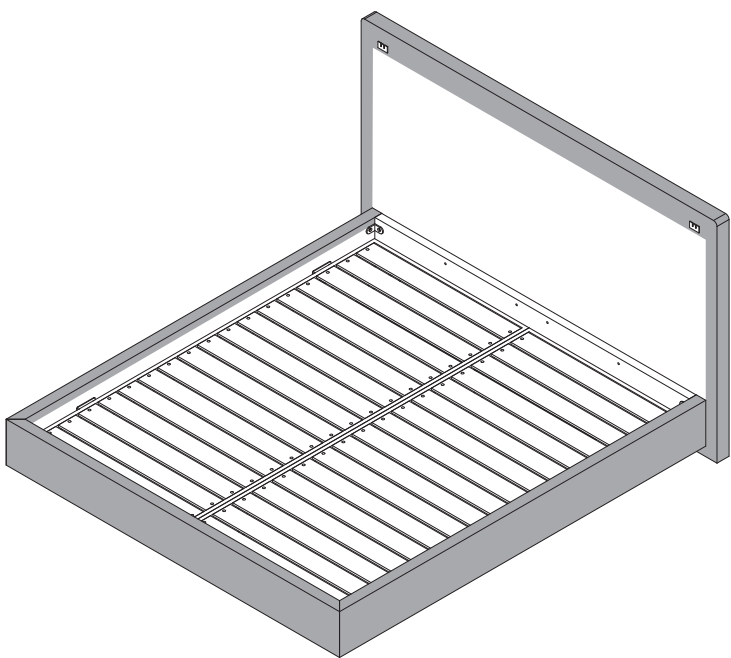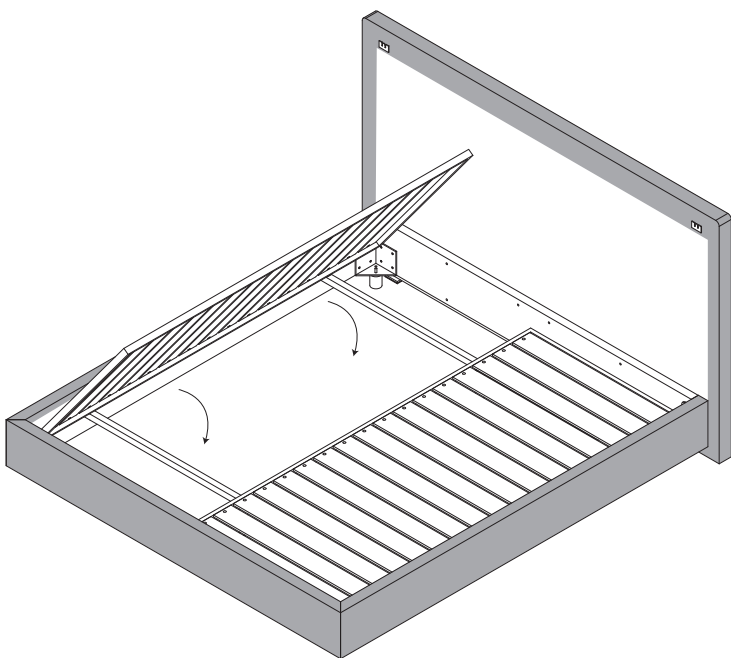

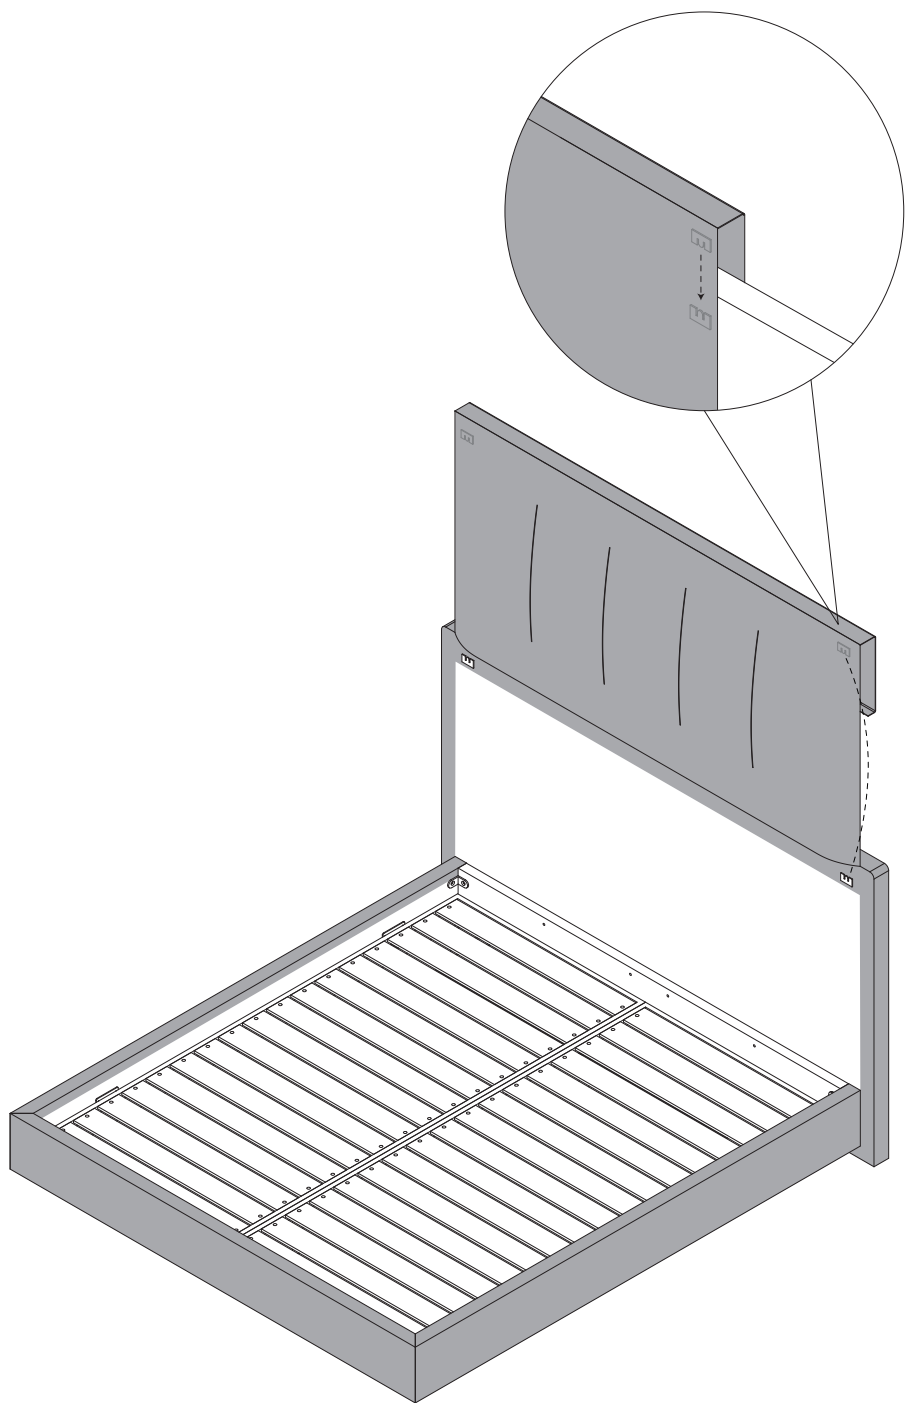



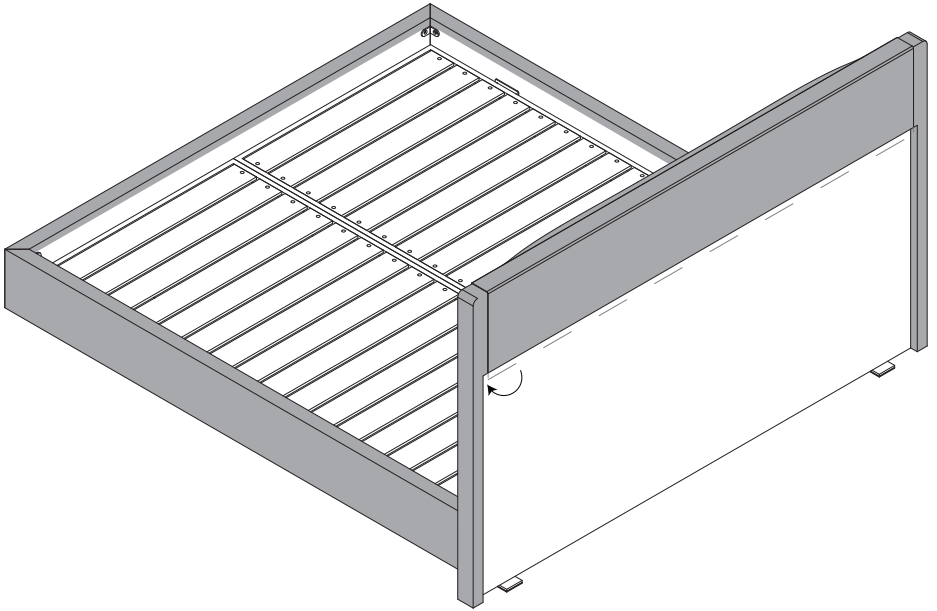

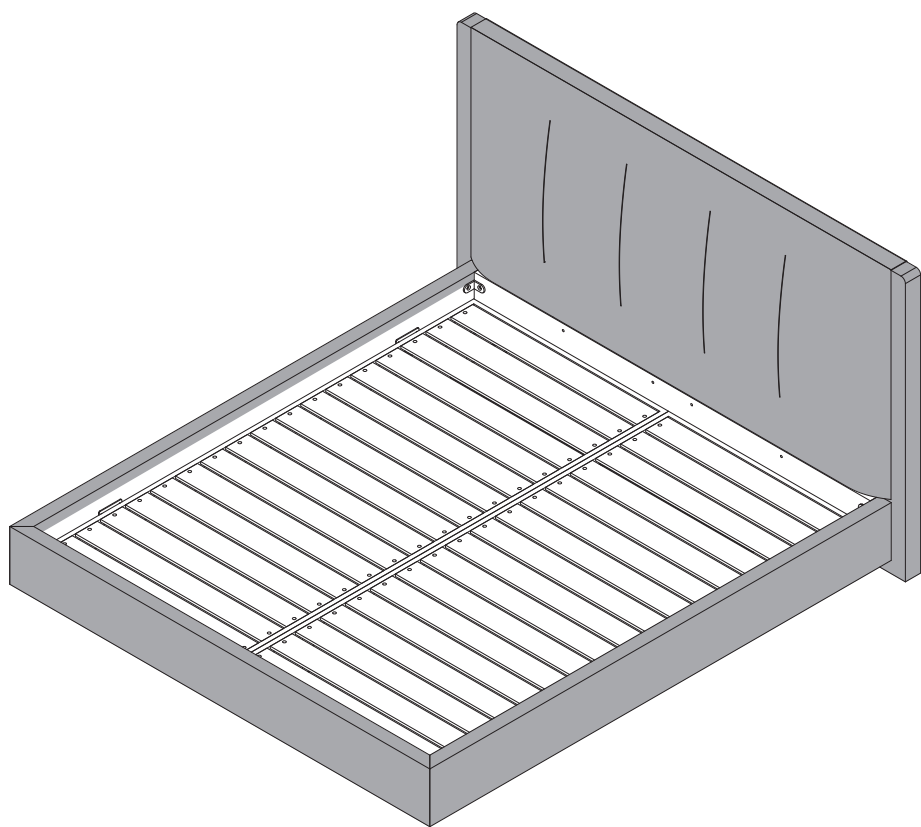





CAMERICHfurniture



camerich\_official