


STRATUS BED

C03J0102. / C03J0103. / C03J0105. / C03J0112.

Installation Instruction

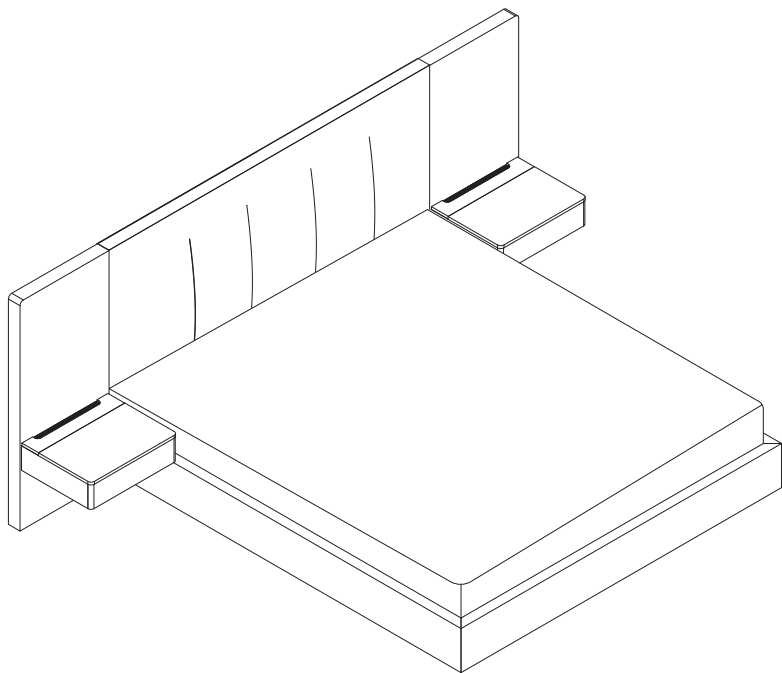

CAMERICH

M6×16




16X

M8×30




46X

M6×30




8X

M8*70



10X

M8*65




2X




10X




4X

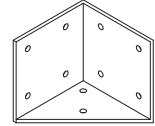

4X




2X



1X








4X






4X







10X

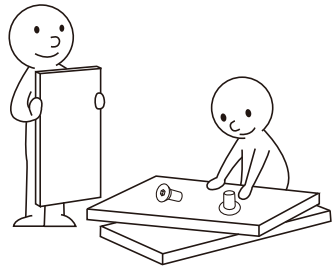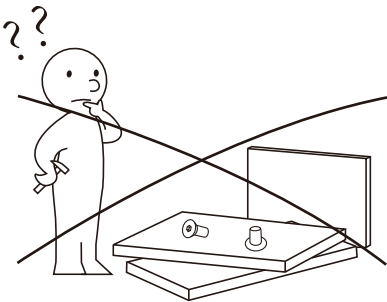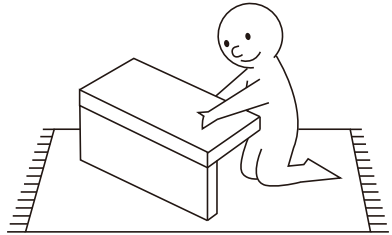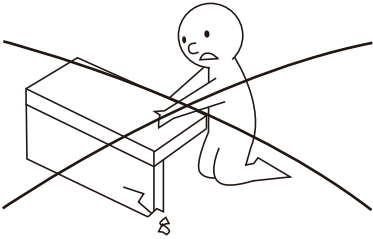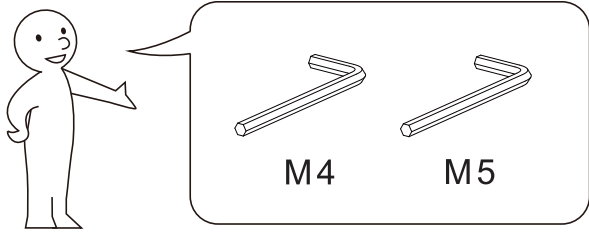


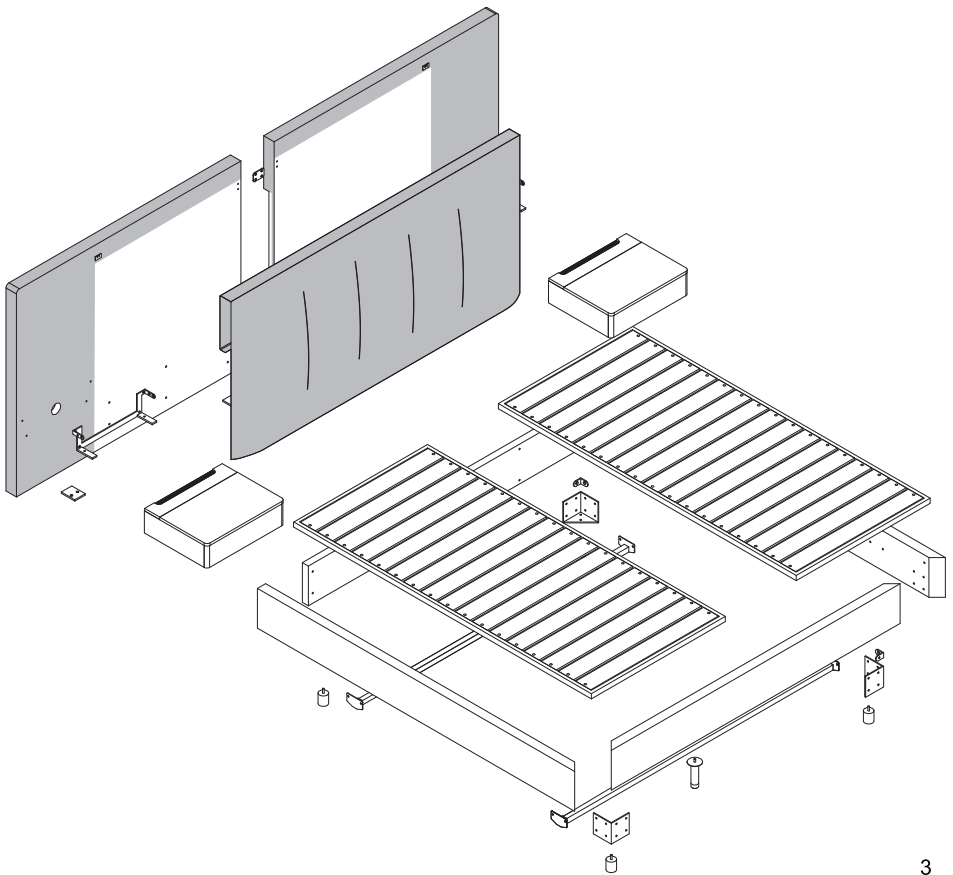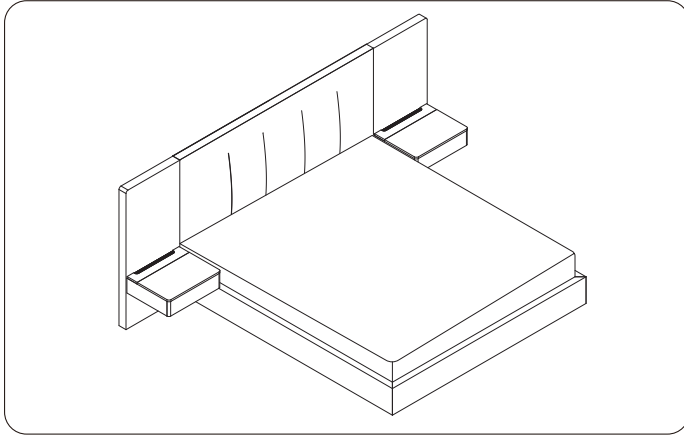



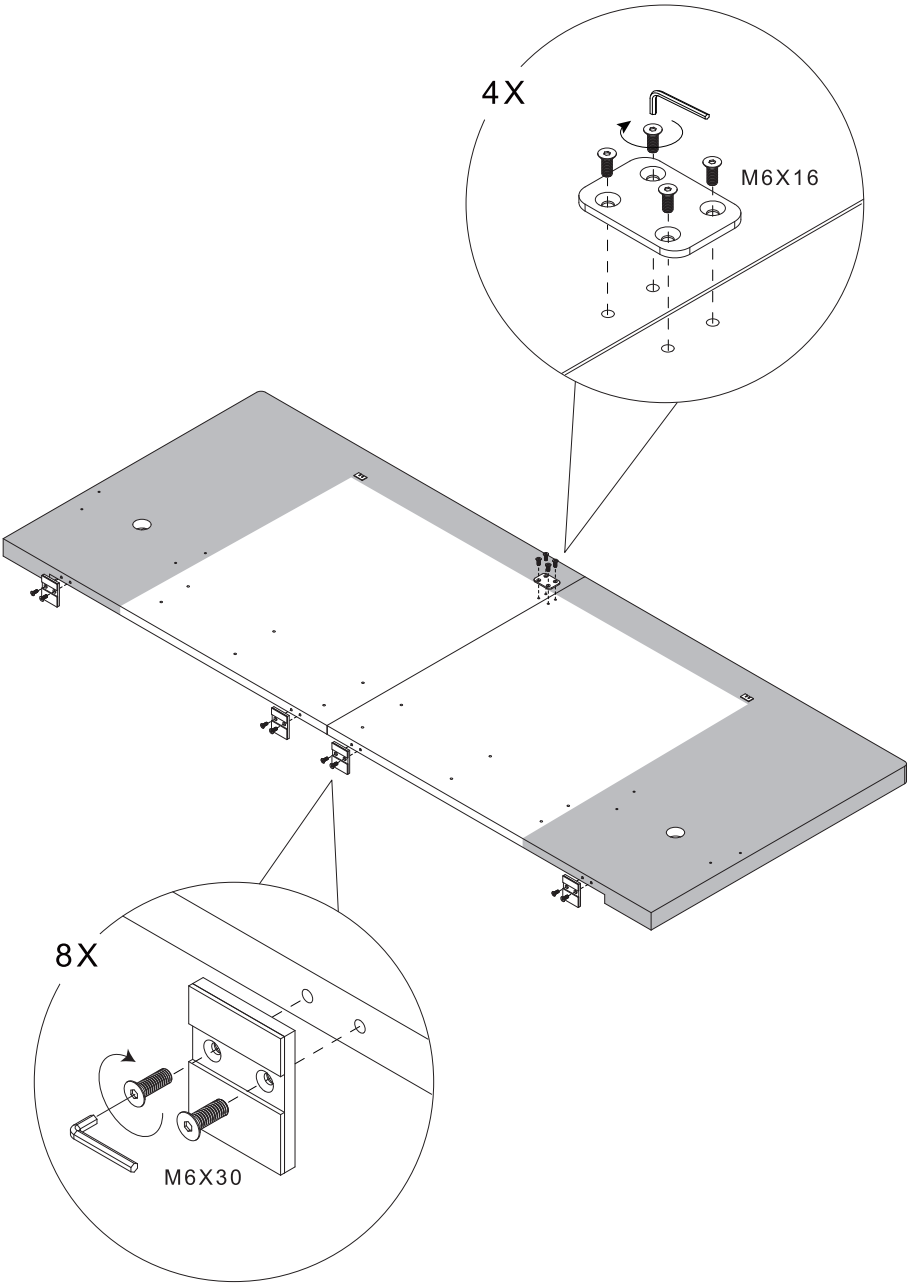


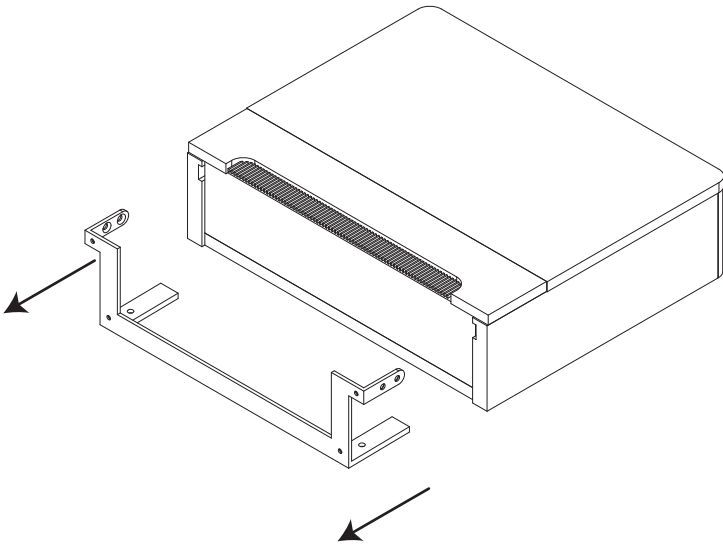
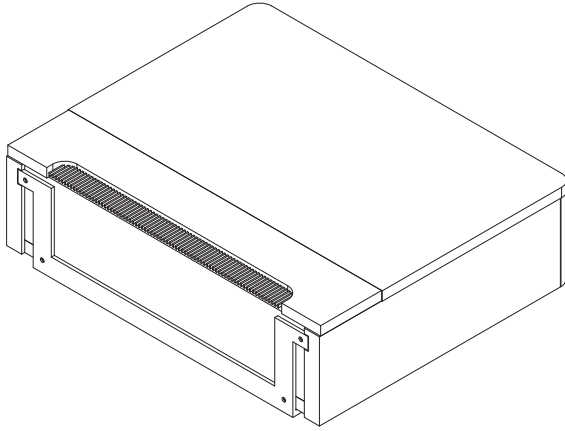




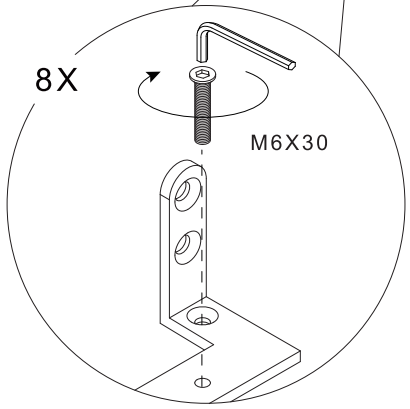
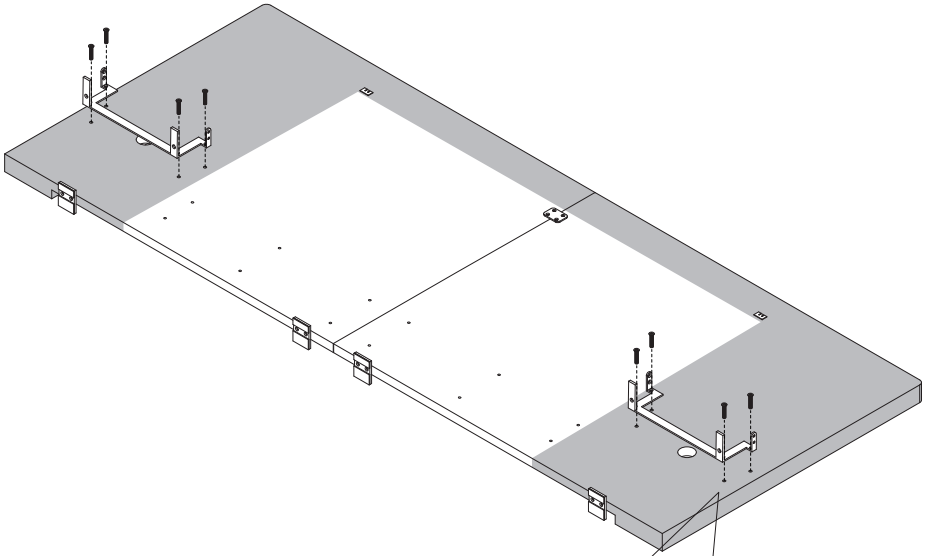


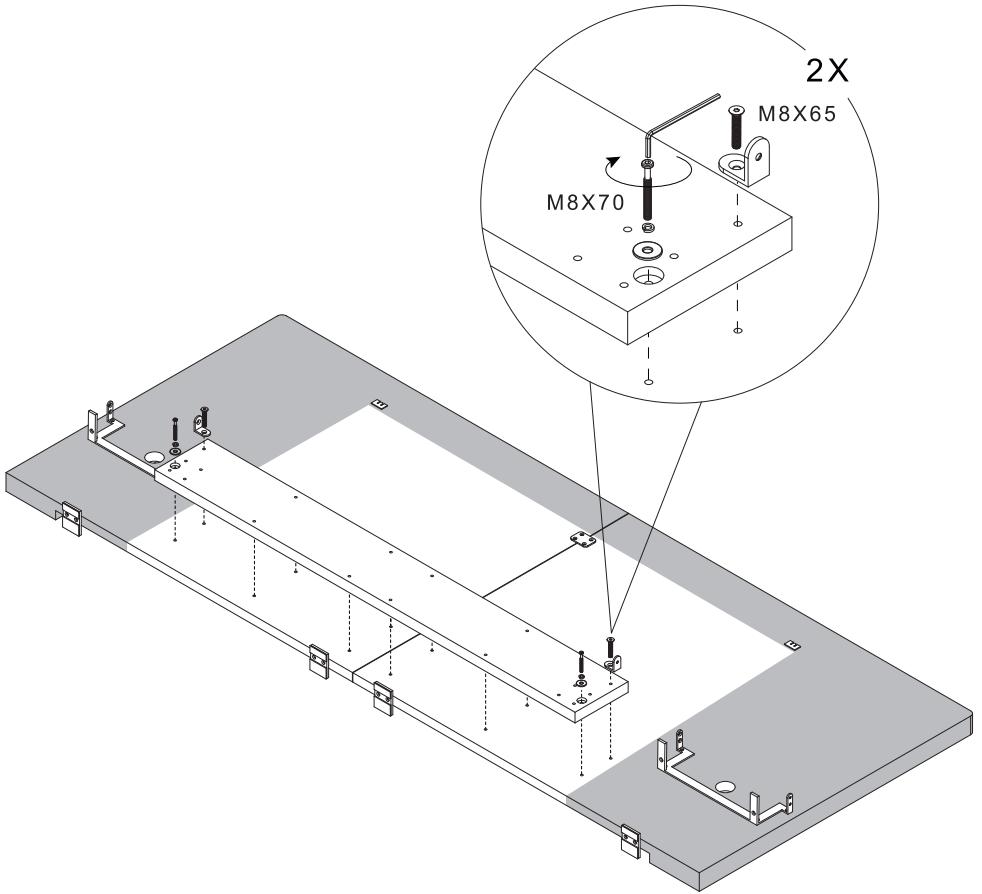


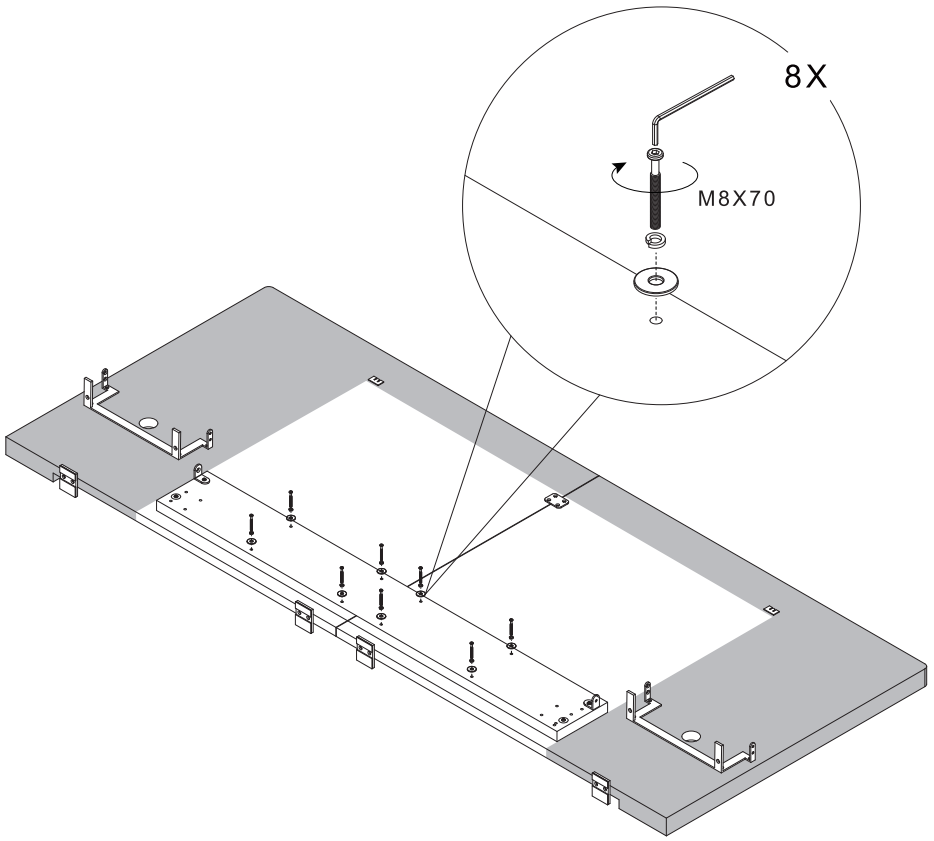


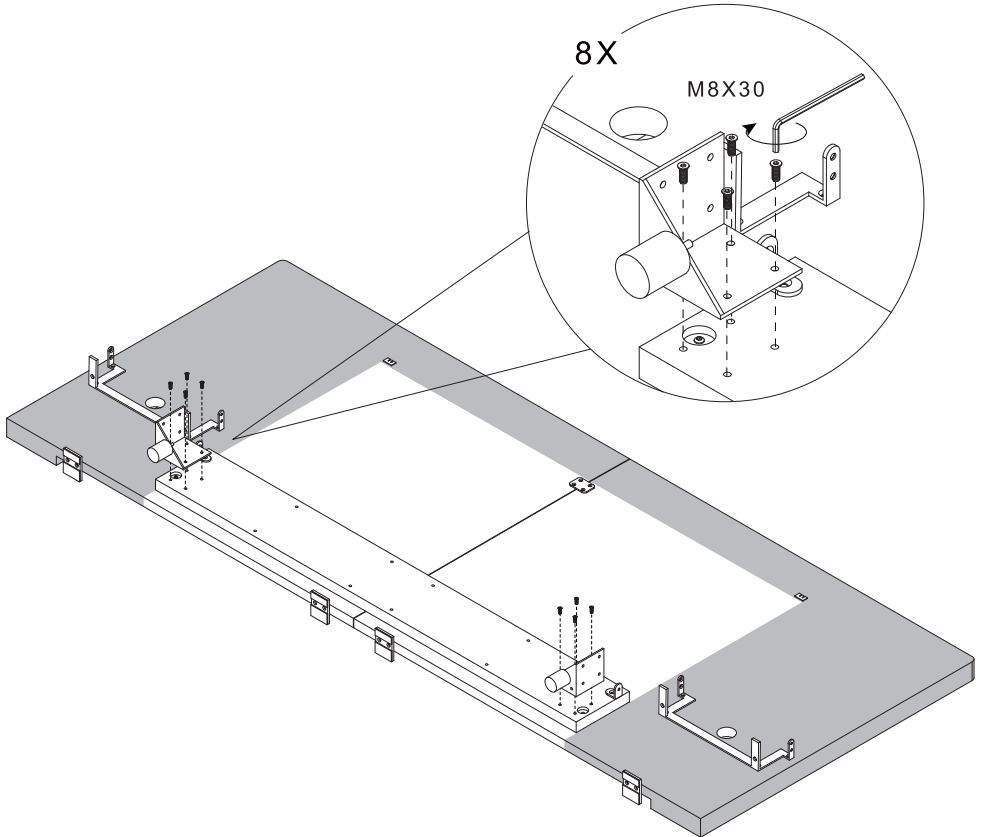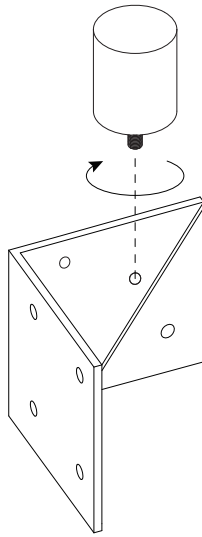


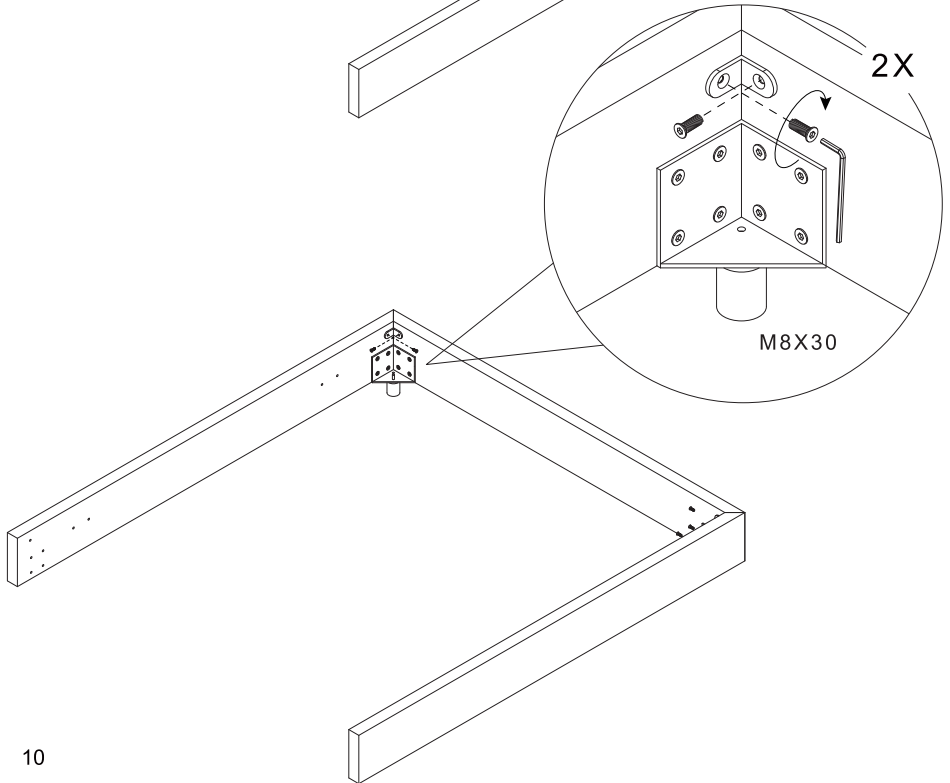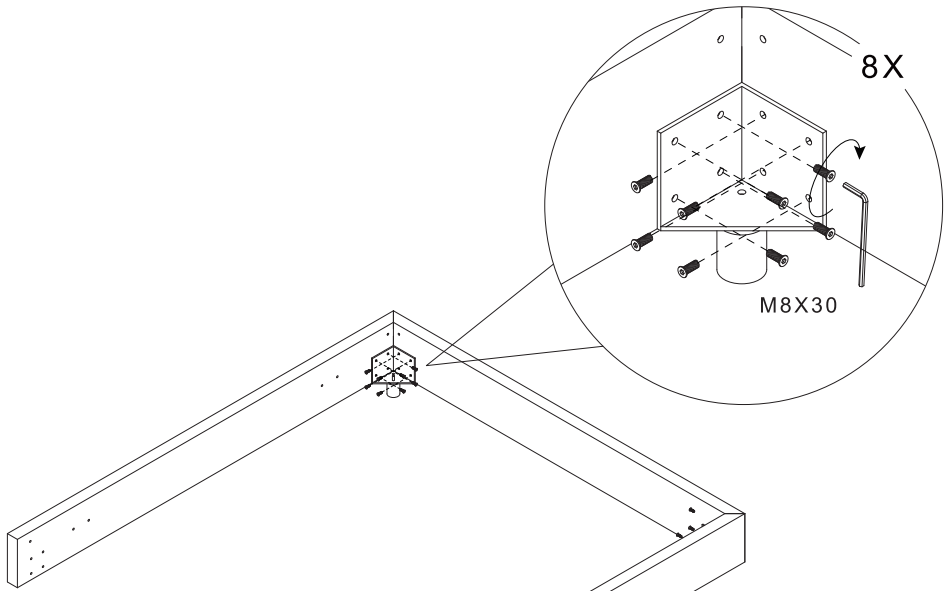


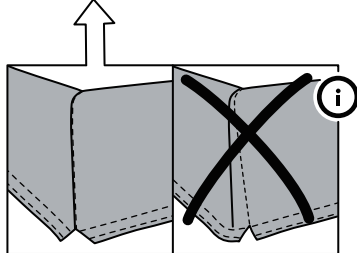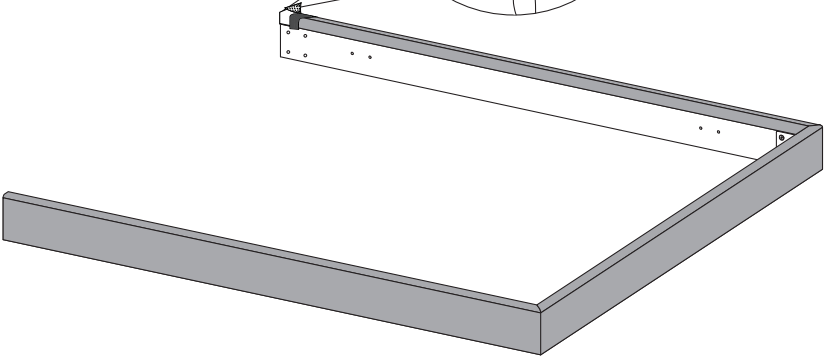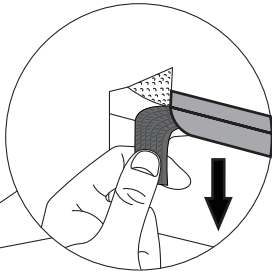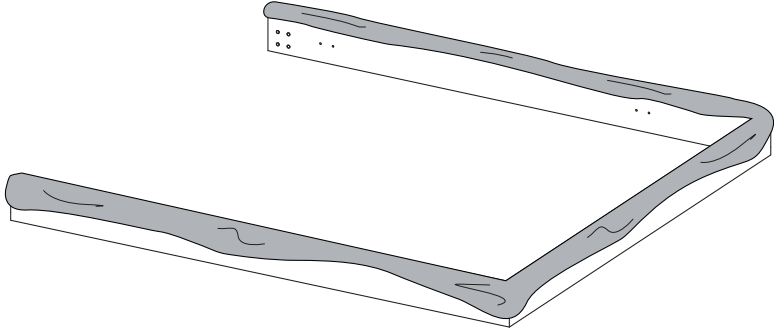



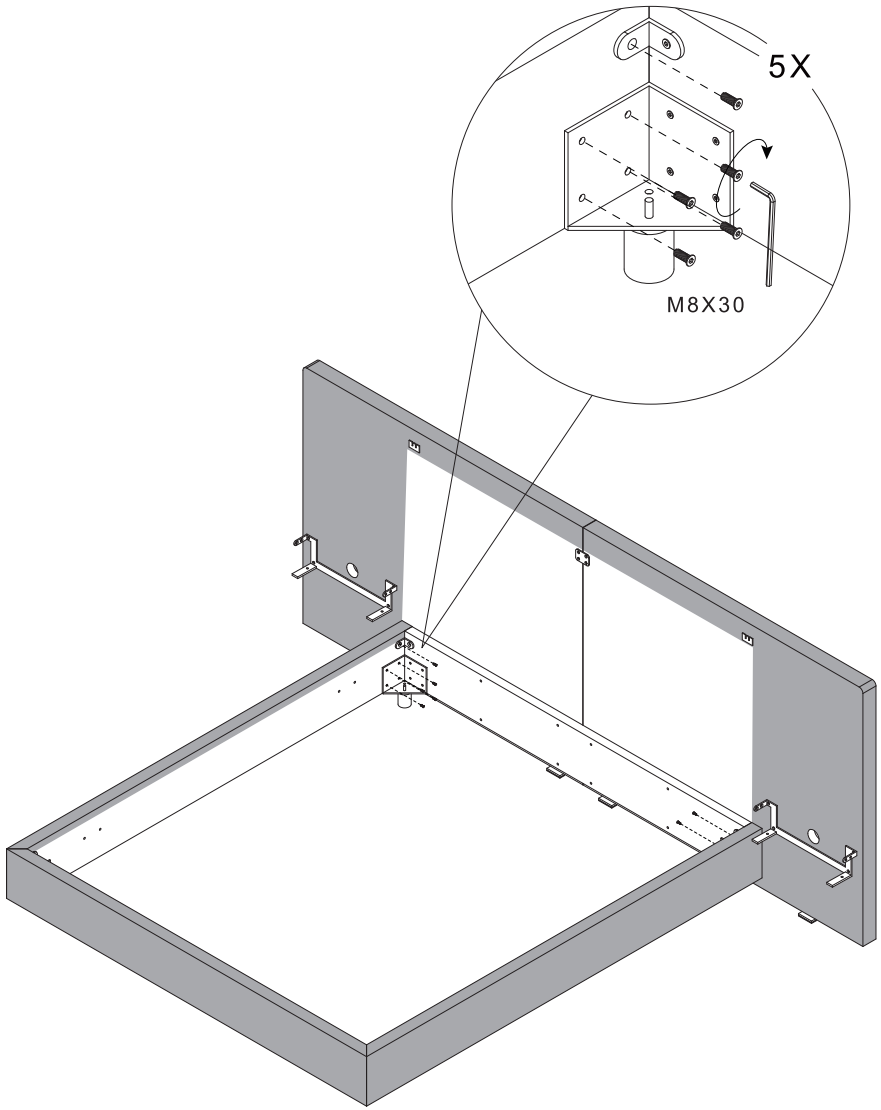


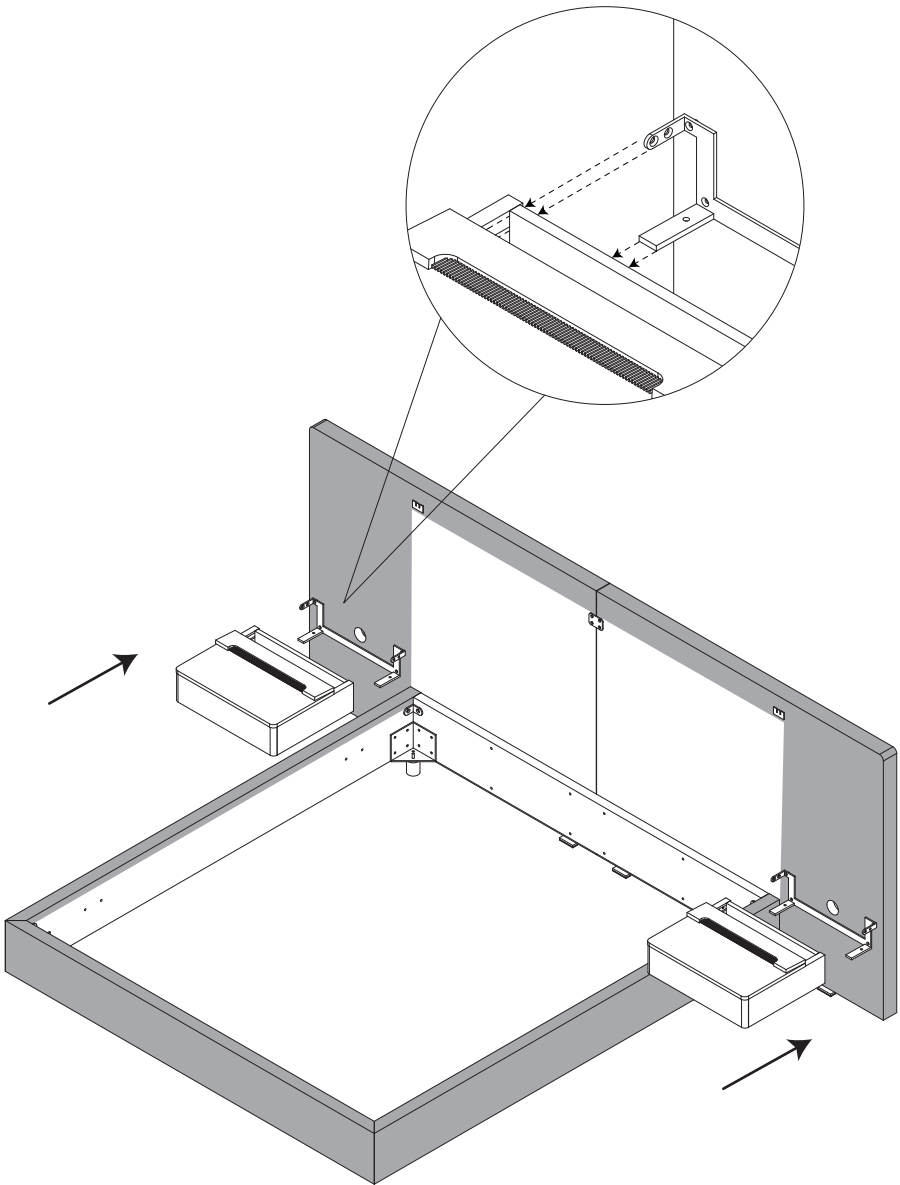


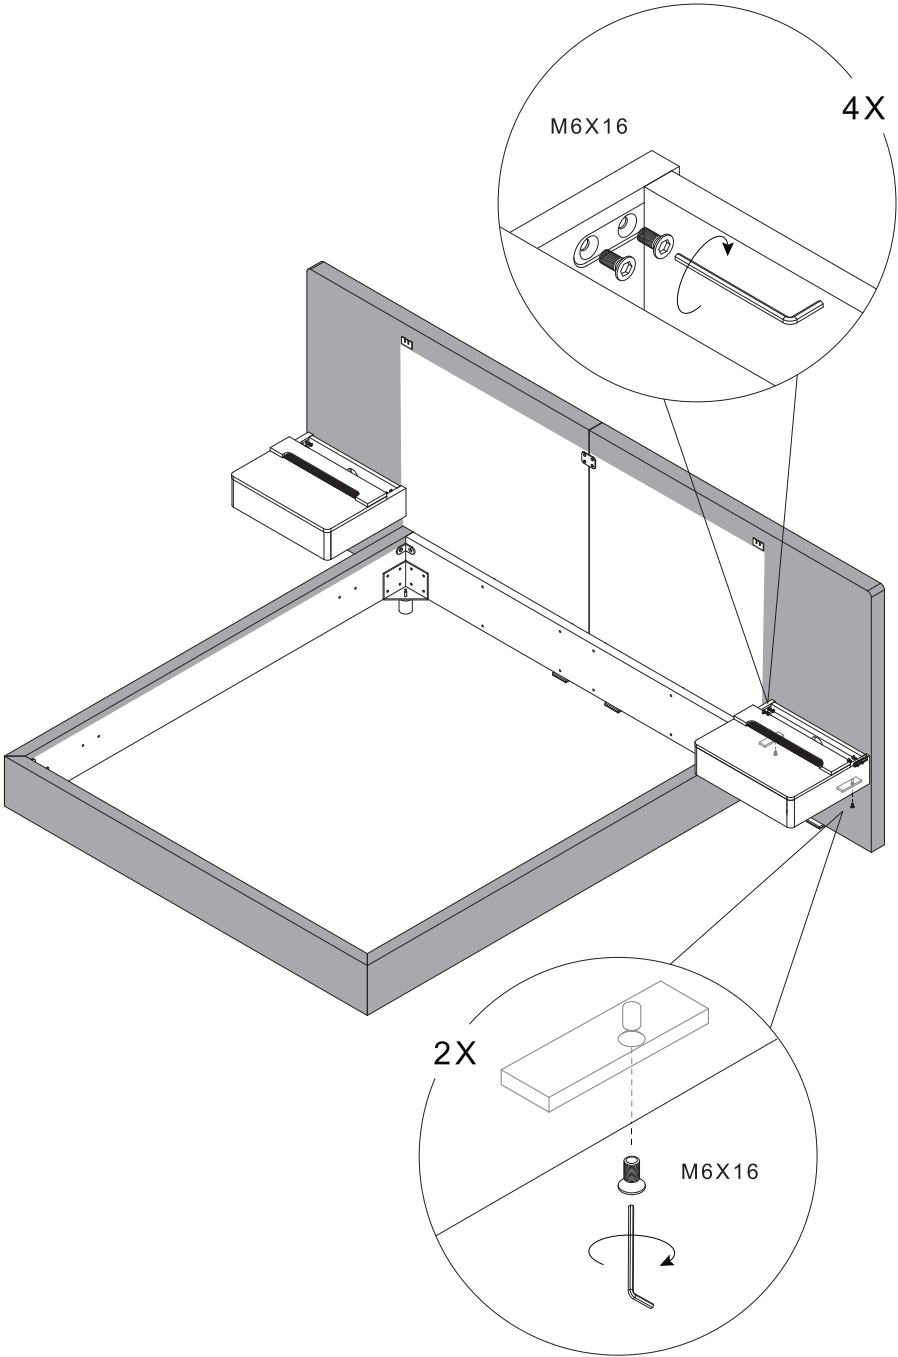


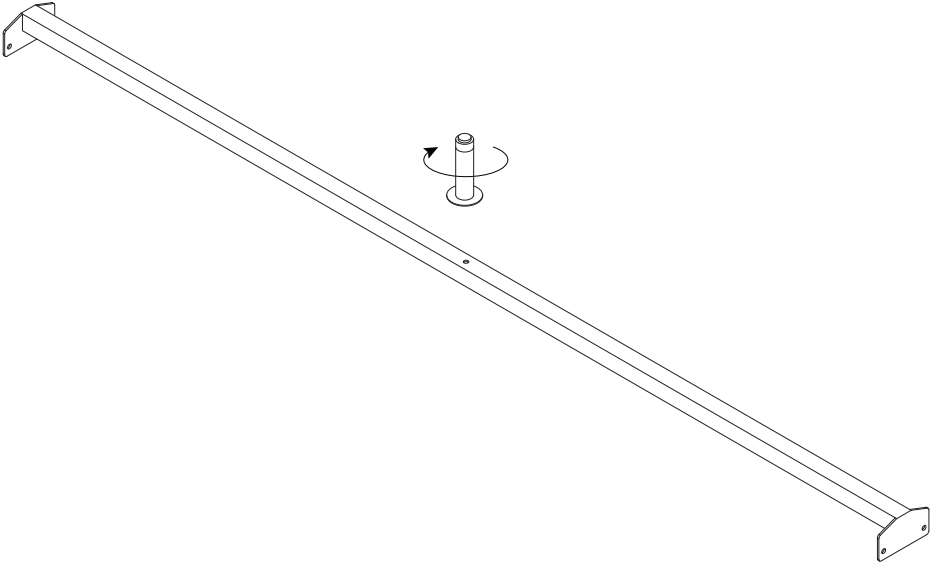


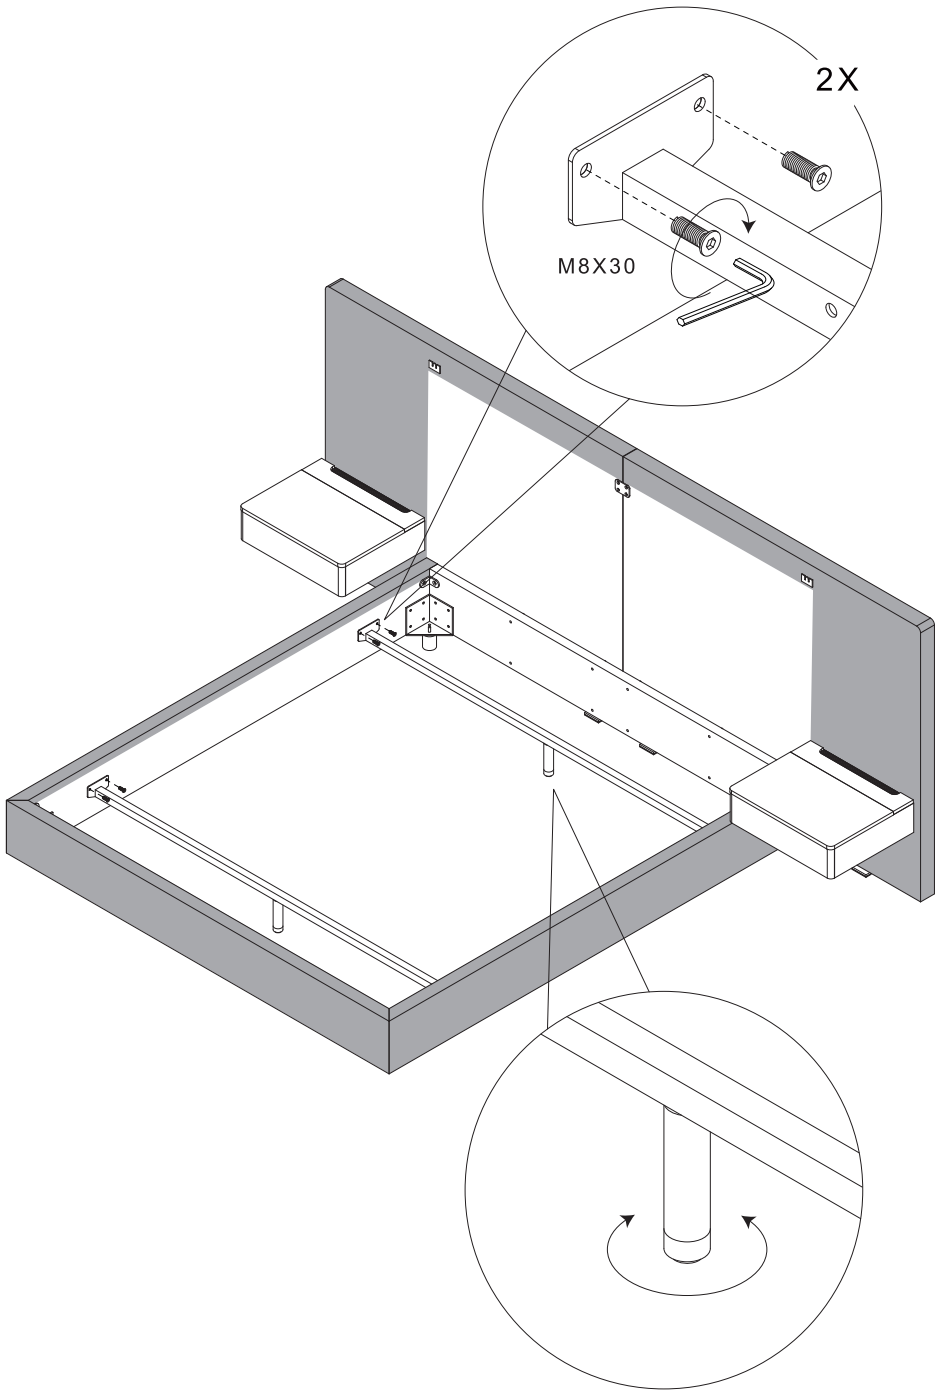

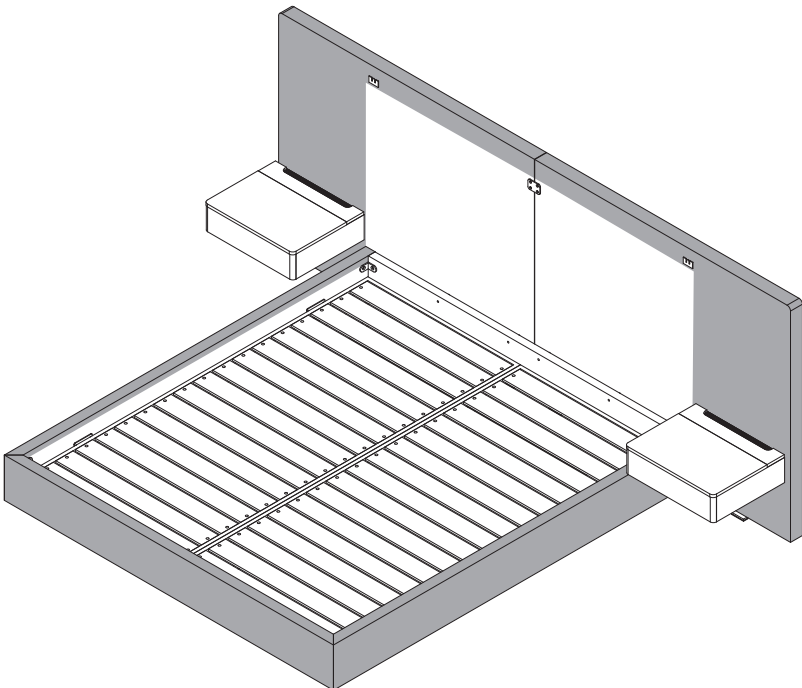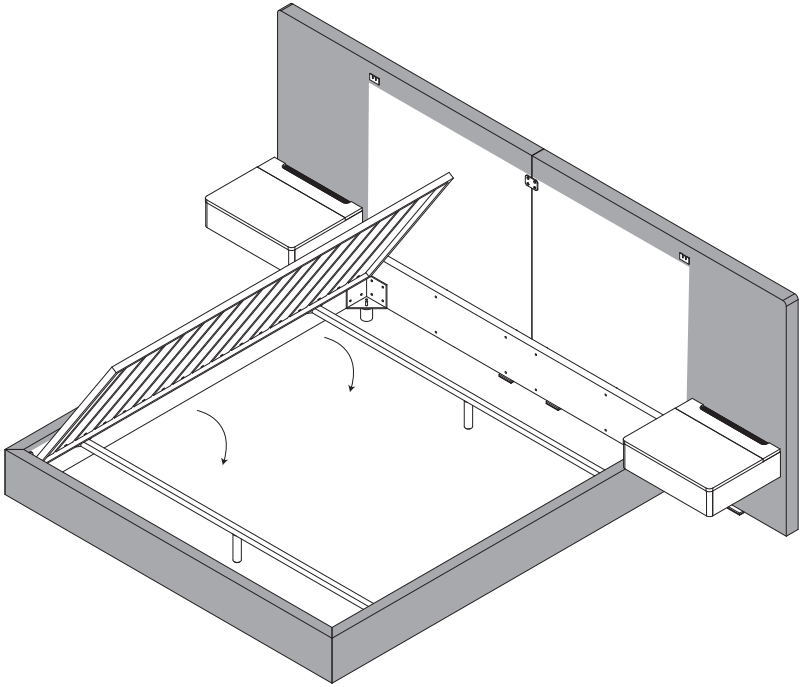

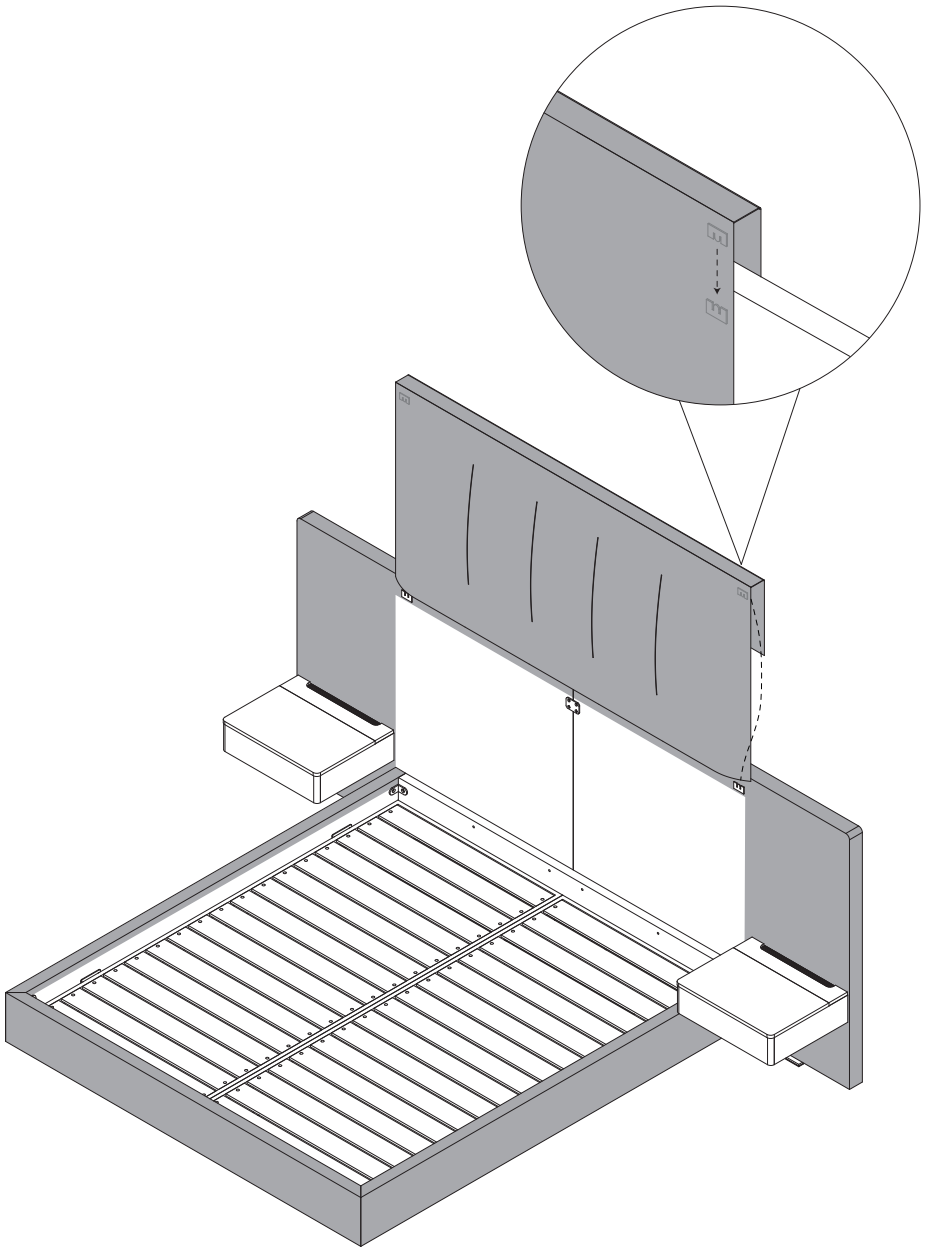

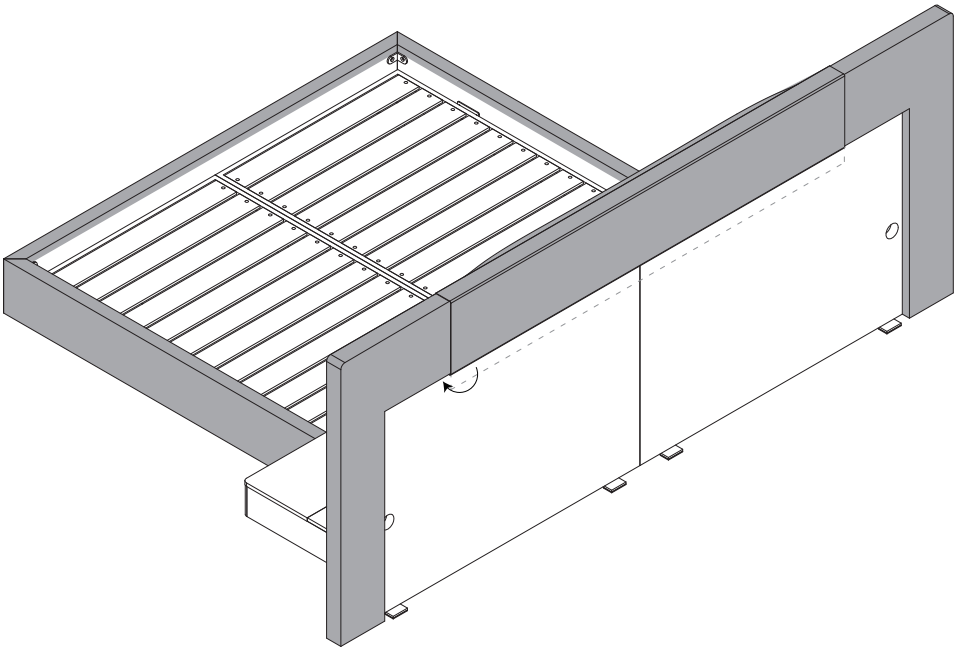

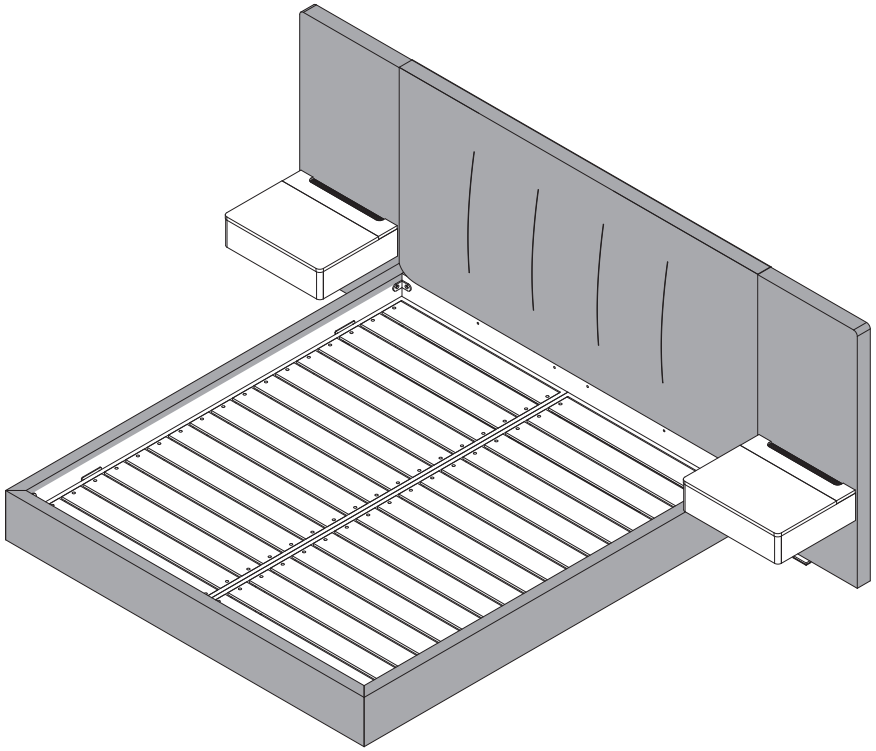



CAMERICHfurniture



camerich_official