


FLAMINGO


C06C0903.

Installation Instruction

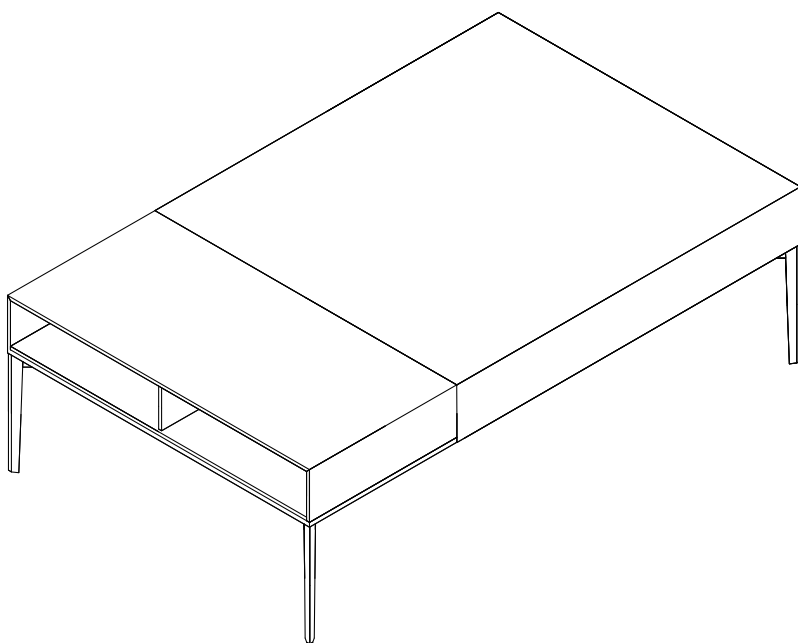


CAMERICH






M8X40mm






34X







M8

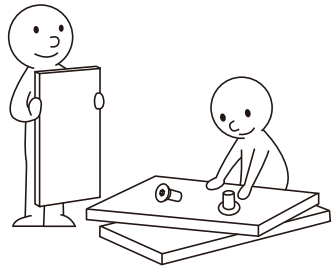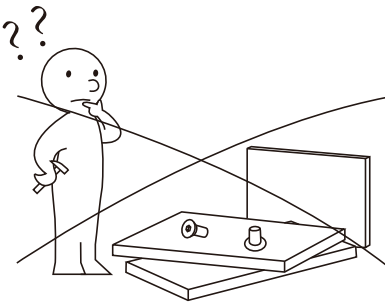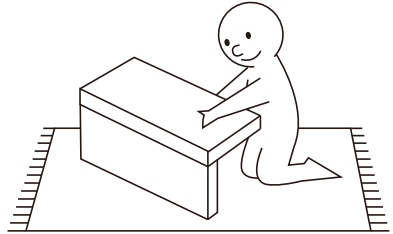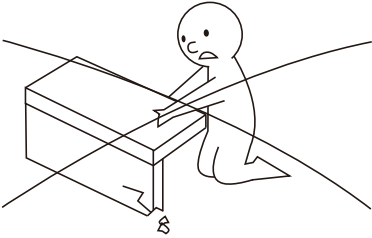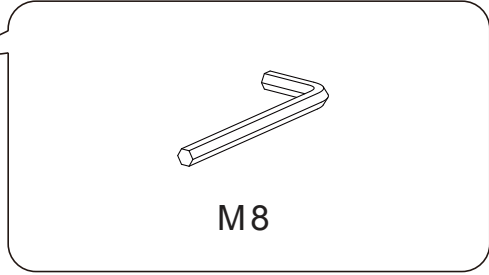


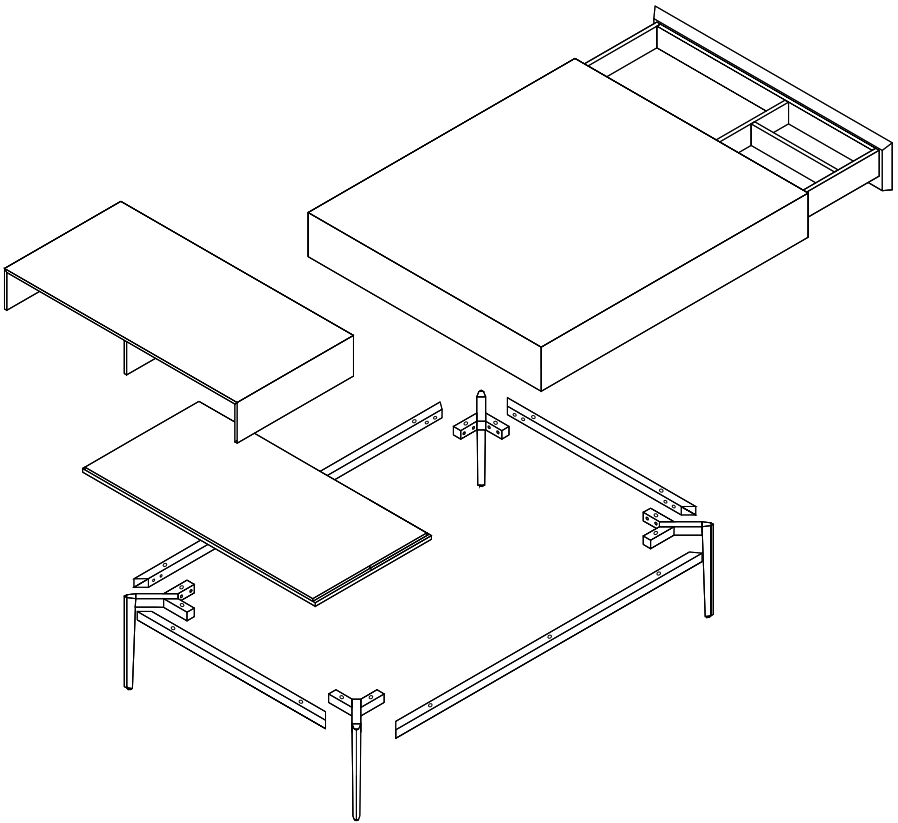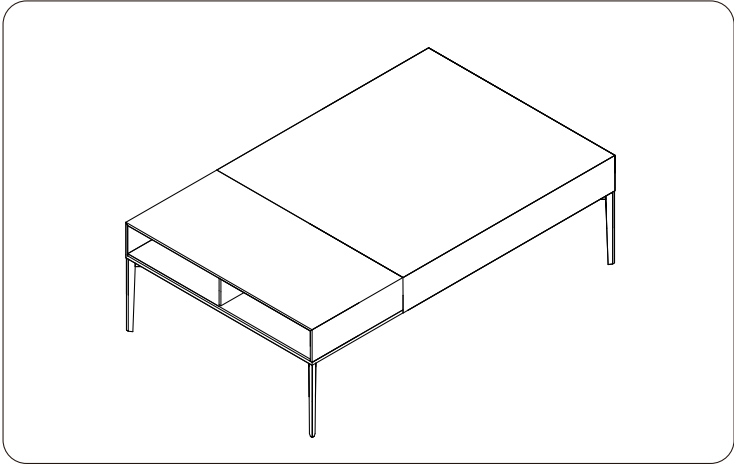


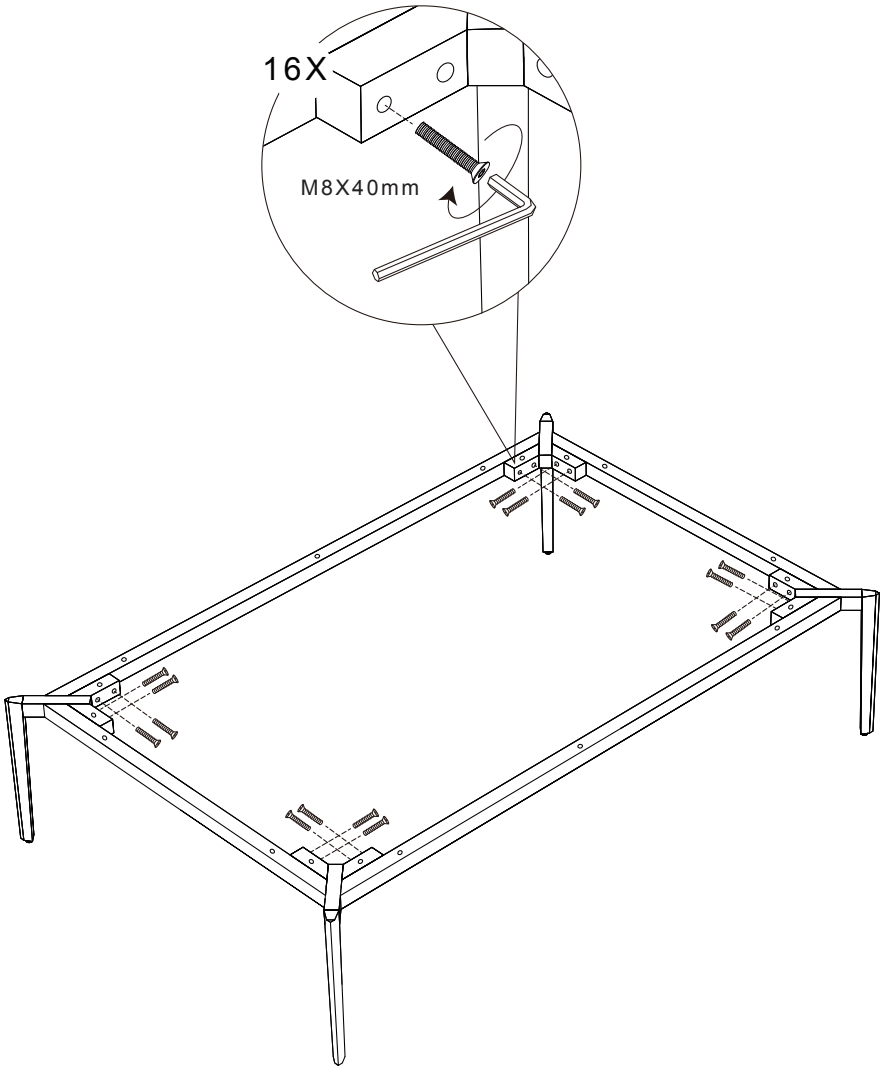

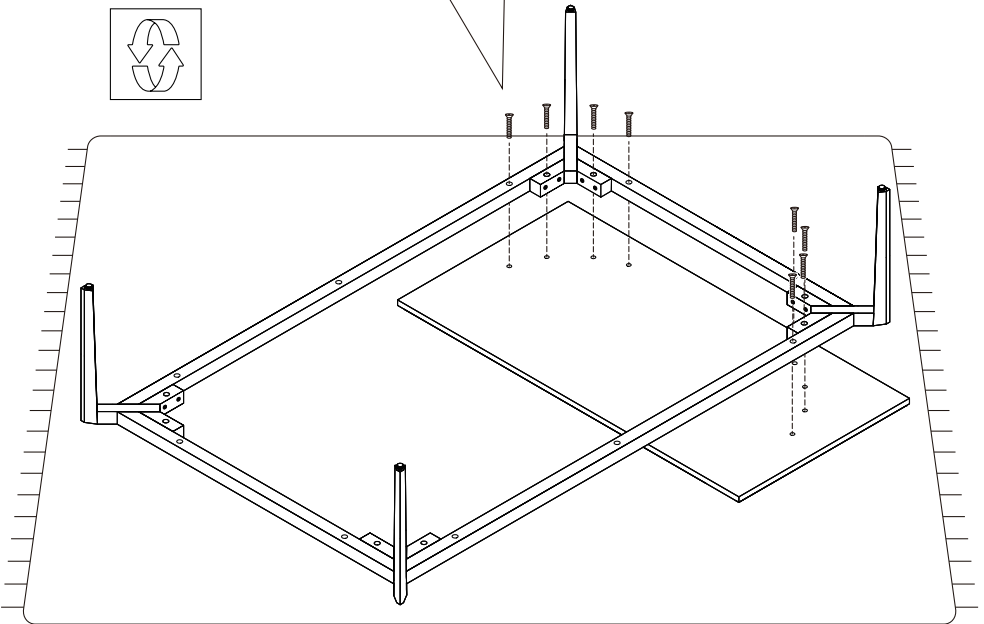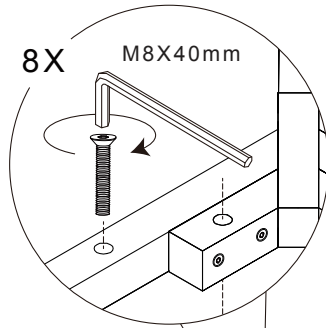

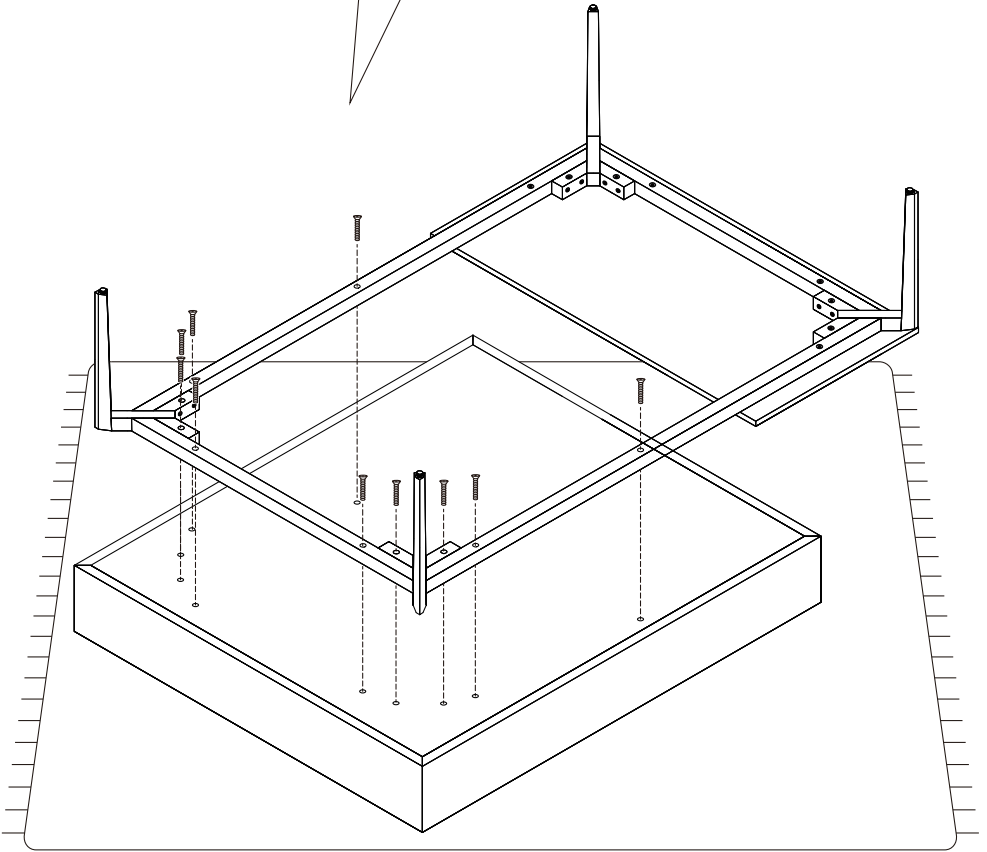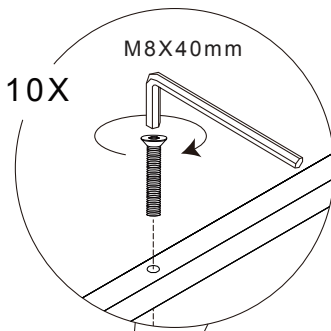

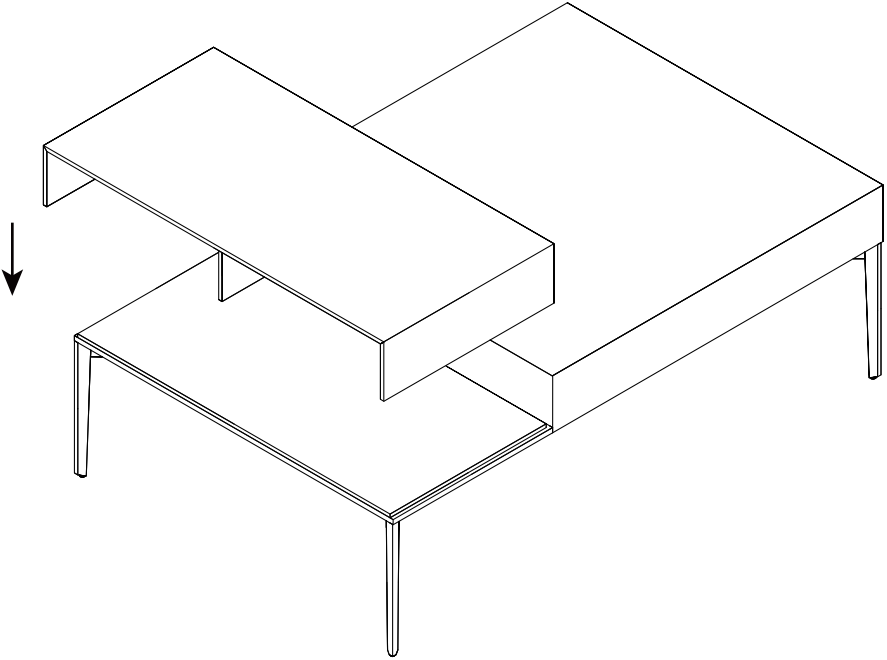

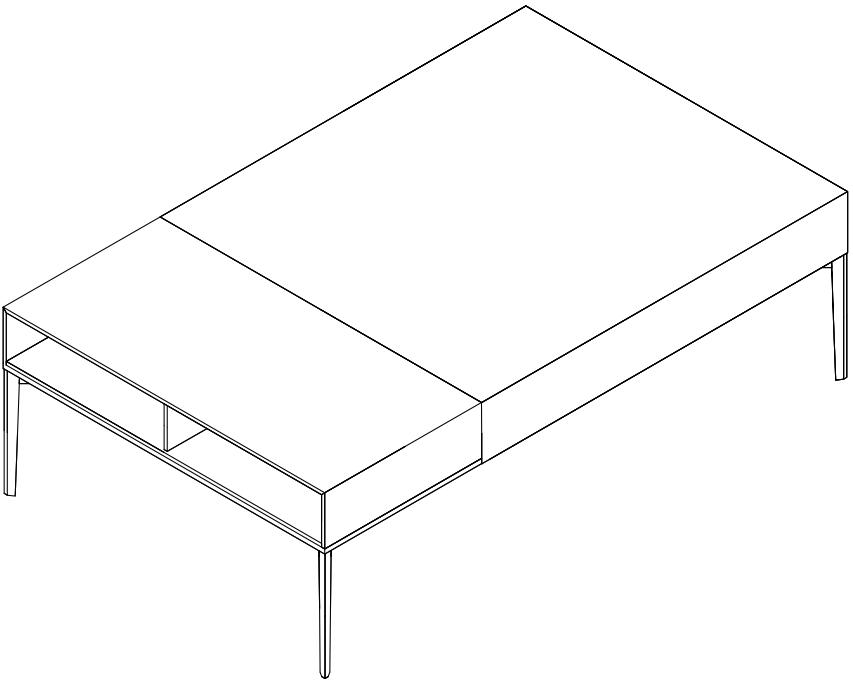



CAMERICHfurniture



camerich_official