


LOTUS

C06B0401.

Installation Instruction

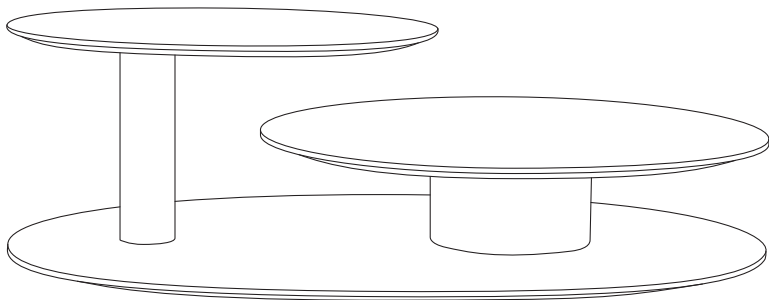

CAMERICH

M6X16mm



4X

M6X16mm




4X

M8X20mm



8X

M6X40mm




4X


M6X16mm




1X








M3






M4





M5

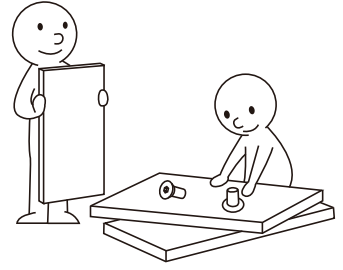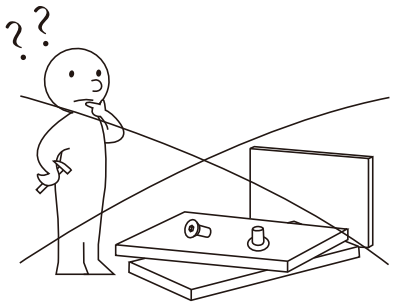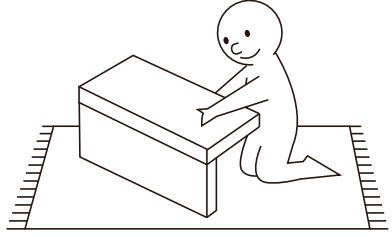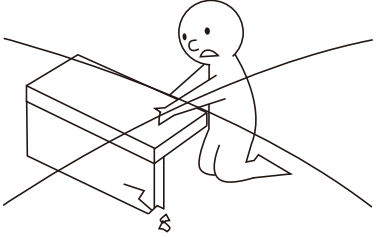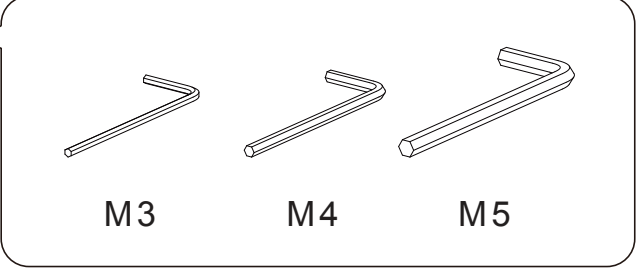


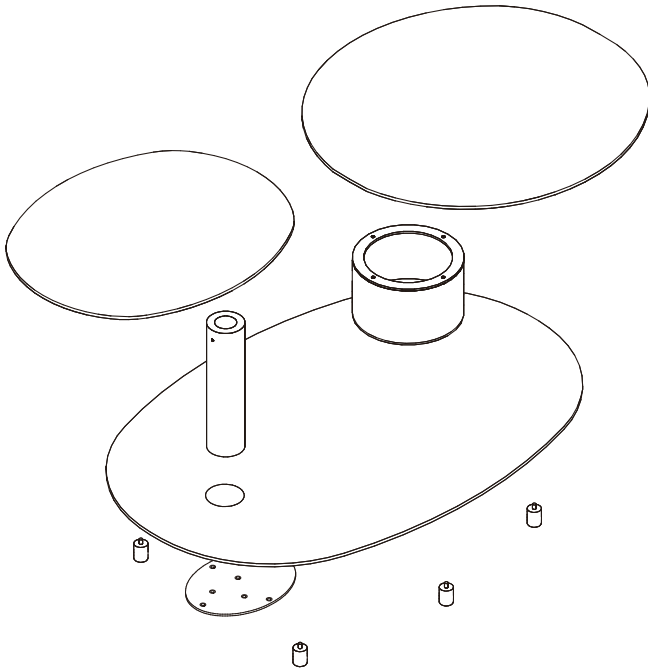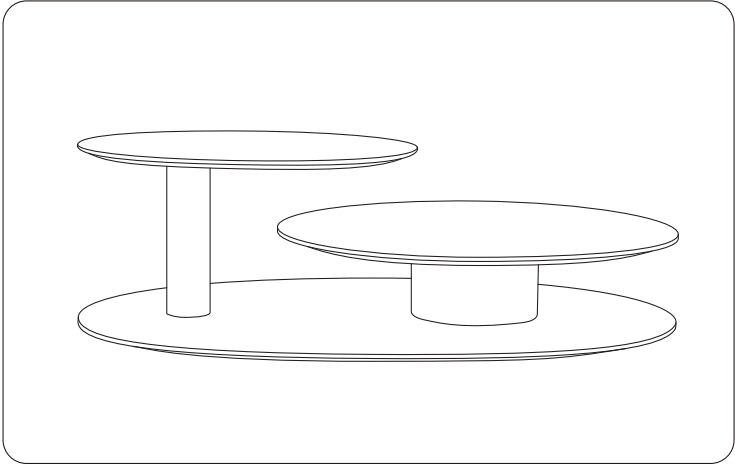


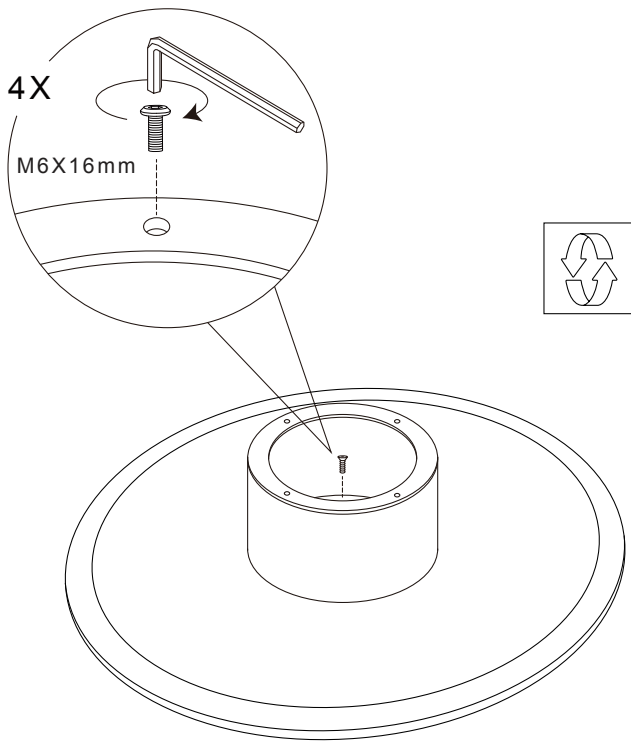


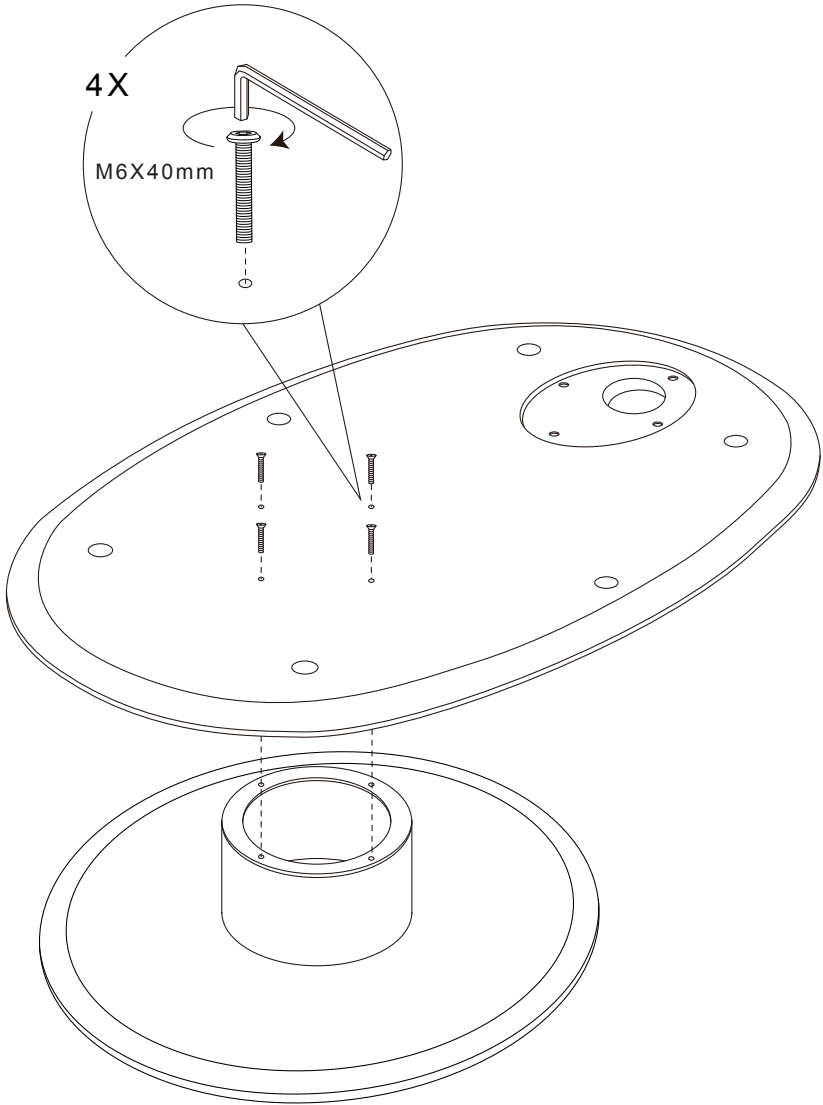


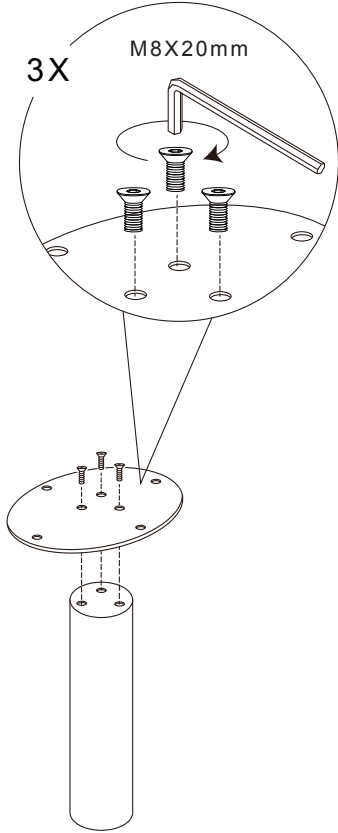


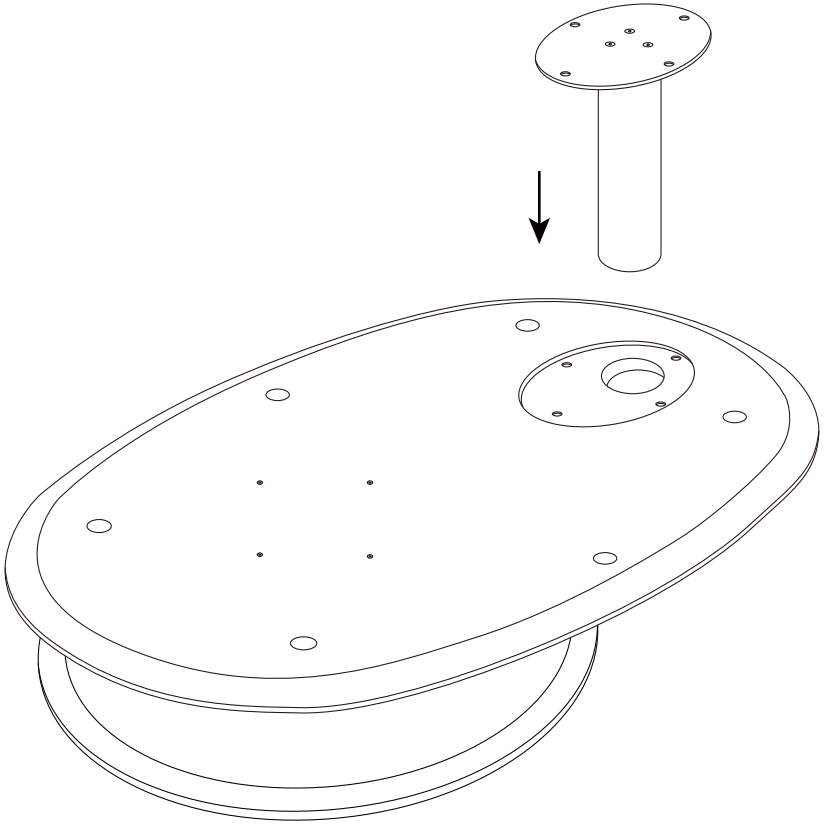


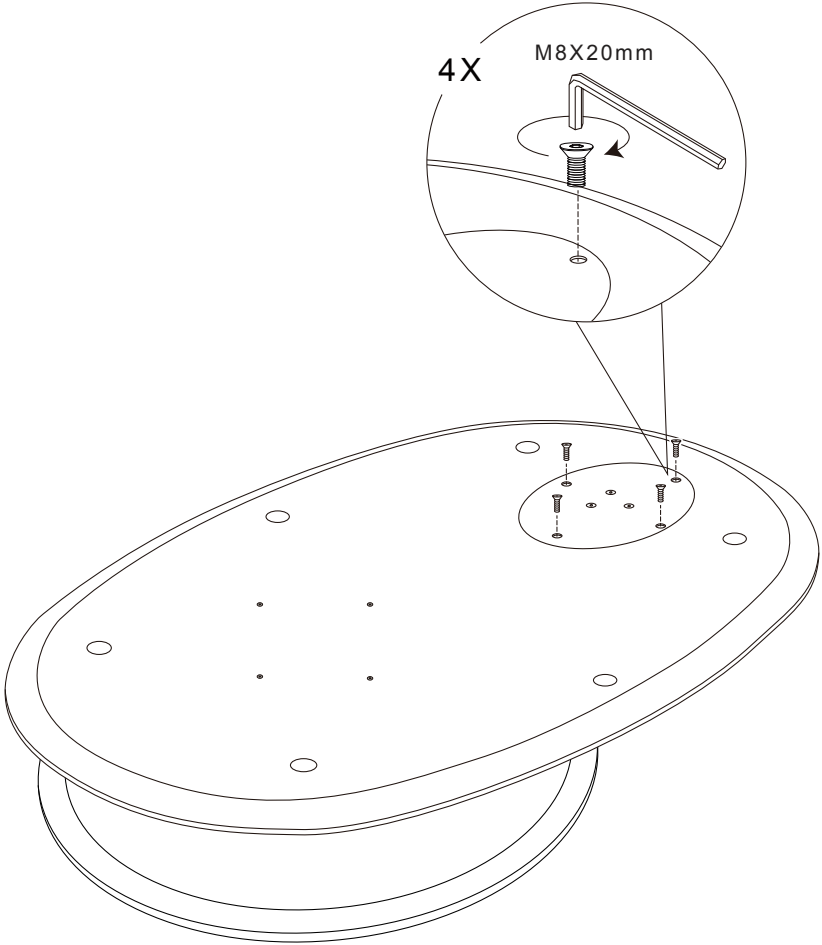


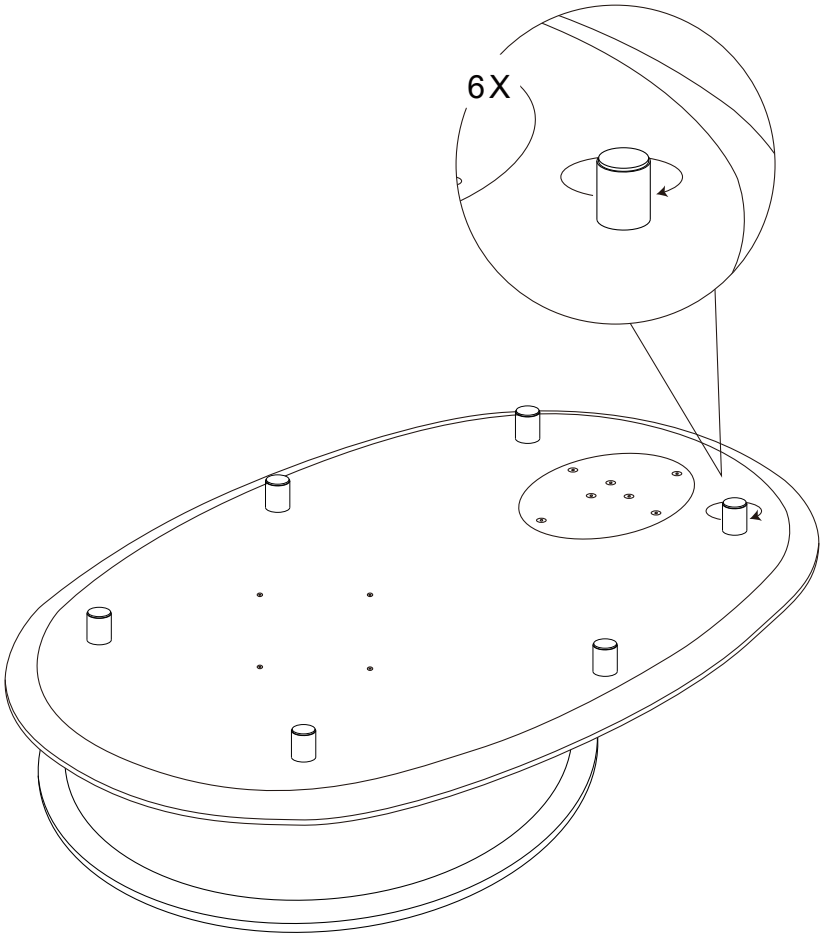


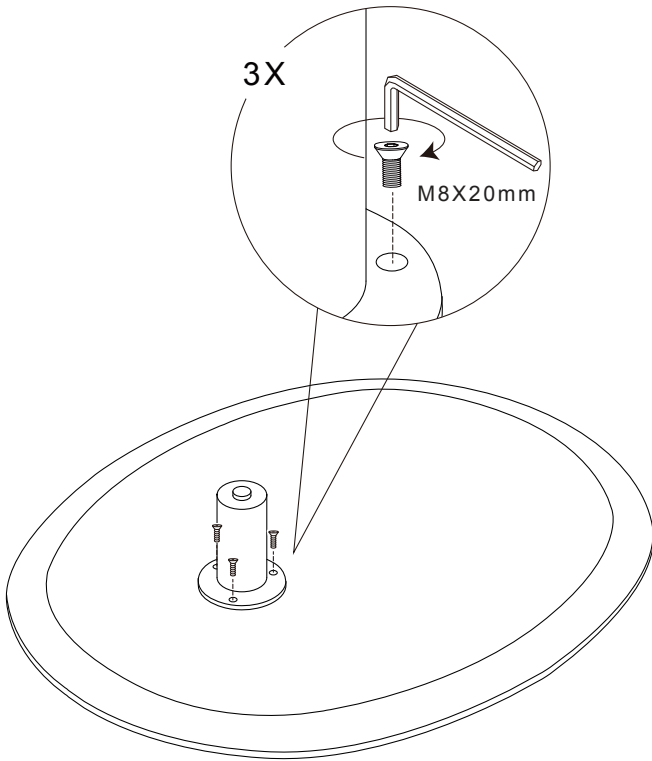

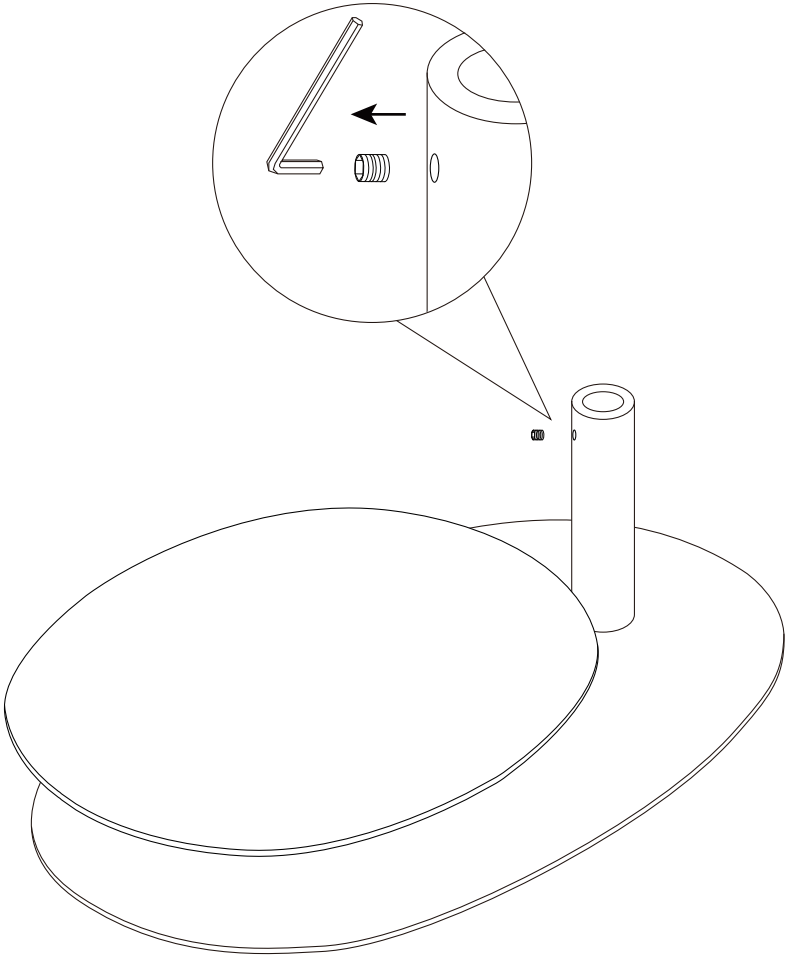

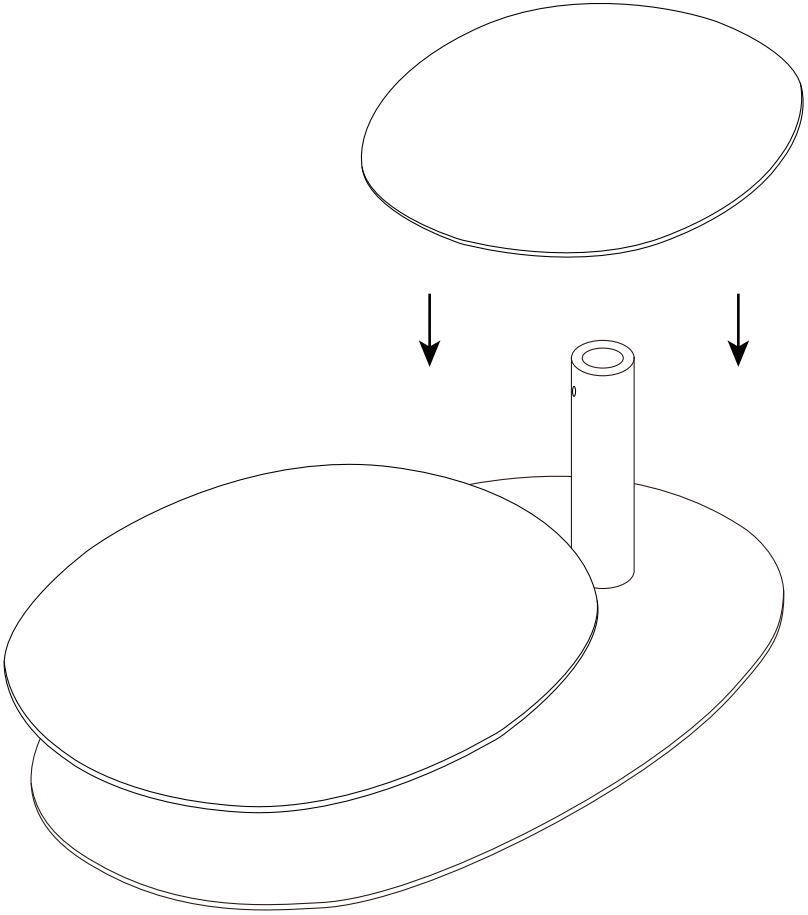

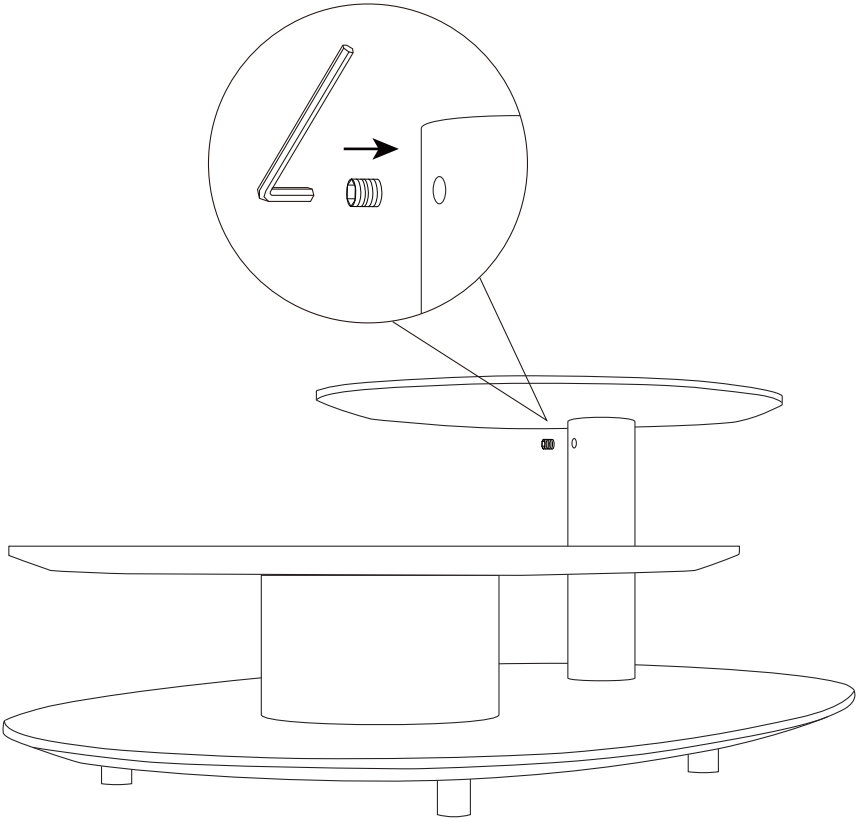

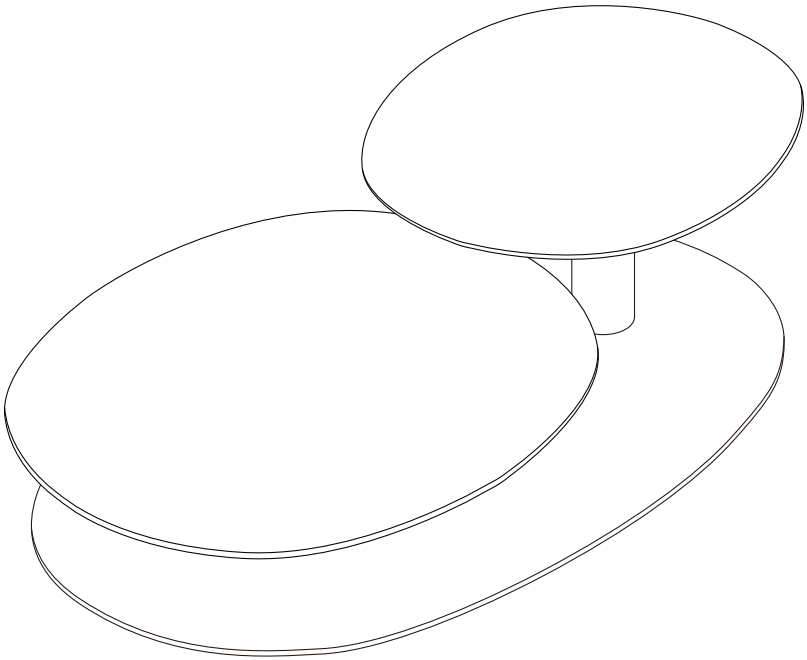



CAMERICHfurniture



camerich_official