


CAMERICH


RUBIX

C06C0701. C06C0702

Install Instruction

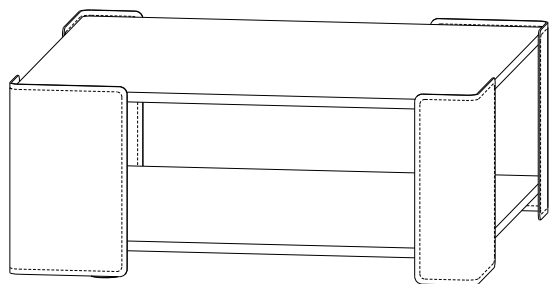

RUBIX

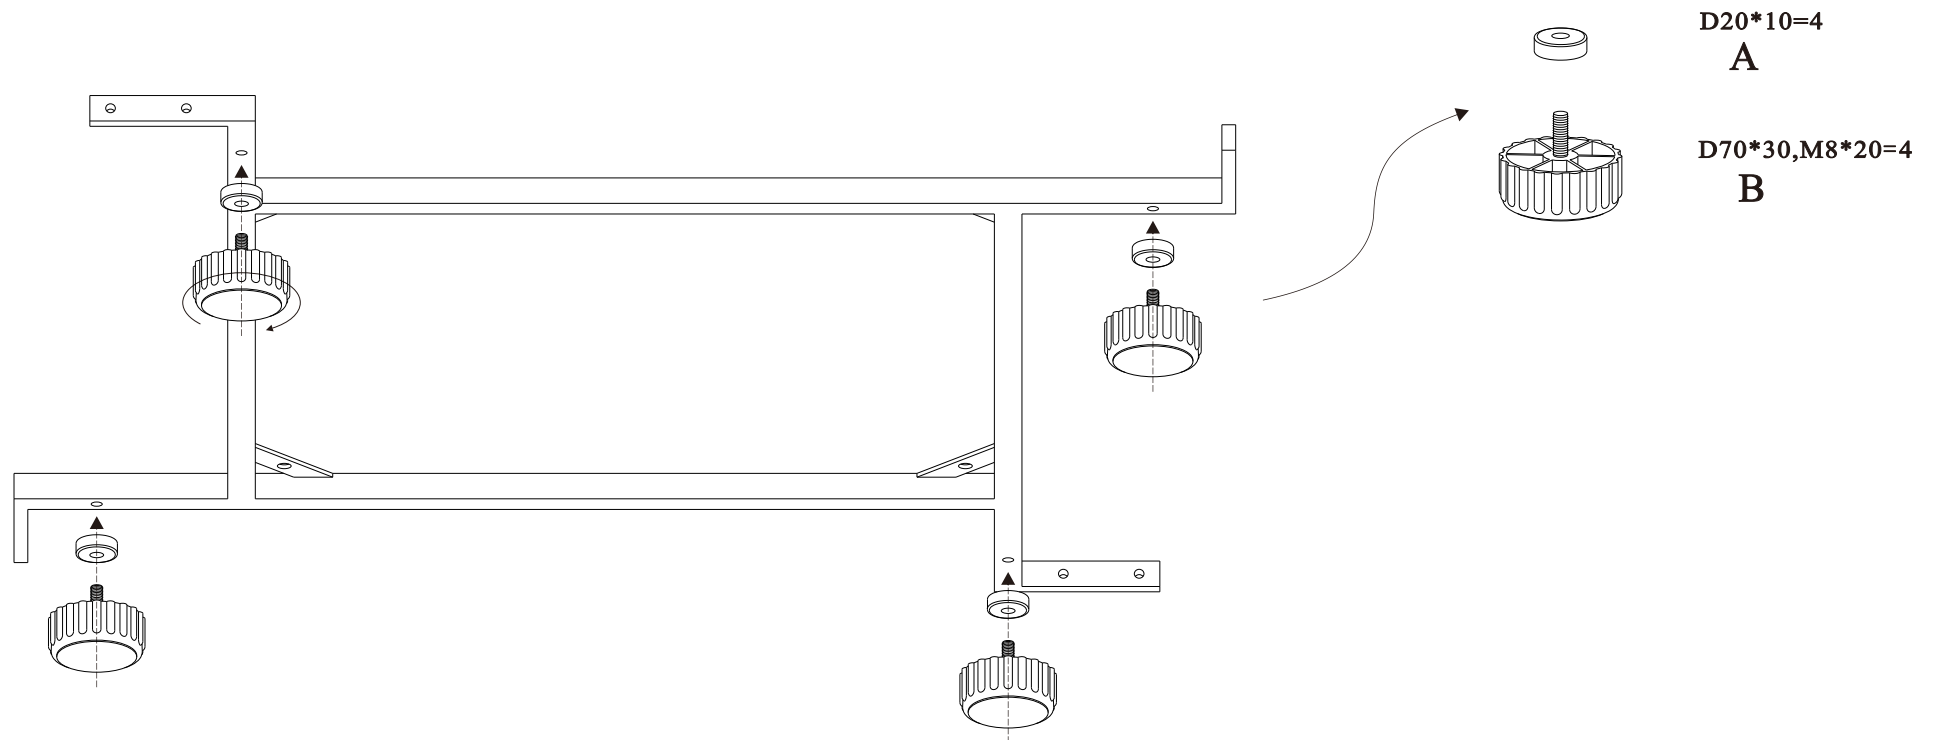


D20*10=4

D70*30,M8*20=4

A

B

RUBIX

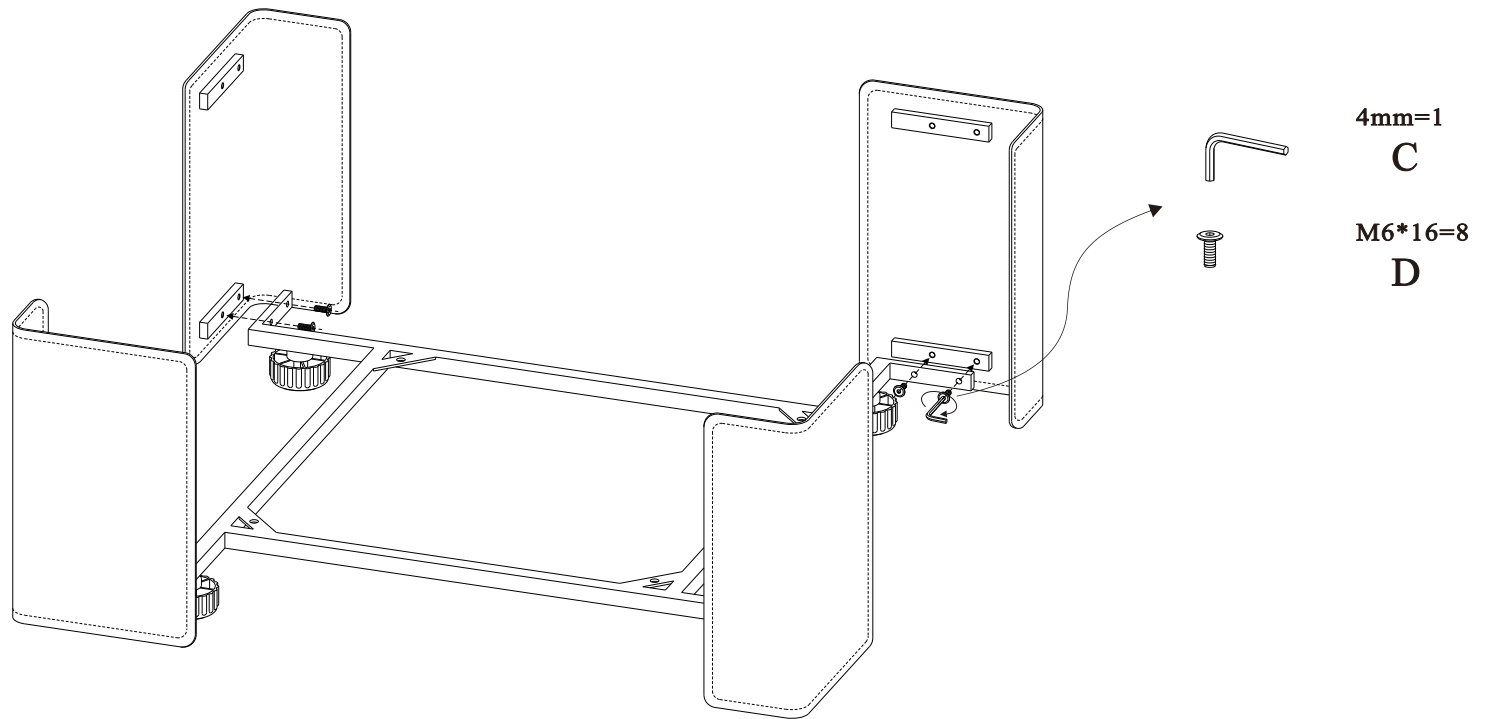



4mm=1

M6*16=8

C

D


RUBIX

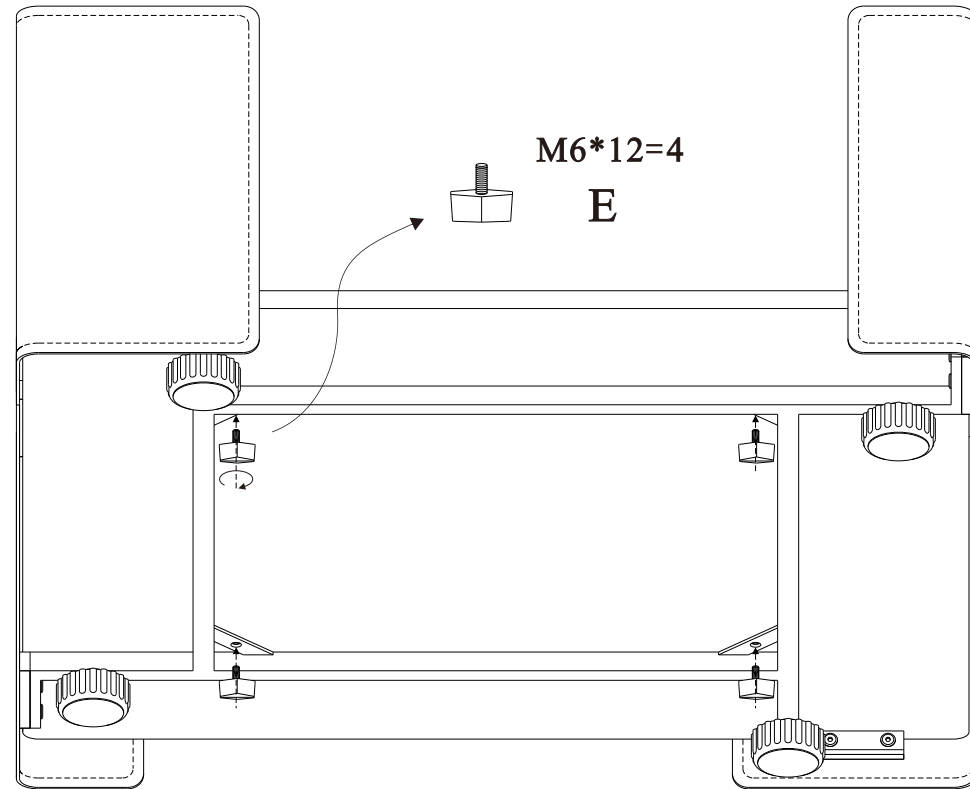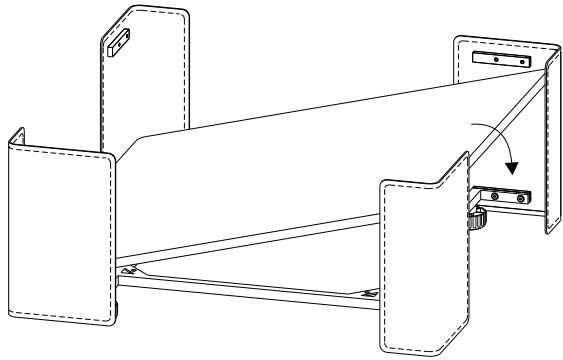

M6*12=4

E

RUBIX

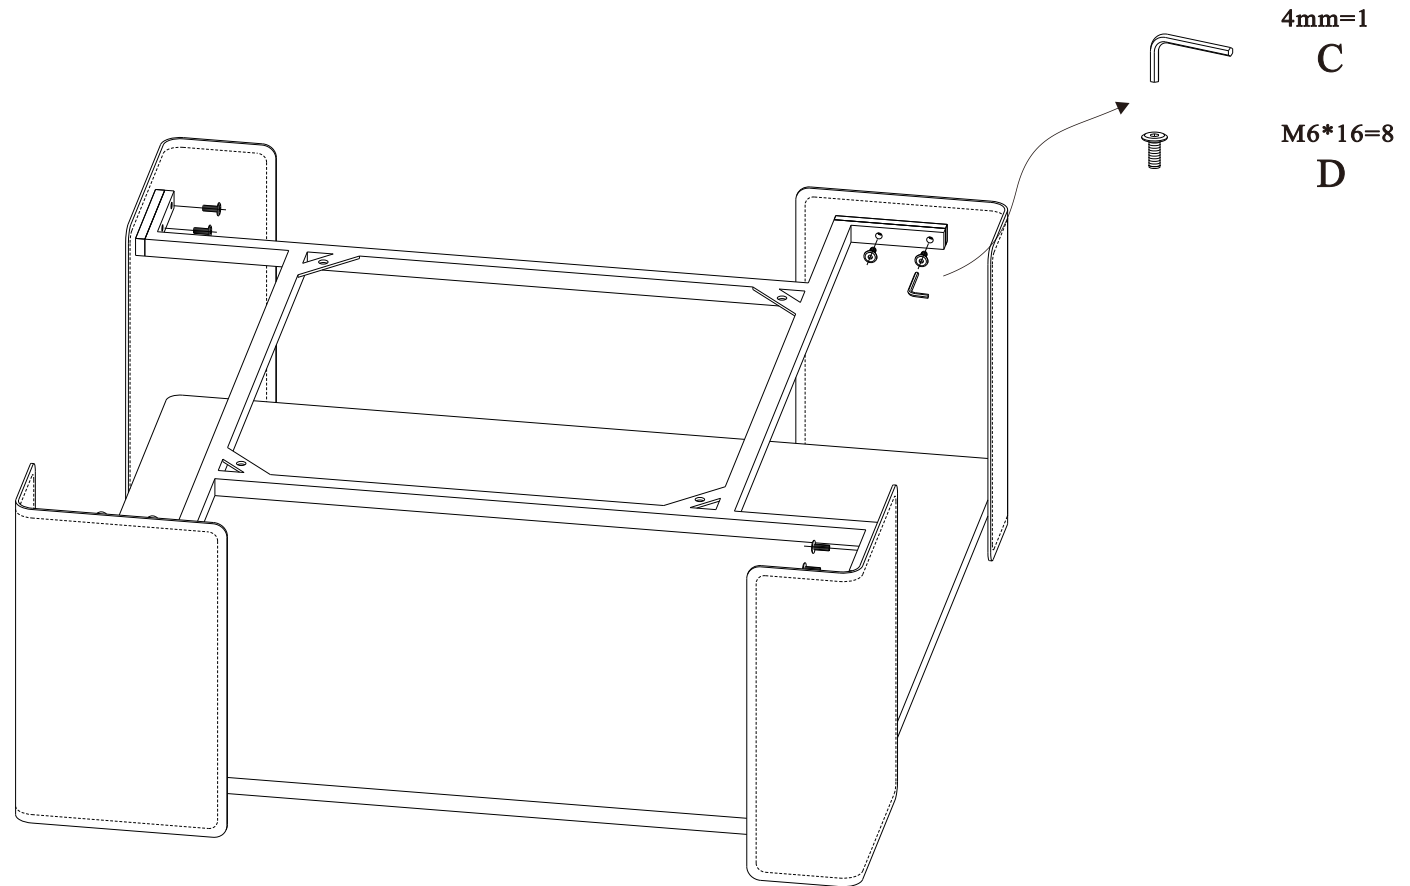

4mm=1

M6*16=8


C

D

RUBIX

M6*12=4

E

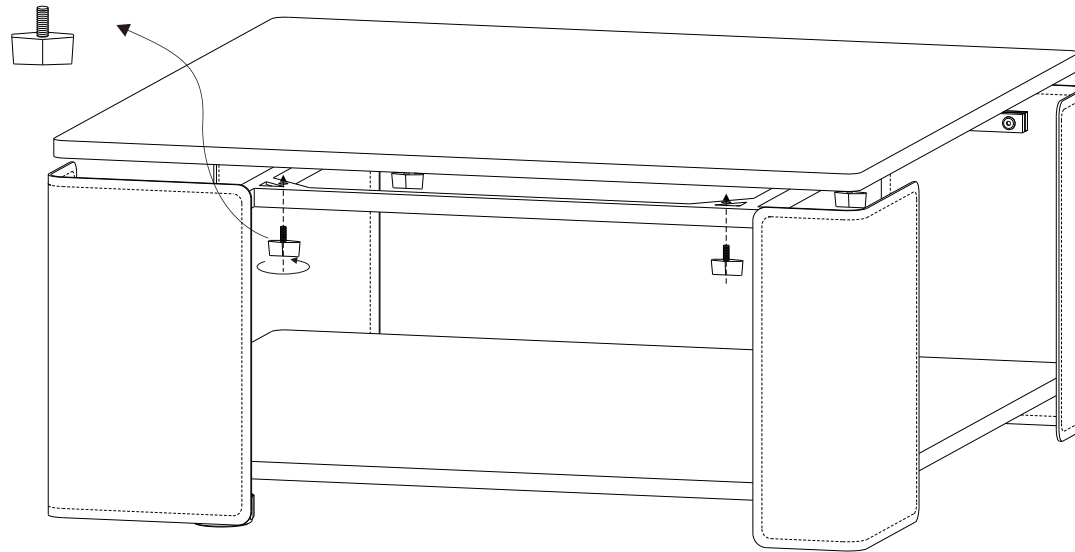

M6*12=4

E