
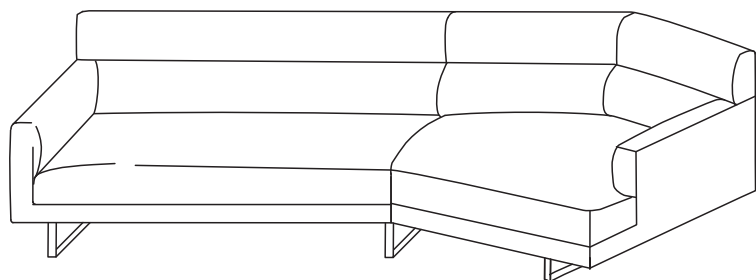
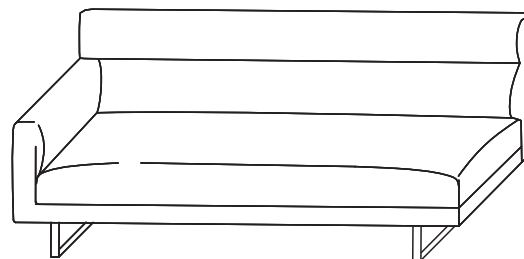
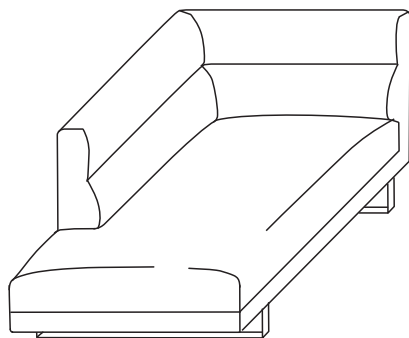


CAMERICH

AMOR SOFA



C01B0101.~~C01B0119.

Install Instruction


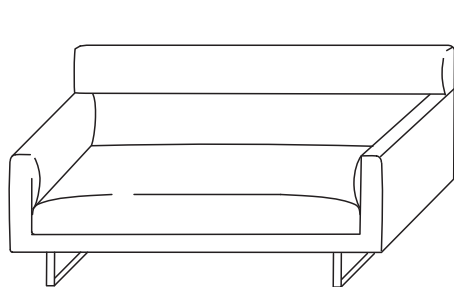


AMOR SOFA

1-1

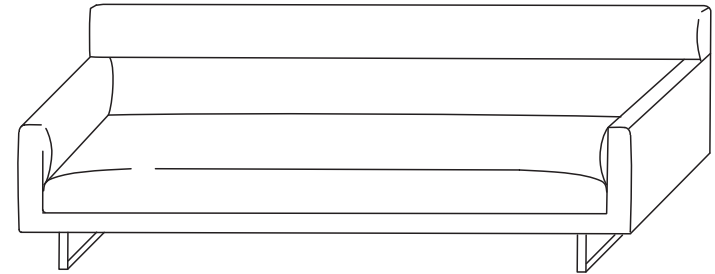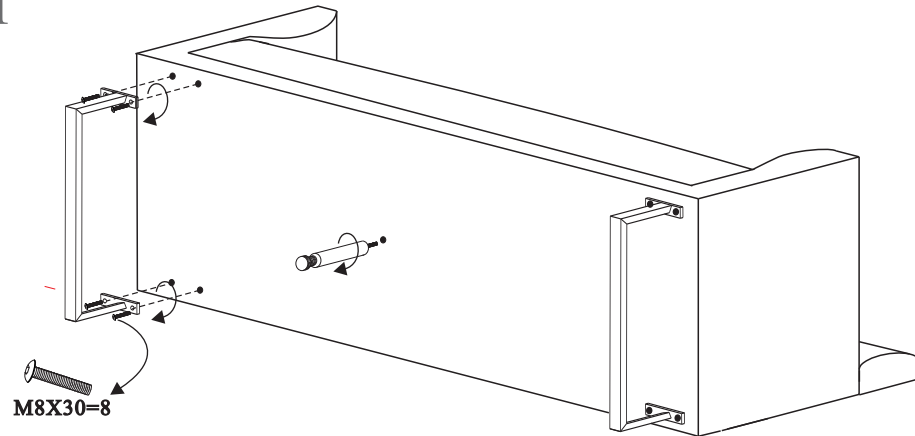

2-1

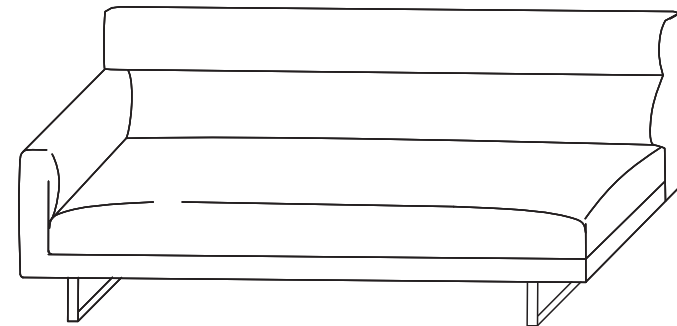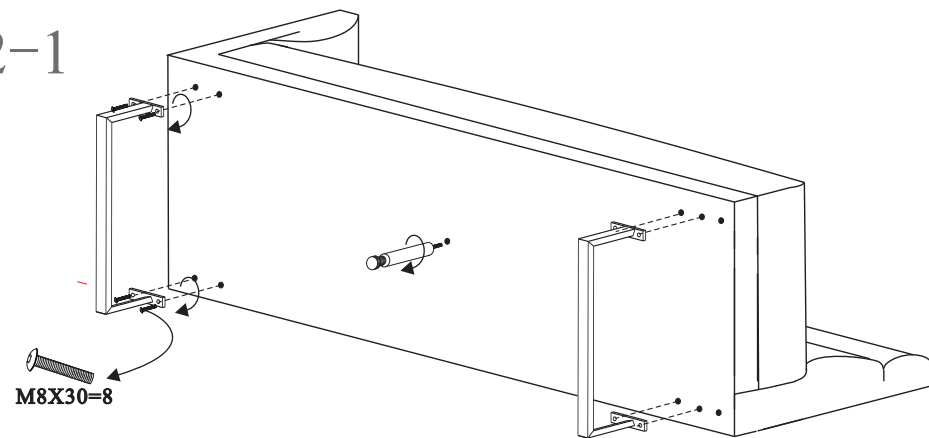

M8X30=8




L=Φ32X140MM=1




M5

AMOR SOFA


3-1

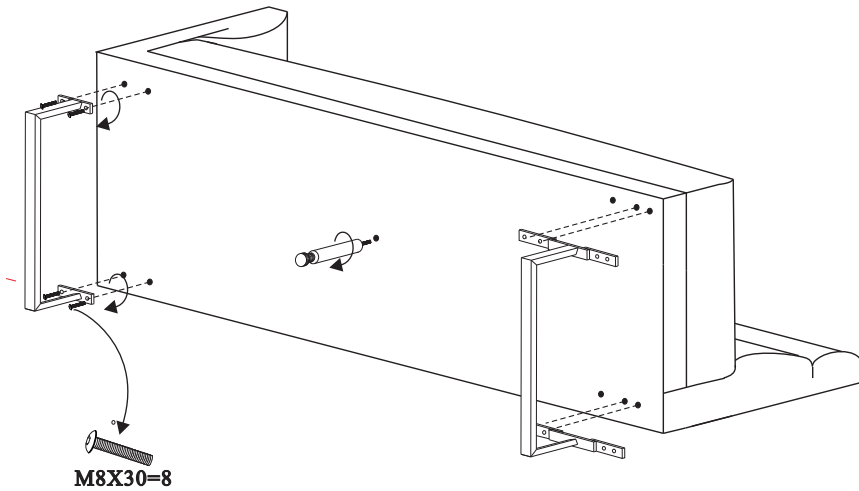

3-3

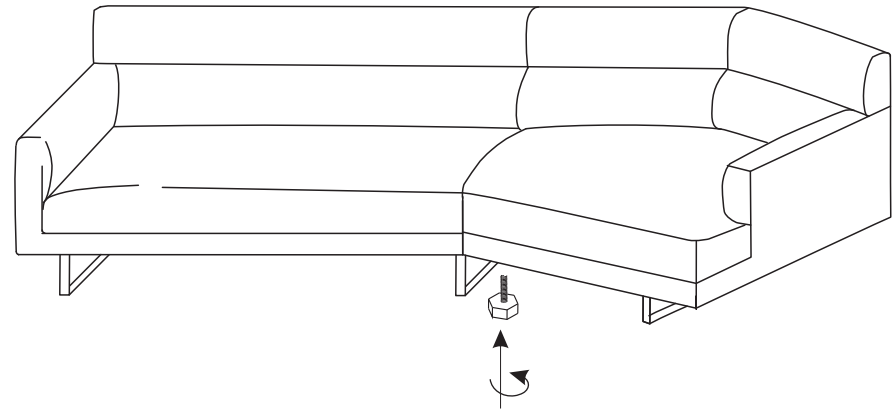

3-2

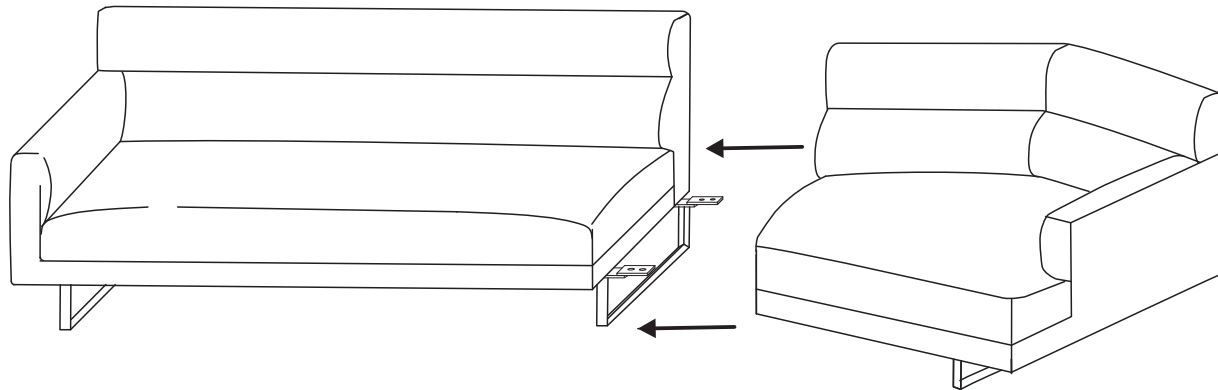

M8X30=8



L=Φ32X140MM=2



M5



2