



WAKE PLUS

Installation Instruction

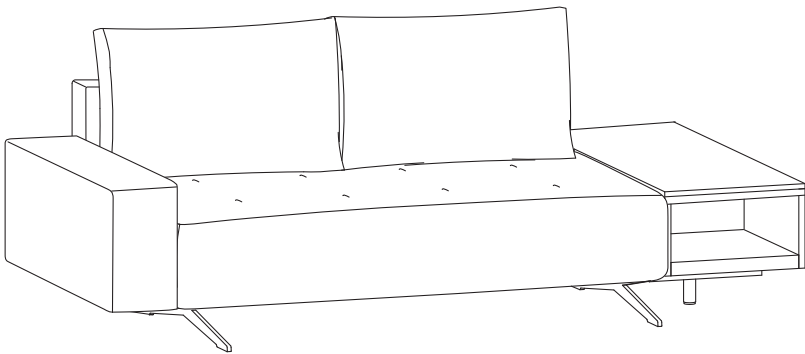


CAMERICH

M8X30mm




M8X45mm




D35X110mm







2X











M5












M5

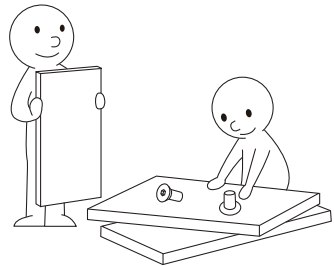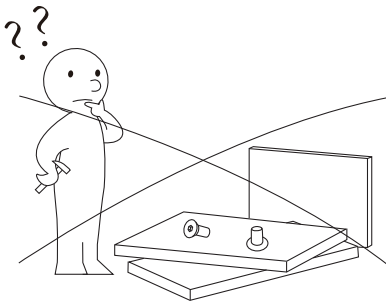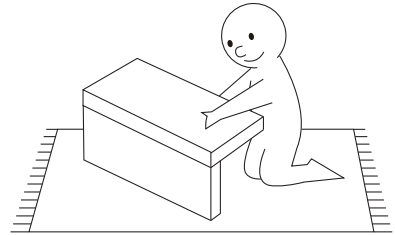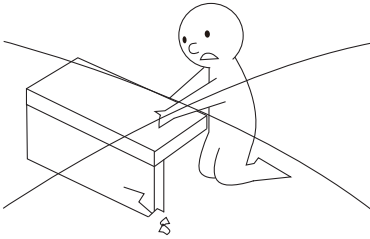


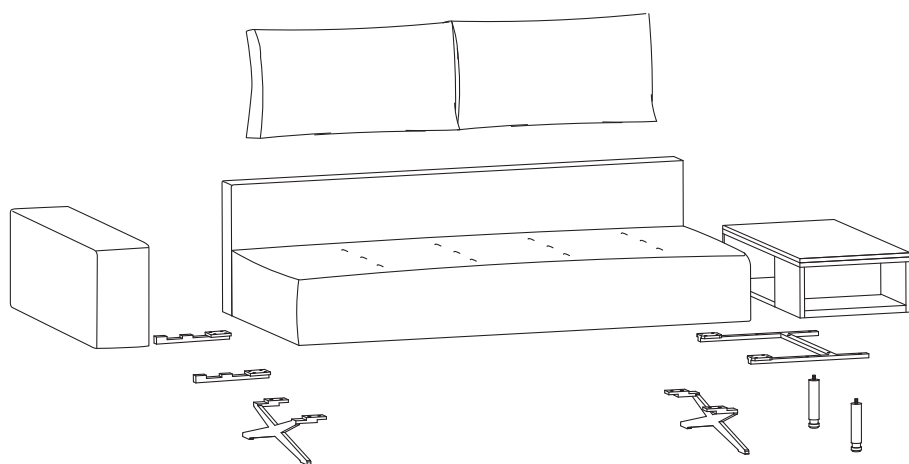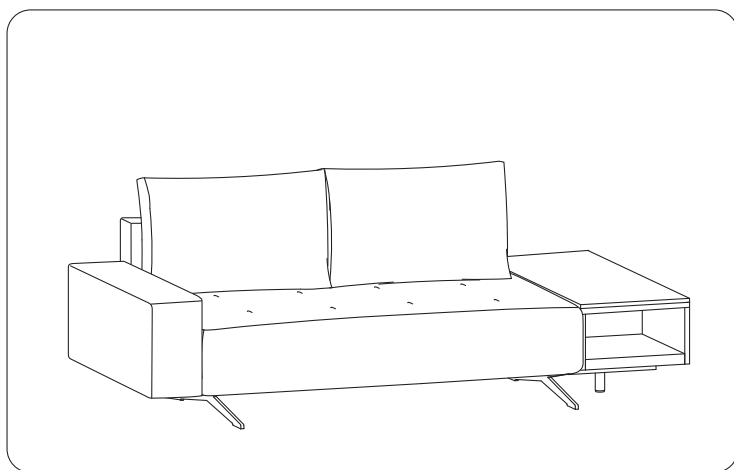

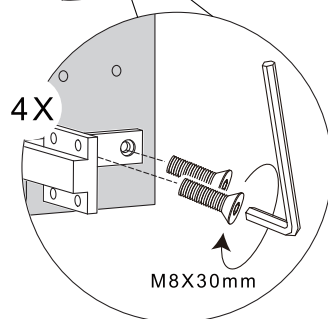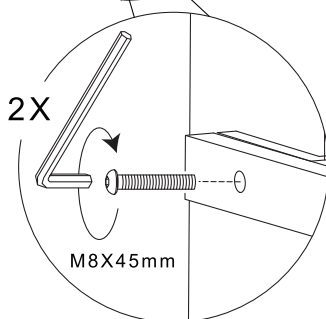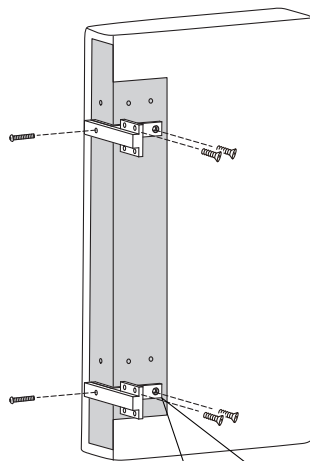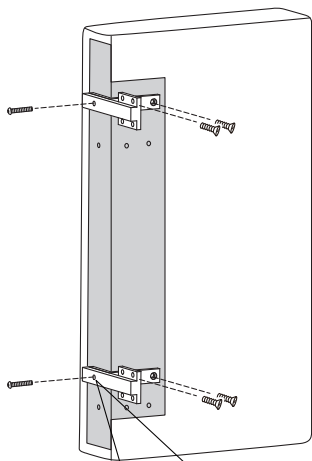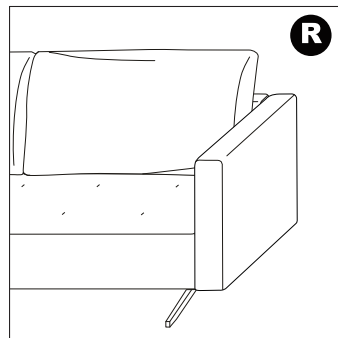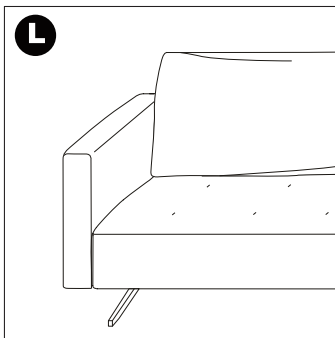

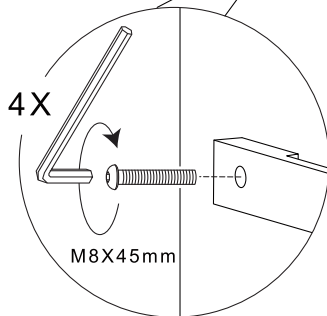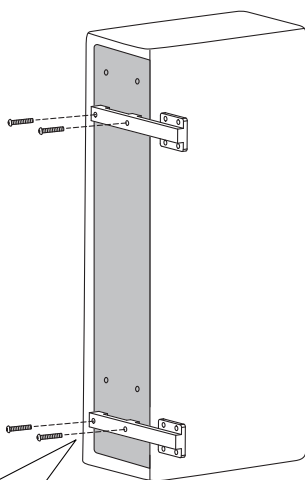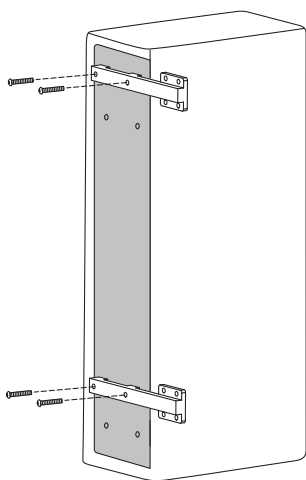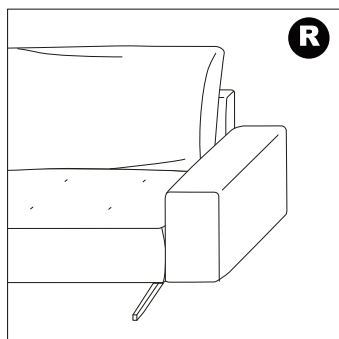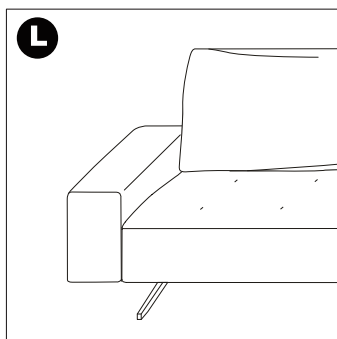

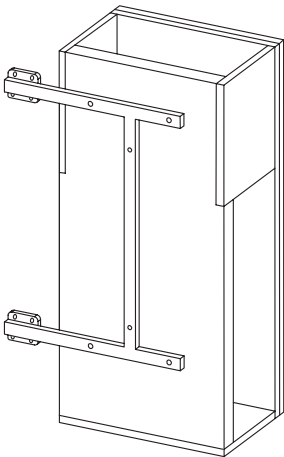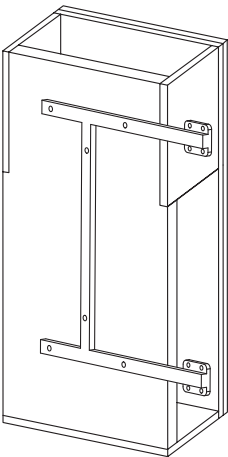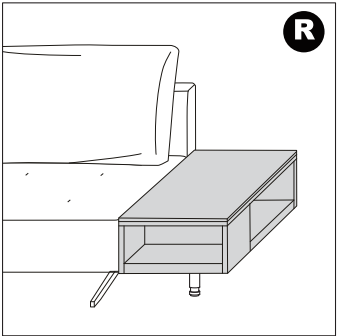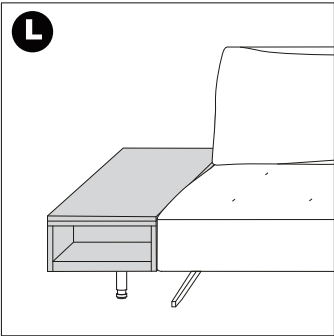









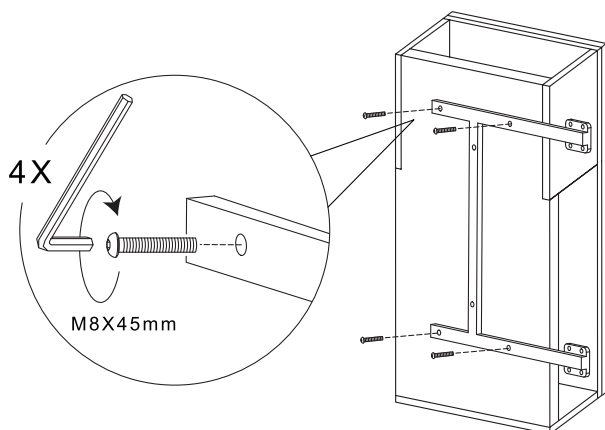




D35X110mm








2X

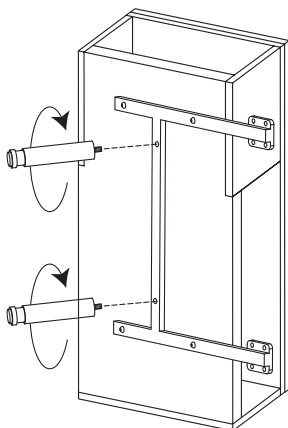


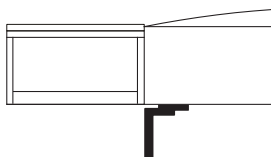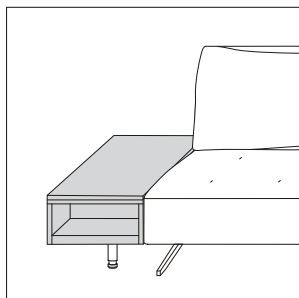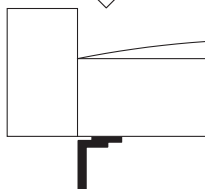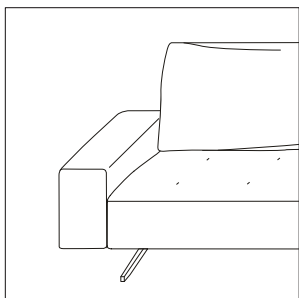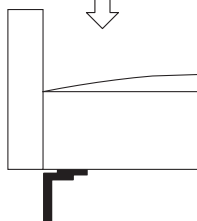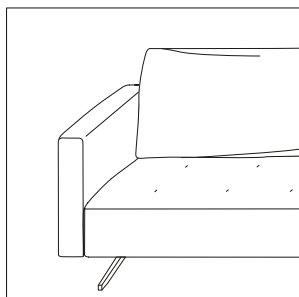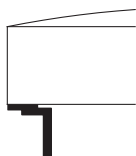
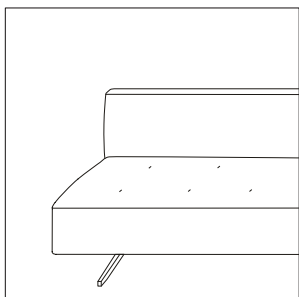


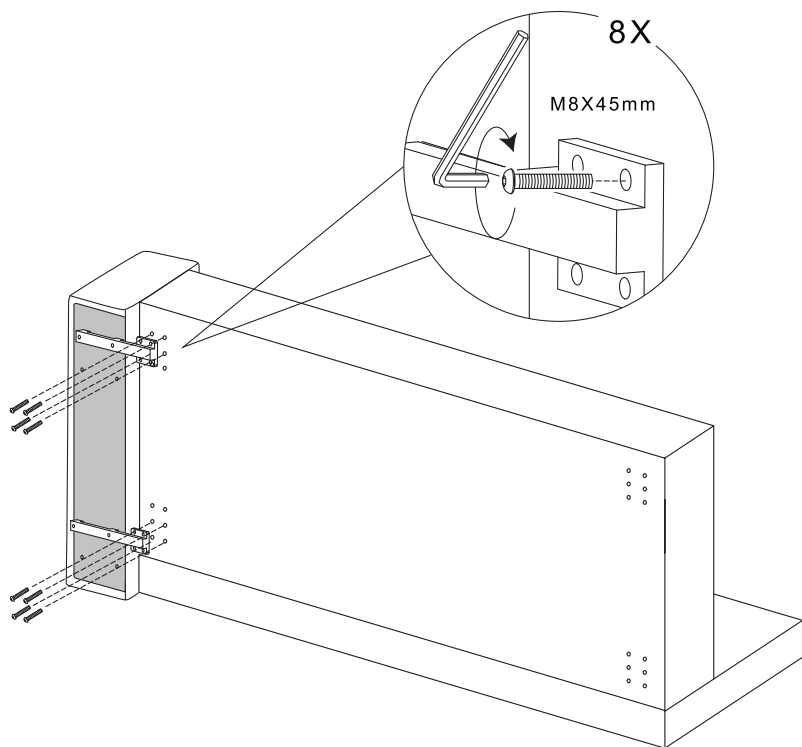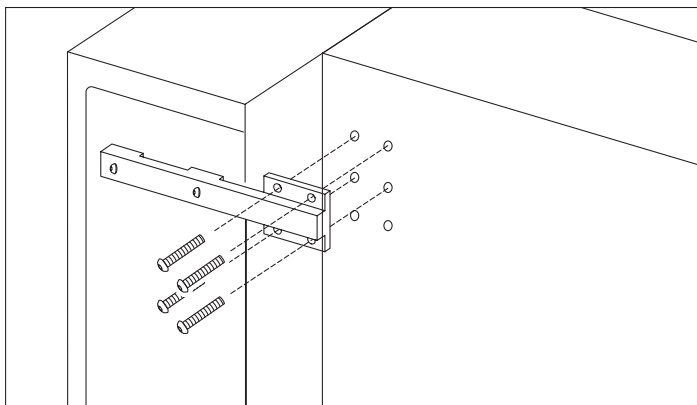

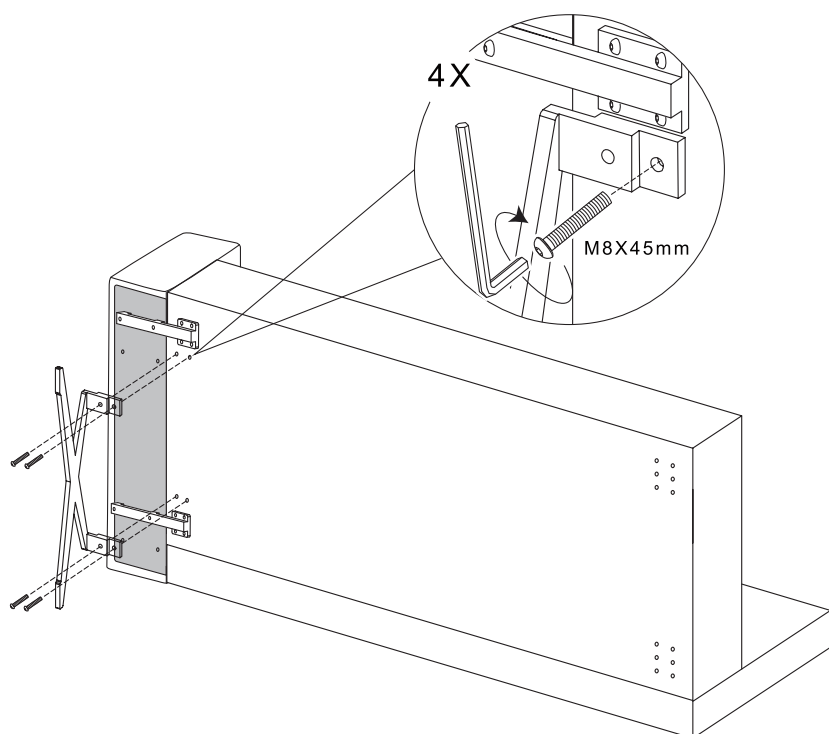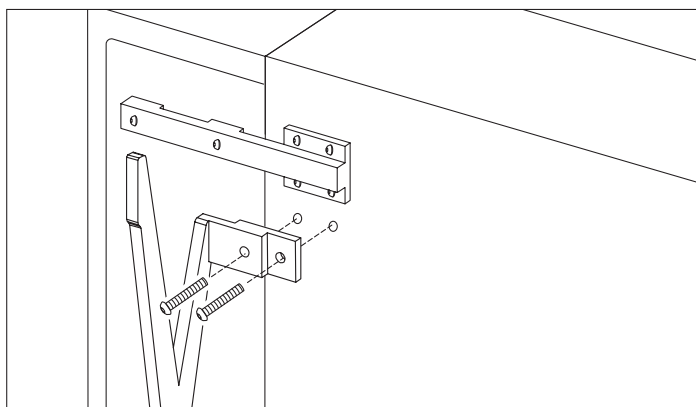

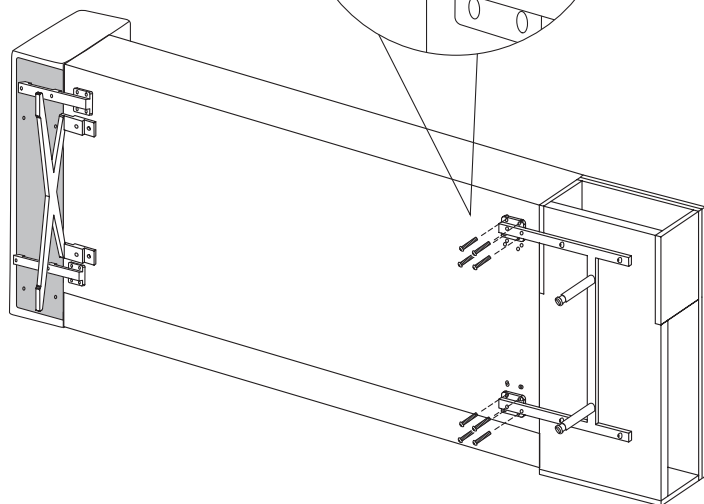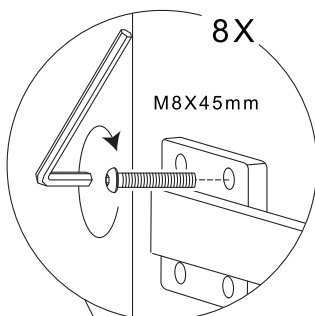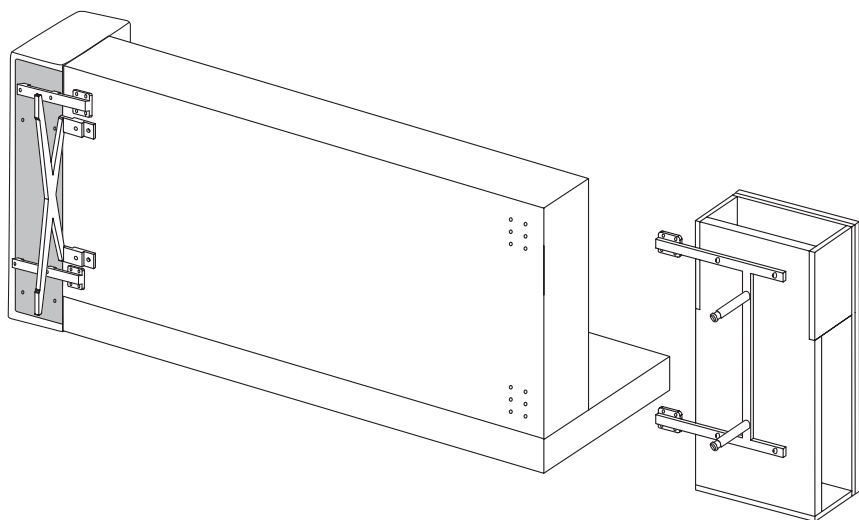

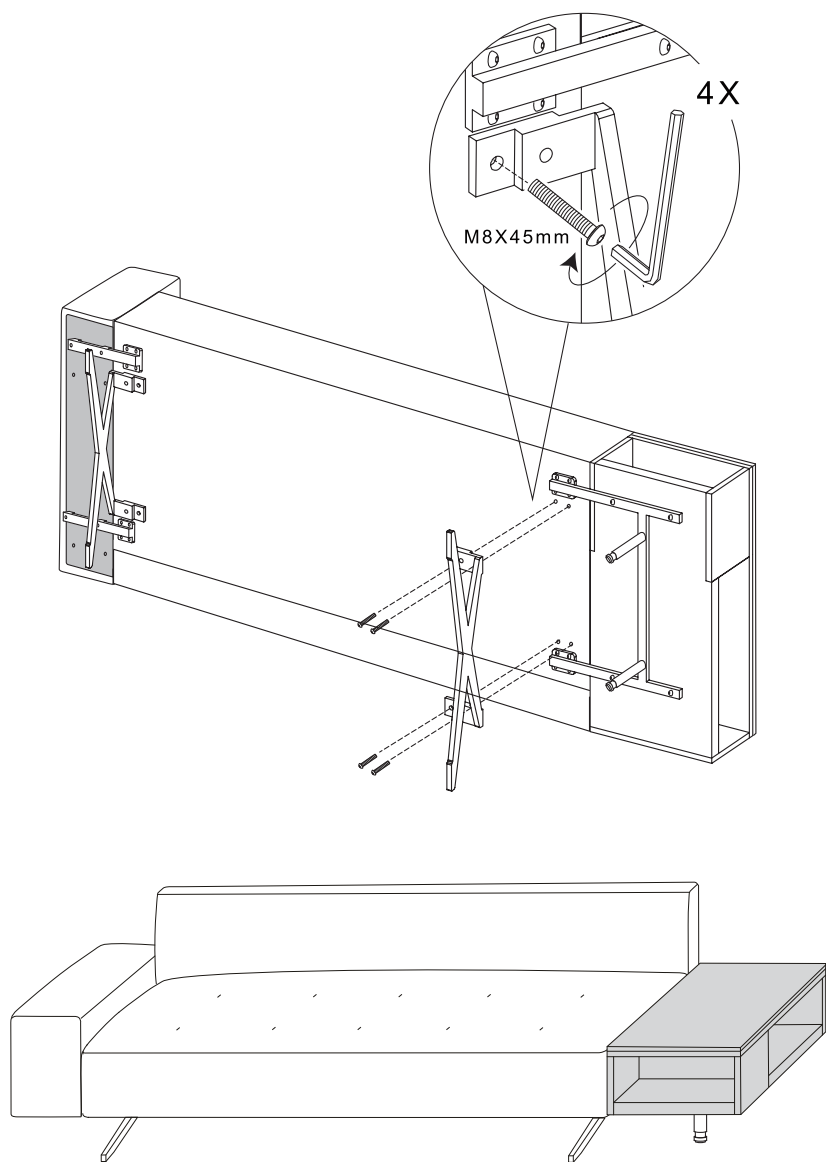

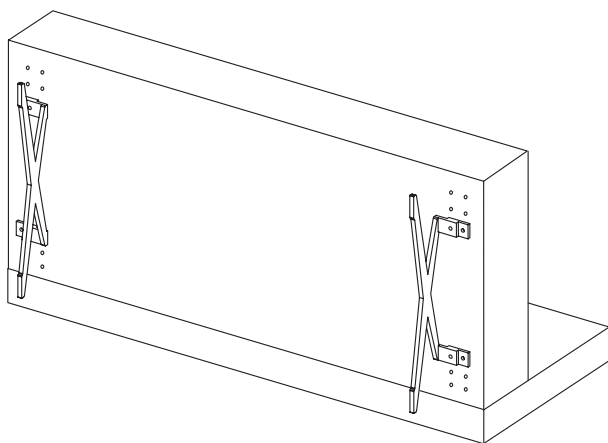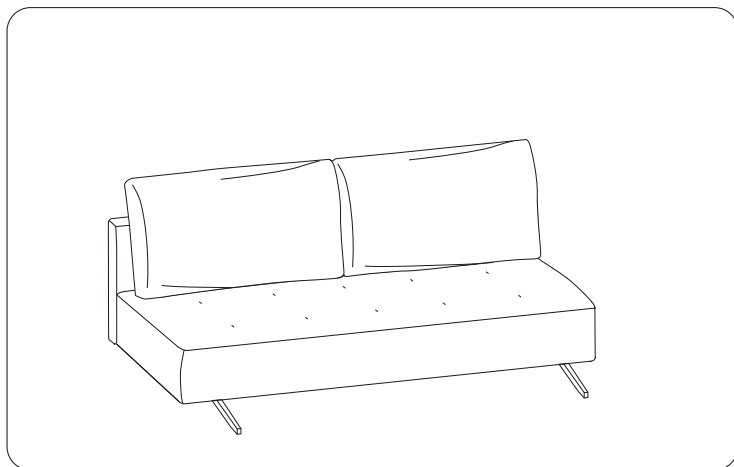



CAMERICHfurniture



camerich_official