


NATURE BED


C03E0701. / C03E0702. / C03E0703. / C03E0704. / C03E0705. / C03E0712.

Installation Instruction

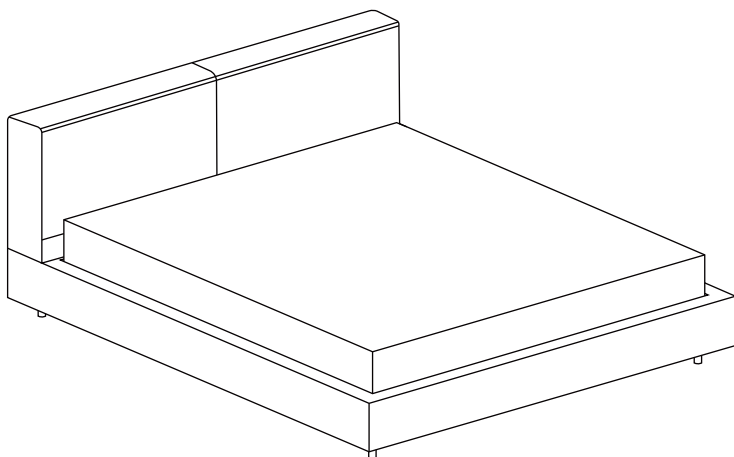


CAMERICH

M8X30



44X

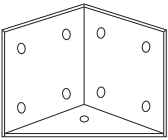

4X

D35X80mm









6X


D35X125mm









2X

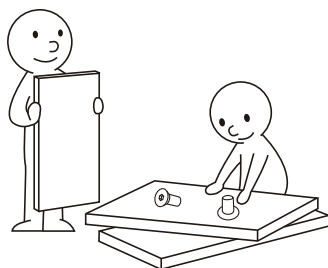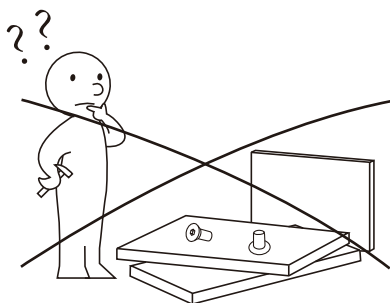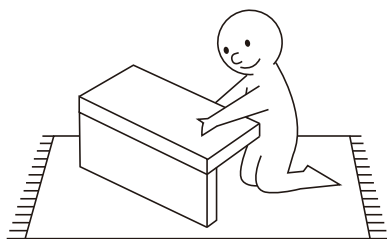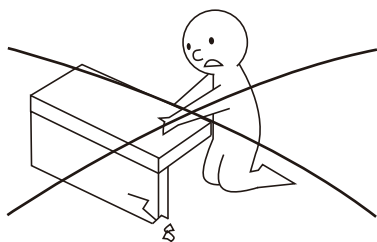
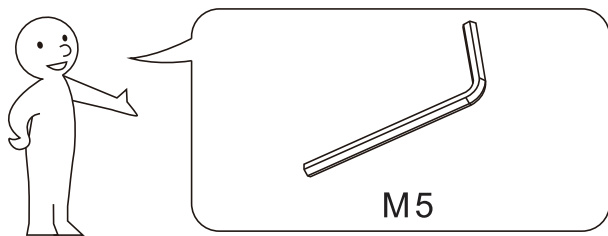


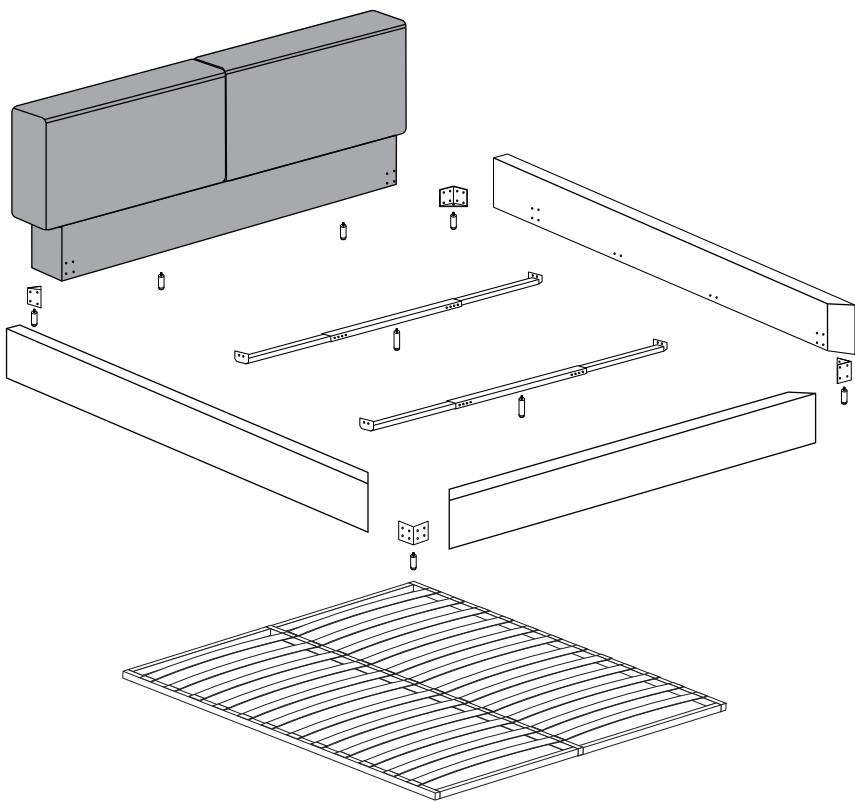



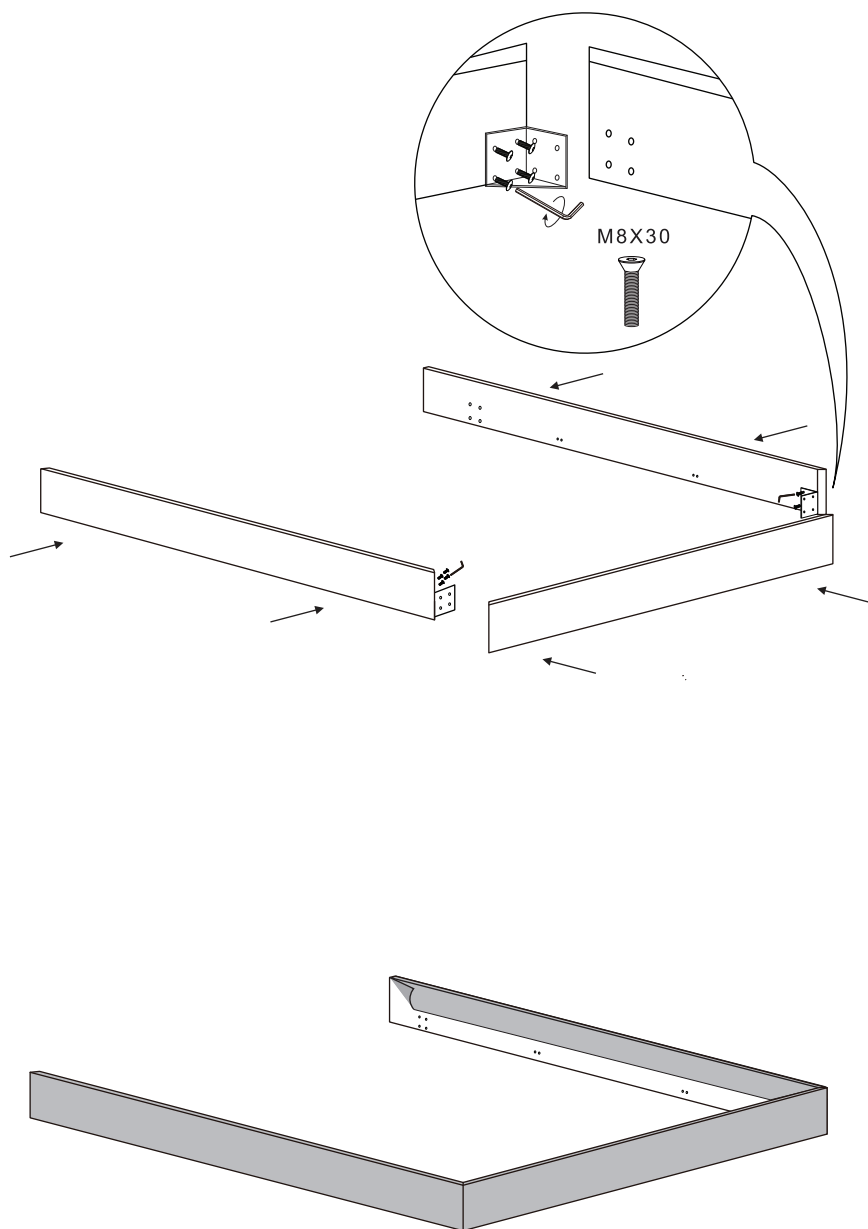


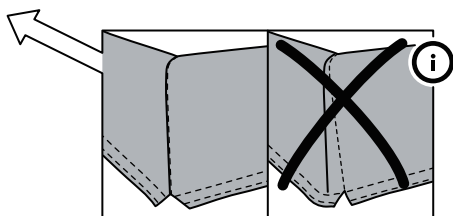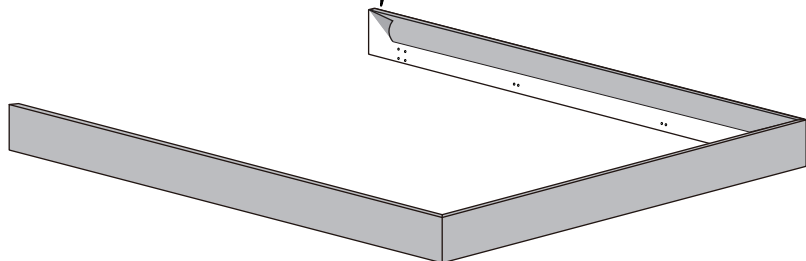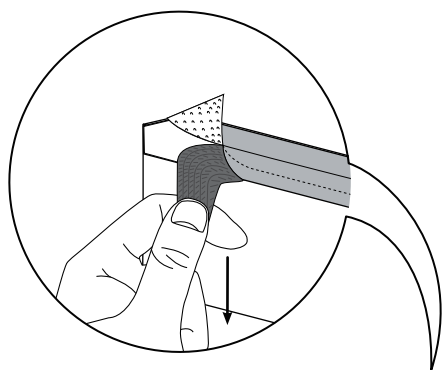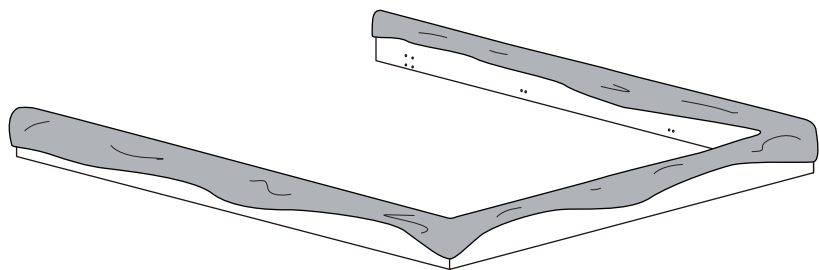

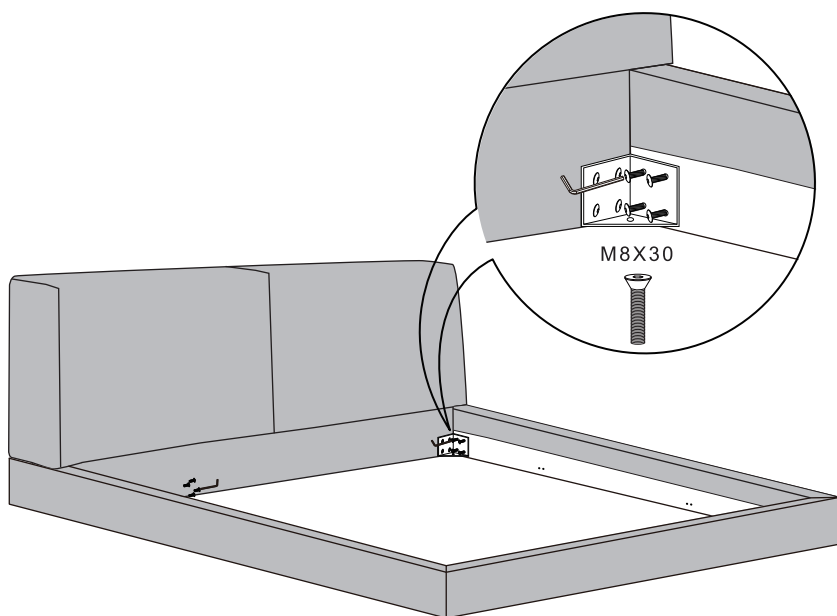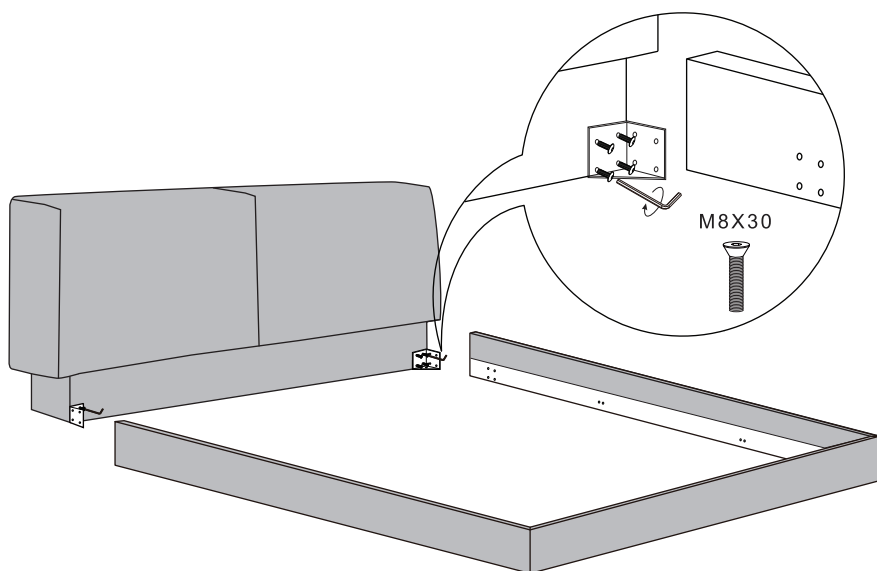

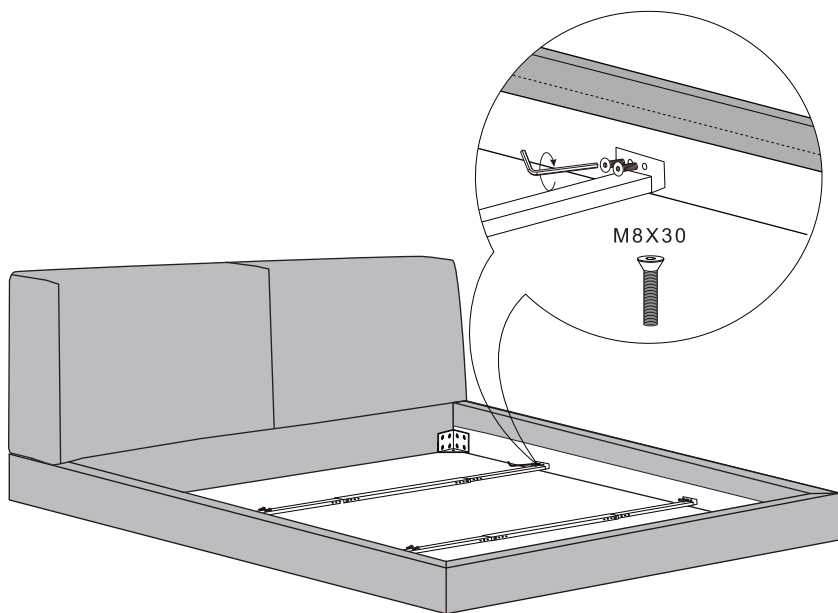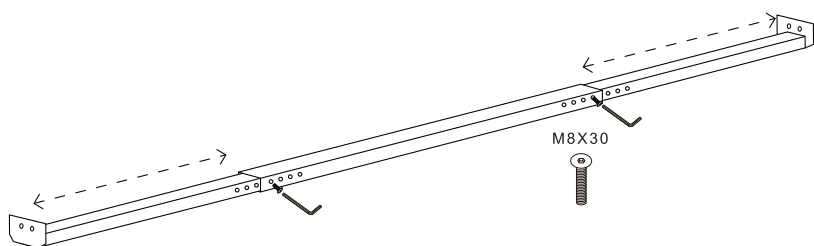

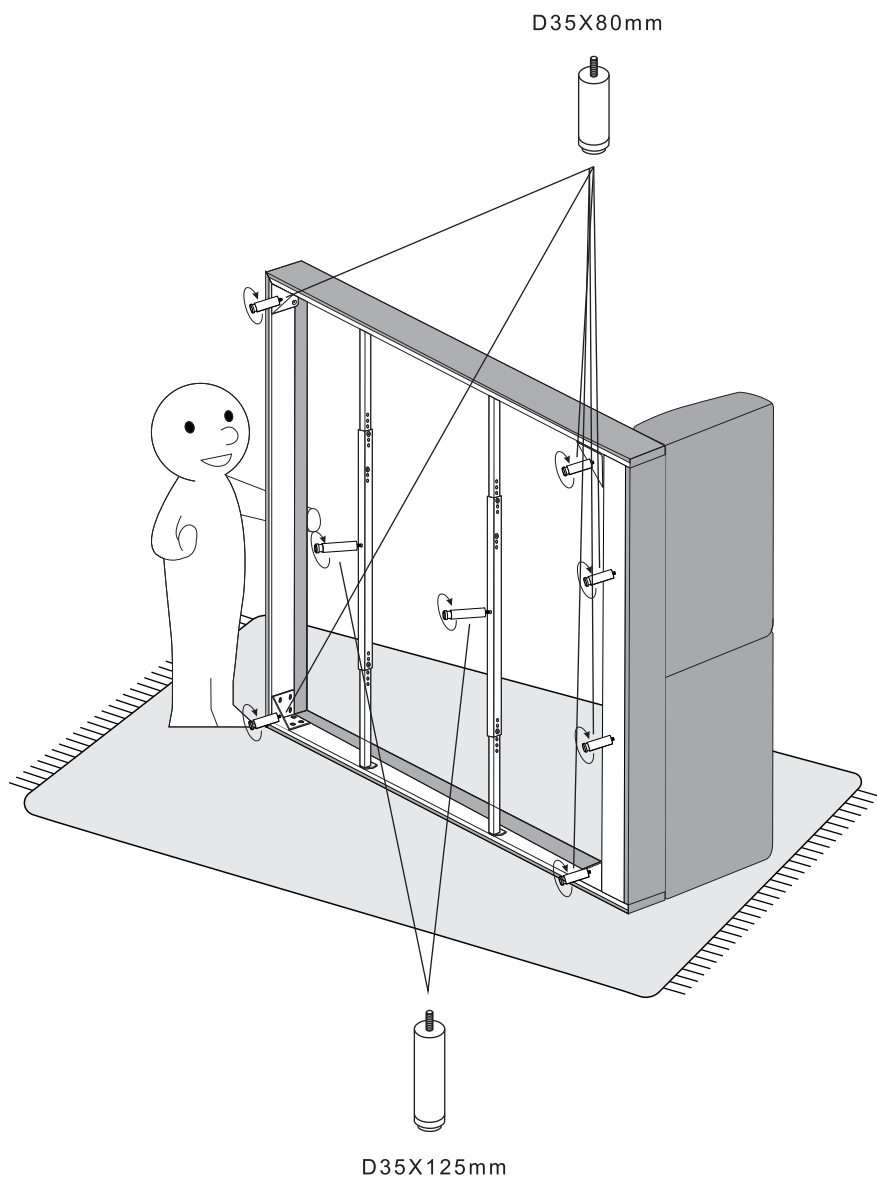

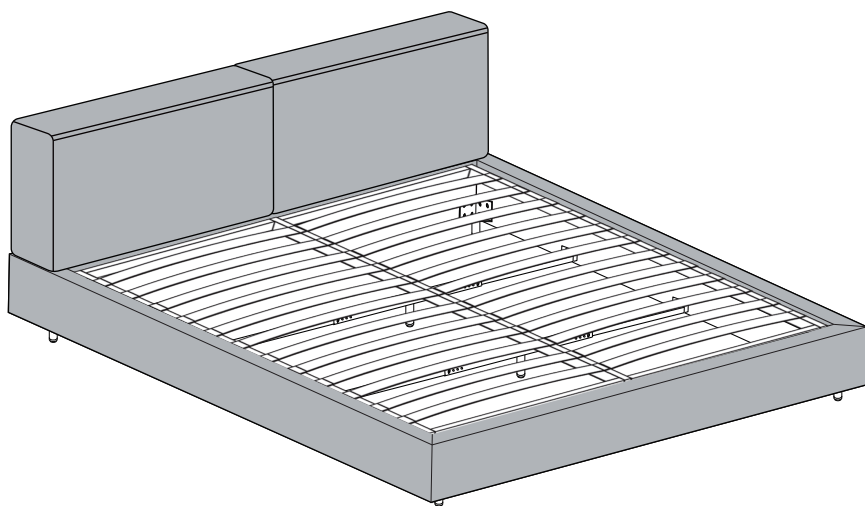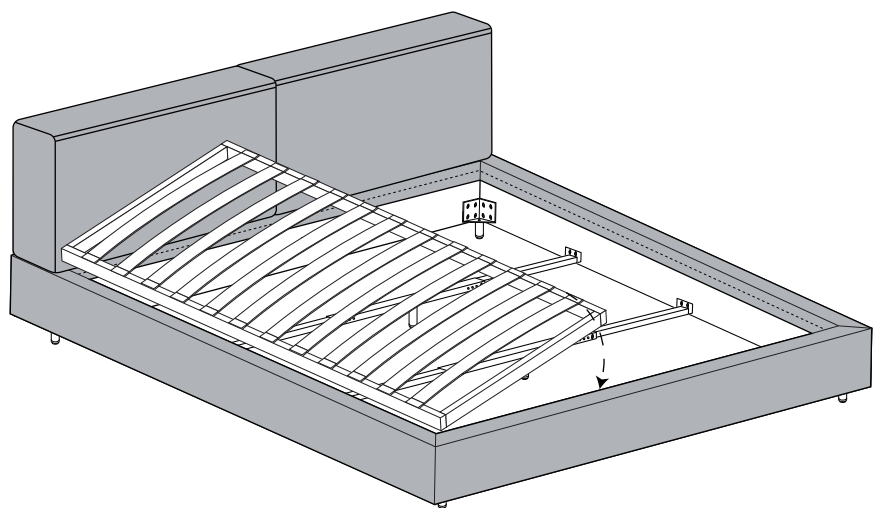



CAMERICHfurniture



camerich_official